

# SQ Dante Option Card

M-SQ-SDANTE is one of several audio networking options that can be fitted to an Allen & Heath SQ mixer. It provides a 64x64ch 48/96kHz interface to a Dante network.

## Fitting the card

1. Switch the system off.
2. Use a Torx T8 driver to remove the 2 screws securing the I/O Port blank panel to the SQ mixer.
3. Slide the card into the slot and press it firmly into the mating connector.
4. Refit the 2 screws to secure the card.

## Control Network Bridge

Go to the **Setup / Audio / I/O Port** screen to switch on Control Network Bridge. This connects the SQ Network Port and I/O Port control networks.

- ❗ The Control Network Bridge does not pass audio.
- ❗ Connecting to a network that includes a DHCP server (such as a router) can change the IP address of the Dante card. Therefore it is recommended that the network is only bridged when necessary.

## Software and firmware

Download and install the latest version of SQ firmware:

<http://www.allen-heath.com/sq-software>


- ❗ M-SQ-SDANTE requires SQ firmware V1.2.2 or above.

Go to the Audinate website to learn more about Dante, and to download software including Dante Controller and Dante Virtual Soundcard (DVS):

<http://www.audinate.com/>

## Front panel

**Dante ports**  
A built-in Gigabit switch with 2 locking EtherCon ports for redundant or switch mode operation

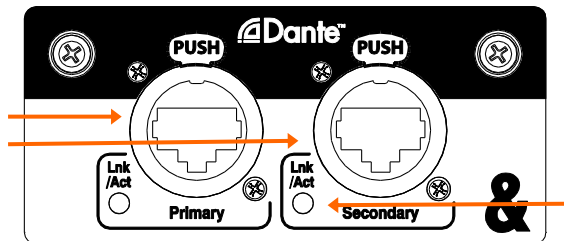

**Link Status**  
Flashes to indicate network activity

## Setting clock and patching signals

Use the SQ **I/O** screen to patch signals from or to the I/O Port.

Use the **Setup / Audio / Audio Sync** screen to select the clock source for the mixer. Typically, this is set to Internal, unless the mixer is syncing from the Dante card (clock slave), for example in a digital split setup.

- ① For more information on SQ setup and functions please refer to the SQ Firmware Reference Guide available for download from [www.allen-heath.com](http://www.allen-heath.com).

Use **Dante Controller** to patch signals to/from other devices, and configure the sample rate and clock settings for the card.

- ① If you set the mixer clock to Internal, select **Enable Sync To External**. To clock other Dante devices to this option card, select **Preferred Master**.

A limited one year manufacturer's warranty applies to this product, the conditions of which can be found at: [www.allen-heath.com/legal](http://www.allen-heath.com/legal).



This product complies with the European Electromagnetic Compatibility directive 2014/30/EU and the European Low Voltage directive 2014/35/EU.

Copyright © 2018 Allen & Heath. All rights reserved.

**ALLEN&HEATH**

Allen & Heath Limited, Kernick Industrial Estate, Penryn, Cornwall, TR10 9LU, UK

<http://www.allen-heath.com>