

# TASCAM

D01306120D


# SS-CDR250N

SOLID STATE / CD RECORDER

# SS-R250N

SOLID STATE RECORDER

## OWNER'S MANUAL

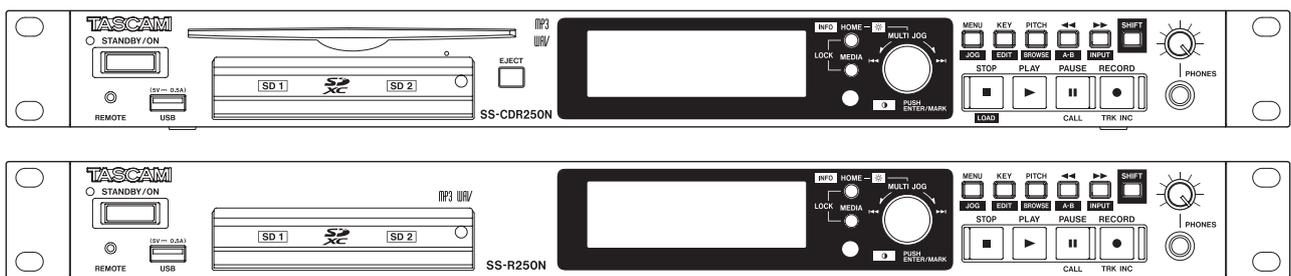

# IMPORTANT SAFETY PRECAUTIONS



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**IN USA/CANADA, USE ONLY ON 120 V SUPPLY.**

#### For Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.

#### For U.S.A.

#### Declaration of Conformity

Model Number: SS-CDR250N / SS-R250N

Trade Name: TASCAM

Responsible party: TEAC AMERICA, INC.

Address: 1834 Gage Road, Montebello, California, U.S.A.

Telephone number: 1-323-726-0303

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.



This product complies with the European Directives request and the other Commission Regulations.

#### CE Marking Information

EN55103-2

- Applicable electromagnetic environment: E1, E2, E3, E4
- The average half-cycle r.m.s. inrush current
  - On initial switch-on: 2.91 Arms
  - After a supply interruption of 5s: 0.15 Arms

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus draws nominal non-operating power from the AC outlet with its POWER or STANDBY/ON switch not in the ON position.
  - The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
  - Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
  - If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

## CAUTION

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.


## WARNING

- Products with Class I construction are equipped with a power supply cord that has a grounding plug. The cord of such a product must be plugged into an AC outlet that has a protective grounding connection.

## ■ RACK-MOUNTING THE UNIT

- Use the supplied rack-mounting kit to mount the unit in a standard 19-inch rack, as shown below.

Remove the feet of the unit before mounting.

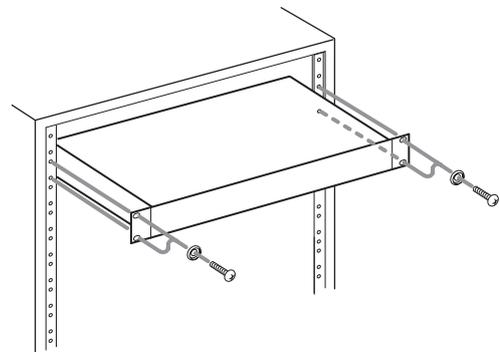

## CAUTION

- Leave 1U of space above the unit for ventilation.
- Allow at least 10 cm (4 in) at the rear of the unit for ventilation.

# Safety Information

## Laser information


This product contains a semiconductor laser system inside the cabinet and is classified as a "CLASS 1 LASER PRODUCT".

To prevent being exposed to the laser beam, do not try to open the enclosure.

## Notes on Laser Product (SS-CDR250N)

This product has been designed and manufactured according to FDA regulations "title 21, CFR, chapter 1, subchapter J, based on the Radiation Control for Health and Safety Act of 1968", and is classified as a class 1 laser product. There is no hazardous invisible laser radiation during operation because invisible laser radiation emitted inside of this product is completely confined in the protective housings.

The label required in this regulation is shown at ①.

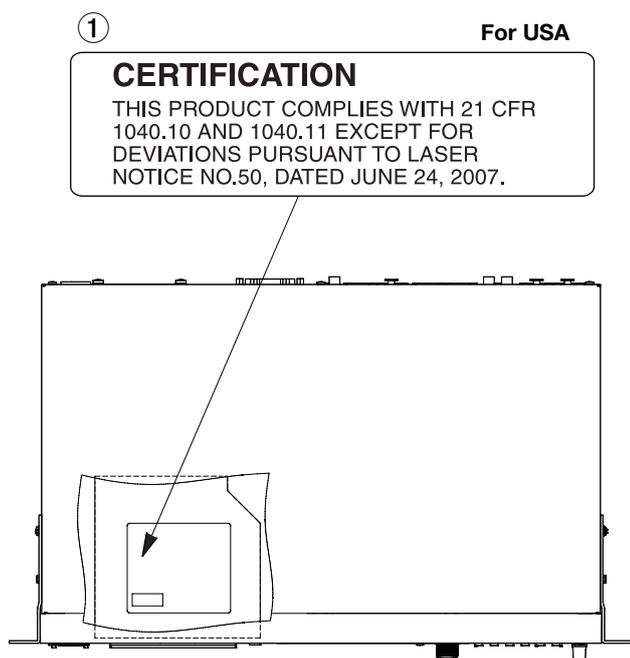

## CAUTION

- DO NOT REMOVE THE PROTECTIVE HOUSING USING A SCREWDRIVER.
- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

### Optical pickup

Type: LO-DWU01

Manufacturer: Lite-Space Technology Co., Ltd.

Laser output: Less than 93.1 mW on the objective lens (CD)  
Less than 90.3 mW on the objective lens (DVD)

Wavelength: 785 nm (CD) typ.  
661 nm (DVD) typ.

### Optical pickup

Type: LO-DWU02E

Manufacturer: Lite-Space Technology Co., Ltd.

Laser output: Less than 86.0 mW on the objective lens (CD)  
Less than 91.0 mW on the objective lens (DVD)

Wavelength: 785 nm (CD) typ.  
661 nm (DVD) typ.

## CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (+/-) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose batteries, isolate their terminals with insulation tape or something like that to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.
- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.
- The unit power should be off when you install and replace batteries.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.
- Do not disassemble a battery. The acid inside the battery could harm skin or clothing.

## ⚠ WARNING

### DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

followed by:

[The remote control supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## ■ For European Customers

### Disposal of electrical and electronic equipment and batteries and/or accumulators

- (a) All electrical/electronic equipment and waste batteries/accumulators should be disposed of separately from the municipal waste stream via collection facilities designated by the government or local authorities.
- (b) By disposing of electrical/electronic equipment and waste batteries/accumulators correctly, you will help save valuable resources and prevent any potential negative effects on human health and the environment.
- (c) Improper disposal of waste electrical/electronic equipment and batteries/accumulators can have serious effects on the environment and human health because of the presence of hazardous substances in the equipment.
- (d) The Waste Electrical and Electronic Equipment (WEEE) symbols, which show wheeled bins that have been crossed out, indicate that electrical/electronic equipment and batteries/accumulators must be collected and disposed of separately from household waste.
- If a battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) as defined in the Battery Directive (2006/66/EC), then the chemical symbols for those elements will be indicated beneath the WEEE symbol.
- (e) Return and collection systems are available to end users. For more detailed information about the disposal of old electrical/electronic equipment and waste batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the equipment.



Pb, Hg, Cd

## ■ For China

- “仅适用于海拔2000m以下地区安全使用”
- “仅适用于非热带气候条件下安全使用”
- “环境保护使用年限”

产品有毒有害物质或元素的名称及含量

机种: SS-CDR250N/ SS-R250N		有毒有害物质或元素					
	品名	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
1	CHASSIS部份	○	○	○	○	○	○
2	FRONT PANEL部份	○	○	○	○	○	○
3	螺丝部份	○	○	○	○	○	○
4	线材部份	○	○	○	○	○	○
5	PCB Assy部份	×	○	○	○	○	○
6	电源部份	○	○	○	○	○	○
7	附属品部份	×	○	○	○	○	○
8	LABEL部份	○	○	○	○	○	○
9	包装部份	○	○	○	○	○	○

- ：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T26572 标准规定的限量要求以下。
- ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572标准规定的限量要求。
- (针对现在代替技术困难的电子部品及合金中的铅)

# Contents

<b>IMPORTANT SAFETY PRECAUTIONS .....</b>	<b>2</b>	<b>4 – Playback .....</b>	<b>31</b>
<b>IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>3</b>	Files that can be played back .....	31
<b>1 – Introduction .....</b>	<b>9</b>	Tracks and files .....	31
Difference between the SS-CDR250N and SS-R250N .....	9	Playback area.....	31
Features.....	9	Setting the playback area.....	31
Items included with this product.....	9	Selecting the current folder or current playlist .....	31
Conventions used in this manual.....	9	Setting the play mode .....	32
Trademarks.....	10	Basic playback operations .....	32
Precautions for placement and use.....	10	Playing tracks.....	32
Notes about power supplies.....	10	Selecting tracks for playback.....	32
Beware of condensation .....	10	Skipping to earlier and later tracks.....	32
Cleaning the unit .....	10	Selecting tracks directly.....	32
SD cards and USB flash drives .....	11	Searching backward and forward.....	33
Precautions for use .....	11	Jog playback.....	33
SD card write protection.....	11	Program playback.....	33
Note about formatting.....	11	Setting the program.....	33
About compact discs.....	11	Using the pitch control function.....	34
Precautions for use .....	11	Using the key control function .....	34
About CD-R and CD-RW discs.....	11	Using the repeat playback function.....	35
Slot loading of discs.....	12	Ordinary repeat playback settings.....	35
Using the TEAC Global Site.....	12	A-B repeat playback settings .....	35
Product registration.....	12	Using the auto cue function .....	35
About TASCAM customer support service .....	12	Using the auto ready function .....	36
<b>2 – Names and Functions of Parts .....</b>	<b>13</b>	Using the incremental playback function.....	36
Front panel.....	13	Playing back in mono.....	36
Rear panel.....	15	Using the ducking function .....	37
PARALLEL connector overview .....	16	Using the EOM function .....	37
Wireless remote control (TASCAM RC-10).....	17	Setting the EOM tally output trigger .....	37
Home Screen .....	17	Using this function .....	37
Recording Screen.....	19	Using the resume function.....	38
Menu structure .....	20	Using the time skip function .....	38
Basic Menu Screen operations.....	22	Setting playback start timing .....	39
Menu operation procedures .....	22	Setting the sampling rate of output audio.....	39
<b>3 – Preparation.....</b>	<b>23</b>	Using the call function.....	39
Making connections .....	23	Setting the call function .....	39
Preparing the remote control.....	24	Using the link playback function .....	40
Installing the coin battery .....	24	Making connections for link playback.....	40
When to replace the battery .....	24	Making link playback settings .....	40
Battery precautions .....	24	Using the flash start function .....	40
Using the wireless remote control .....	24	<b>5 – Working with Folders and Files (BROWSE screen) .....</b>	<b>41</b>
Installing a Dante interface card		Opening the BROWSE screen .....	41
(sold separately) .....	25	Navigating the BROWSE screen.....	42
Turning the unit on and off.....	25	Icons on the BROWSE screen.....	42
Setting the built-in clock date and time.....	26	Folder operations.....	43
Adjusting the display.....	26	File operations .....	44
Adjusting the display and indicator brightness.....	26	Editing folder and file names .....	45
Adjusting the display contrast .....	26	Deleting folders and files .....	45
Inserting and removing SD cards .....	27	Undoing folder or file deletion (UNDO).....	46
Inserting SD cards .....	27	Assigning files to a playlist .....	46
Removing SD cards.....	27	Creating new folders .....	47
Using the security screw.....	27	Copying folders and files .....	47
SD card write-protection switches.....	28	Moving folders and files .....	48
Inserting and removing discs (SS-CDR250N only).....	28	<b>6 – Using the audio CD BROWSE screen</b>	
Inserting discs.....	28	<b>(SS-CDR250N only).....</b>	<b>49</b>
Ejecting discs .....	28	Opening the audio CD BROWSE screen .....	49
Force disc ejection .....	28	Selecting a track to play .....	49
Connecting and disconnecting USB flash drives .....	28	Editing CD-TEXT (CD-R/CD-RW discs only).....	49
Selecting media.....	29		
Preparing SD cards and USB flash drives for use.....	29		
Setting the lock function .....	30		
Opening the INFORMATION screen .....	30		

<b>7 – Editing Playlists (USB flash drives/SD cards only).....</b>	<b>50</b>	<b>10 – CD functions (SS-CDR250N only).....</b>	<b>73</b>
Playlist editing overview .....	50	Finalizing CD-R/CD-RW discs.....	73
Opening the playlist screen .....	50	Finalizing discs .....	73
Opening the playlist screen from the BROWSE screen.....	50	Unfinalizing CD-RW discs.....	73
Opening the current playlist screen from the		Erasing CD-RW discs.....	74
menu page .....	50	Erasing tracks .....	74
Assigning files to a playlist .....	50	Refreshing discs.....	74
Playlist menu operations .....	51	Copying files from USB flash drives and SD cards to	
Setting the current playlist.....	51	blank CDs with or without conversion.....	75
Editing playlist names .....	52	Creating audio CDs.....	75
Saving the current playlist with a different name .....	52	Creating data CDs .....	76
Deleting playlists.....	52	Copying files from CDs to USB flash drives and SD cards	
Creating new playlists .....	53	with or without conversion.....	78
Playlist entry menu operations.....	53	Converting and copying audio CD tracks .....	78
Assigning files to playlists .....	54	Copying files on a data CD.....	79
Clearing file assignments from playlists .....	54	<b>11 – Timer Event Functions</b>	
RC-SS150 MODE playlist assignment screen .....	55	<b>(USB flash drives and SD cards only).....</b>	<b>81</b>
<b>8 – Recording .....</b>	<b>56</b>	Turning the timer event function on/off.....	81
Unexpected power interruptions .....	56	Opening the timer event list screen .....	81
Selecting the input source .....	56	Timer event bliss menu operations.....	82
Input source display.....	57	Editing timer events.....	82
Setting left/right channel inputs separately.....	57	Setting the event type.....	83
Setting mic/line input sensitivity .....	58	Selecting files for playback.....	83
Adjusting input signal levels .....	58	Specifying files for playback.....	83
Setting phantom power.....	59	Selecting the input to use when recording.....	84
Setting automatic gain control for mic inputs.....	59	Setting folders/files to use for FTP server download .....	84
Using the dynamics function .....	60	Selecting files/folders for download	
Setting the low-cut filter .....	60	by inputting path names.....	84
Setting the recording file format.....	61	Setting execution schedules for timer events .....	84
Making recording format settings .....	61	Setting days for timer event execution .....	85
Setting the second medium		Setting dates for timer event execution .....	85
for backup and relay recording.....	62	Setting times for timer event execution .....	85
WAV file settings .....	62	Setting what happens at the time set for the	
MP3 file bit rate setting.....	62	playback timer event .....	85
Setting the recording file type .....	62	Setting the frequency intervals of events that repeat .....	85
Monitoring input signals.....	63	Setting the number of event repetitions.....	85
Basic recording operations.....	63	Creating new timer events .....	86
Setting the file name format.....	63	Deleting timer events.....	86
Editing text .....	64	Deleting all timer events.....	86
Applying dithering to recording .....	64	<b>12 – Mark and Locate Functions.....</b>	<b>87</b>
Using the sampling rate converter.....	64	Mark functions (USB flash drives and SD cards only).....	87
Setting the pause mode.....	65	Adding marks .....	87
Skipping recording standby before recording		Using marks.....	87
(direct recording).....	65	Moving to marks.....	88
Recording a few seconds in advance (pre-recording).....	65	Editing mark names .....	88
Using the synchronized recording function .....	65	Deleting marks.....	88
Synchronized recording settings.....	65	Deleting all marks in the current file.....	88
Sync recording operation overview .....	66	Editing mark locations.....	88
Incrementing track numbers during recording.....	66	Viewing mark information .....	88
Incrementing track numbers manually.....	66	Locating to a specific time.....	89
Incrementing track numbers automatically.....	67	Locating before completely specifying the time.....	89
Adding marks manually when recording .....	68	<b>13 – Network Functions .....</b>	<b>90</b>
Adding marks when recording.....	68	Network function settings.....	90
Adding marks automatically when recording.....	68	FTP client function settings .....	91
Recording duration .....	69	Selecting folders to use by inputting path names.....	92
<b>9 – Using the Edit Menu</b>		FTP server functions .....	92
<b>(USB flash drives and SD cards only .....</b>	<b>70</b>	Remote control.....	93
Edit menu operations.....	70	Setting the SNTP function .....	94
Deleting tracks (DELETE).....	70		
Dividing tracks (DIVIDE).....	71		
Combining tracks (COMBINE).....	72		
Undoing edit menu operations (UNDO) .....	72		

# Contents

<b>14 – Other Settings, Information Screens and</b>	
<b>Keyboard Operations .....</b>	<b>96</b>
Power on action function setting .....	96
Adjusting the analog output .....	96
Setting the remote power control function .....	96
Setting the reference level .....	96
Using a USB keyboard to operate the unit .....	97
Setting the keyboard type .....	97
Using the keyboard to input names and values .....	97
List of keyboard operations .....	97
Viewing media information .....	99
Rebuilding media .....	99
Restoring factory default settings .....	99
Saving and loading user settings .....	99
Saving user settings .....	99
Loading user settings .....	99
Exporting/importing system backup data (USB flash drives and SD cards only) .....	100
Checking the firmware version .....	101
Firmware update procedures (USB flash drives and SD cards only) .....	101
<b>15 – Using the Remote Control Connectors .....</b>	<b>102</b>
Using the RS-232C connector .....	102
Using a footswitch (TASCAM RC-3F) .....	102
Setting up the footswitch .....	102
Using the footswitch .....	102
Setting the Record Tally .....	102
<b>16 – Messages .....</b>	<b>103</b>
<b>17 – Troubleshooting .....</b>	<b>106</b>
<b>18 – Specifications .....</b>	<b>107</b>
General .....	107
Input and output .....	107
Analog audio input and output ratings .....	107
Digital audio input/output ratings .....	107
Control input/output .....	108
Audio performance .....	108
Other .....	108
Dimensional drawings .....	109
Block diagrams .....	110

Thank you very much for purchasing a TASCAM SS-CDR250N Solid State/CD Recorder or SS-R250N Solid State Recorder. Before using this unit, read this Owner's Manual carefully so that you will be able to use it correctly and enjoy working with it for many years. After you have finished reading this manual, please keep it in a safe place for future reference. You can also download this Owner's Manual from the TEAC Global Site (<https://teac-global.com/>).

## Difference between the SS-CDR250N and SS-R250N

The SS-CDR250N has a CD drive in addition to all the features of the SS-R250N.

## Features

- FTP client/server functions enable the uploading and downloading of recording/playback files
- Event list functions allow recording, playback, downloading and other operations to be conducted automatically at set times
- Time synchronization using the SNTP client function enables even more accurate event execution
- Automatic uploading function for recording data
- Control applications for iOS and Android enable remote control of the transport, browsing and various settings
- SD cards (including SDXC cards up to 128 GB), USB flash drives and CDs (SS-CDR250N only) supported
- Dual slots for SD cards enable backup recording and relay recording
- Dual format recording allows simultaneous recording of both WAV and MP3 files
- Automatic file closing process prevents the loss of recorded data even during sudden power outages
- Link playback function enables simultaneous operation of two units
- Built-in inputs and outputs include analog XLR and RCA and digital AES/EBU and S/PDIF
- Mic input supported and phantom power can be supplied
- RS-232C serial and 25-pin D-sub parallel connectors built-in
- IF-DA2 interface card for two-channel Dante input and output can be installed (sold separately)
- TASCAM RC-SS150 flash start remote control unit supported (sold separately)
- As the successor model to the SS-R200 and SS-CDR200, this unit includes their diverse playback and recording functions

## Items included with this product

This product includes the following items.

Take care when opening the package to avoid damaging the items. Keep the packing materials for transportation in the future. Please contact the store where you purchased this unit if any of these items are missing or have been damaged during transportation.

- Main unit .....× 1
- Power cord.....× 1
- Wireless remote control (TASCAM RC-10) .....× 1
- Lithium coin battery (CR2025) for remote control (already installed) .....× 1
- Rackmount screw kit.....× 1
- Security screw kit .....× 1
- Owner's Manual (this document) including warranty.....× 1

## Conventions used in this manual

In this manual, we use the following conventions:

- Items that are only supported by the SS-CDR250N are marked "(SS-CDR250N only)".
- The illustrations of the front panel in this manual are of the SS-CDR250N. The SS-R250N might appear different in some cases.
- When we refer to buttons, connectors and other parts of this unit, we use a bold font like this: **MENU [JOG]** button.
- When we show characters that appear on the display, the typeface looks like this: **PLAY AREA**.
- "SD card" indicates SD, SDHC and SDXC memory cards.
- "USB flash drives" are sometimes called "USB drives".
- CD-DA format discs are sometimes called "audio CDs". An audio disc containing tracks recorded in audio CD format is sometimes referred to as an "audio CD".
- A CD with MP3 and WAV files on it is called a "data CD".
- A CD-R/CD-RW disc that has not been used yet is called a "blank CD".
- The medium that is currently selected is called the "current medium".
- The folder that is currently selected is called the "current folder".
- The playlist that is currently selected is called the "current playlist".
- As necessary, additional information is provided under TIP, NOTE and CAUTION headings.

### TIP

These are tips about how to use the unit.

### NOTE

These provide additional explanations and describe special cases.

### CAUTION

Failure to follow these instructions could result in injury, damage to equipment or lost recording data, for example.

# 1 – Introduction

## Trademarks

- TASCAM is a registered trademark of TEAC Corporation.
- SDXC Logo is a trademark of SD-3C, LLC.



- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
- Supply of this product does not convey a license nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.



**Fraunhofer** Institut  
Integrierte Schaltungen

- SMARTMIXER™ is a trademark or registered trademark of Audio-Technica Corporation.
- Other company names, product names and logos in this document are the trademarks or registered trademarks of their respective owners.

**Information is given about products in this manual only for the purpose of example and does not indicate any guarantees against infringements of third-party intellectual property rights and other rights related to them. TEAC Corporation will bear no responsibility for infringements on third-party intellectual property rights or their occurrence because of the use of these products.**

**With the exception of personal enjoyment and similar uses, copyrighted materials belonging to third parties cannot be used without permission from the rights holders in accordance with copyright law. Please use the equipment appropriately. TEAC Corporation will bear no responsibility for rights infringements committed by users of this product.**

## Precautions for placement and use

- The operating temperature range of this unit is 5–35 °C.
- Do not install this unit in the following types of locations. Doing so could make the sound quality worse or cause malfunction.
  - Locations with frequent vibrations
  - Near windows or other places exposed to direct sunlight
  - Near heaters or other extremely hot places
  - Extremely cold places
  - Very humid or poorly ventilated places
  - Very dusty places
- Make sure that the unit is mounted in a level position for correct operation.
- To enable good heat dissipation, do not place anything on top of the unit.
- Do not place this unit on top of a power amplifier or other device that generates heat.

## Notes about power supplies

- Insert the included power cord all the way into the AC IN connector.
- Do not connect a power supply other than one that is AC100V - 240V (50-60Hz).
- Hold the power cord by its plug when connecting or disconnecting it.

## Beware of condensation

Condensation could occur if the unit is moved from a cold place to a warm place, it is used immediately after a cold room has been heated or it is otherwise exposed to a sudden temperature change. To prevent this, or if this occurs, let the unit sit for one or two hours at the new room temperature before using it.

## Cleaning the unit

Use a dry soft cloth to wipe the unit clean. Do not wipe with chemical cleaning cloths, thinner, alcohol or other chemical agents. Doing so could damage the surface or cause discoloration.

## SD cards and USB flash drives

This unit uses SD cards and USB flash drives for recording and playback.

A list of SD cards and USB flash drives that have been confirmed for use with this unit can be found on our web site. Please access to a product page of this product from the TEAC Global Site (<https://teac-global.com>) to find the list or contact the TASCAM customer support service.

### Precautions for use

SD cards and USB flash drives are delicate media. In order to avoid damaging SD cards and USB flash drives, please take the following precautions when handling them.

- Do not leave them in extremely hot or cold places.
- Do not leave them in extremely humid places.
- Do not let them get wet.
- Do not put things on top of them or twist them.
- Do not hit them.
- Do not remove or insert them during recording, playback, data transmission or other access.
- When transporting them, put them into cases, for example.

### SD card write protection

This unit writes track information to the media in order to improve operation performance. Since track information cannot be written to SD cards that are write-protected, the amount of time needed to read media will become longer, for example.

### Note about formatting

SD cards and USB flash drives formatted by this unit are optimized to improve performance during recording. Use this unit to format the SD cards and USB flash drives to be used with it. Errors might occur when recording with this unit using an SD card or USB flash drive formatted by a computer or other device.

## About compact discs

In addition to commercially-available music CDs, this unit can play CD-R and CD-RW discs that have been recorded in audio CD (CD-DA) format, as well as CD-R and CD-RW discs that have MP3 and WAV audio files recorded on them.

### CAUTION

8cm CDs cannot be used with this unit. If an 8cm CD is loaded, it will be automatically ejected. If it stops ejecting before it can be removed, press the **EJECT** button.

### Precautions for use

- For recording, use compact discs that have one of the following marks.

 
#### CD-R



#### CD-RW



- Always insert the compact discs in the slot with their label facing upward.
- To remove a disc from its case, press down on the center of the disc holder, then lift the disc out, holding it carefully by the edges.
- Do not touch the signal side (the unlabeled side). Fingerprints, oils and other substances can cause errors during playback.
- To clean the signal side of a disc, wipe gently with a soft dry cloth from the center towards the outside edge. Dirt on discs can lower the sound quality, so clean them and always store them in a clean state.
- Do not use any record spray, anti-static solutions, benzene, paint thinner or other chemical agents to clean CDs as they could damage the delicate playing surface. It may cause CDs to become unplayable.
- Do not apply labels or other materials to discs. Do not use discs that have had tape, stickers or other materials applied to their surface. Do not use discs that have sticky residue from stickers, etc. Such discs could become stuck in the unit or cause it to malfunction.
- Never use a commercially available CD stabilizer. Using stabilizers with this player will damage the mechanism and cause it to malfunction.
- Do not use cracked discs.
- Only use circular compact discs. Avoid using non-circular promotional, etc. discs.



- Music discs with copy control, a copy-protection system, have been released from several record companies in an attempt to protect the copyright. Since some of these discs do not comply with the CD specifications, they may not be playable on the unit.
- If you are in any doubt as to the care and handling of a CD-R and CD-RW discs, read the precautions supplied with the disc, or contact the disc manufacturer directly.

### About CD-R and CD-RW discs

CD-R discs can be recorded once only. Once they have been used for recording, they cannot be erased or re-recorded. However, if space is available on the disc, additional material can be recorded. By finalizing a CD-R that you have finished using for recording, you can make it playable by most ordinary CD players. (Some CD players might not be able to play back CD-R discs even if they are finalized.)


CD-RW discs allow recorded tracks to be erased to make space available again, allowing disc reuse. However, tracks can only be erased in the order from the last added. To erase a track in the middle, you must erase all the tracks added after it at the same time. Finalized CD-RW discs can only be played back in CD players that support CD-RW disc playback.

# 1 – Introduction

---

## Slot loading of discs

---

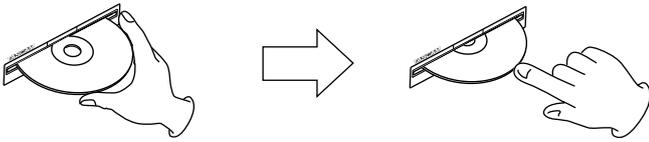

1. As shown in the illustration, hold the disc with the labeled side up and insert it part way into the slot.
2. Push the disc in a little further and it will be pulled in automatically just before it disappears into the slot.

### Trouble inserting a disc

If the disc becomes stuck during insertion, for example, and is difficult to push, do not try to force the disc in. Pull the disc out once and press the **EJECT** button and then try inserting it again. (Trying to force the disc in could damage the unit.)

---

## Using the TEAC Global Site

---

You can download updates for this unit from the TEAC Global Site:

<https://teac-global.com/>

In the TASCAM Downloads section, select the desired language to open the Downloads website page for that language.

---

## Product registration

---

Customers in the USA, please visit the following TASCAM website to register your TASCAM product online.

<https://tascam.com/>

---

## About TASCAM customer support service

---

TASCAM products are supported and warrantied only in their country/region of purchase.


To receive support after purchase, on the TASCAM Distributors list page of the TEAC Global Site (<https://teac-global.com/>), search for the local company or representative for the region where you purchased the product and contact that organization.

When making inquiries, the address (URL) of the shop or web shop where it was purchased and the purchase date are required. Moreover, the warranty card and proof of purchase might also be necessary.


# 2 – Names and Functions of Parts

## Front panel

### SS-CDR250N

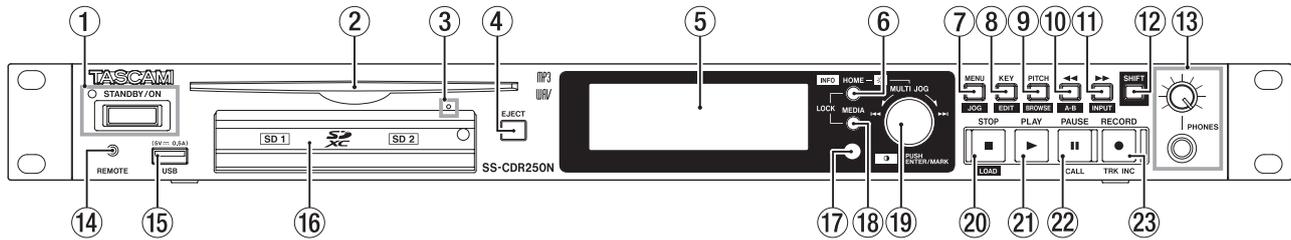

### SS-R250N

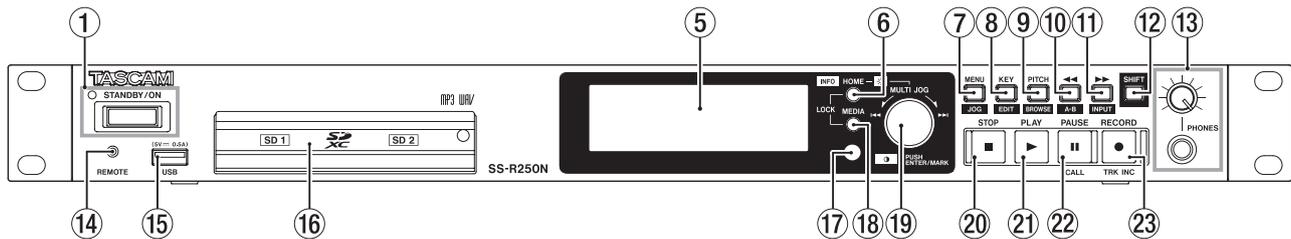

#### ① STANDBY/ON button and indicator

Press this button to turn the unit on and off (standby). The **STANDBY/ON** indicator lights when the unit is off.

#### CAUTION

Before turning the unit on, lower the volumes of connected equipment to their minimum levels. Failure to do so could result in a sudden loud noise that could harm hearing, for example.

#### NOTE

When the power is on, press and hold this button for about nine seconds or more to force the unit to restart. Do not do this when the unit is operating (including recording, playing back, or writing data to an SD card, USB flash drive or CD). Doing so could cause proper recording to fail and recorded data to be lost.

#### ② Disc insertion slot (SS-CDR250N only)

Insert CDs here. After a disc is inserted part way, it will automatically be pulled in.

#### ③ Disc force ejection (emergency) hole (SS-CDR250N only)

If pressing the **EJECT** button does not eject the disc because the CD drive is not functioning, for example, use this to force the disc to eject. (See "Force disc ejection" on page 28.)

#### CAUTION

Only use this in an emergency. Turn the unit off (put it in standby) before using it.

#### ④ EJECT button (SS-CDR250N only)

Press this button to eject the disc.

#### ⑤ Display

This shows a variety of information.

#### ⑥ HOME [INFO] button

- When a Menu or BROWSE screen is open, press this button to return to the Home Screen.

- When the Home Screen is open, press this button to change the Home Screen display mode. (See "Home Screen" on page 17.), (See "Recording Screen" on page 19.)

→ TRACK → TOTAL → TITLE → FOLDER →

- Press this button and the **MEDIA** button at the same time to open the **LOCK SETUP** screen. (See "Setting the lock function" on page 30.)
- Press this button while pressing the **SHIFT** button to show the operation status of the unit. (See "Opening the INFORMATION screen" on page 30.)

#### ⑦ MENU [JOG] button

- When the Home Screen is open, press this button to open the Menu Screen., (See "Menu structure" on page 20.) and (See "Basic Menu Screen operations" on page 22.)
- When the Menu Screen is open, press this button to change the menu page.
- When the Menu Screen is open, press this button while pressing the **SHIFT** button to change the menu page in reverse direction.
- When a sub menu screen is open, press this button to go back one step in the menu.
- Press this button while pressing the **SHIFT** button when playing back, in playback standby or stopped on the Home Screen to enable jog playback mode. (See "Jog playback" on page 33.)
- Press this button when a pop-up message is open to close it.

#### ⑧ KEY [EDIT] button

- When the Home Screen is open, press this button to open a pop-up window where you can change the key with the key control function. (See "Using the key control function" on page 34.)  
When this pop-up is open, press the **MULTI JOG** dial to turn the key control function on/off.  
When this pop-up is open, turn the **MULTI JOG** dial to change the key.
- Press this button while pressing the **SHIFT** button to open the edit menu pop-up. (See "Edit menu operations" on page 70.)

## 2 – Names and Functions of Parts

### 9 PITCH [BROWSE] button

- When the Home Screen is open, press this button to open a pop-up window where you can set the pitch with the pitch control function. (See “Using the pitch control function” on page 34.)  
When this pop-up is open, press the **MULTI JOG** dial to turn the pitch control function on/off.  
When this pop-up is open, turn the **MULTI JOG** dial to change the pitch in 1% increments.
- When this pop-up is open, press and turn the **MULTI JOG** dial to change the pitch in 0.1% increments.
- Press this button while pressing the **SHIFT** button when playing back, in playback standby or stopped to open the **BROWSE** screen.

### 10 ◀◀ [A-B] button

- When playing back or in playback standby, press to skip by the amount of time set with the time skip function. (See “Using the time skip function” on page 38.)
- When playing back or in playback standby, press and hold this button to search backward while outputting audio (review).
- When stopped and the playback area is set to **FOLDER**, press to switch the current folder.
- When stopped and the playback area is set to **PLAYLIST**, press to switch the current playlist.
- When the **BROWSE** screen is open, press this button to go up one level. (See “Navigating the BROWSE screen” on page 42.)
- When the Home Screen is open, press this button while pressing the **SHIFT** button to turn the A-B repeat playback function on. (See “A-B repeat playback settings” on page 35.)

### 11 ▶▶ [INPUT] button

- When playing back or in playback standby, press to skip by the amount of time set with the time skip function. (See “Using the time skip function” on page 38.)
- When playing back or in playback standby, press and hold this button to search forward while outputting audio (cue).
- When stopped and the playback area is set to **FOLDER**, press to switch the current folder.
- When stopped and the playback area is set to **PLAYLIST**, press to select the current playlist.
- When the **BROWSE** screen is open and a folder is selected, press this button to show the contents of that folder. (See “Navigating the BROWSE screen” on page 42.)
- Press this button while pressing the **SHIFT** button to open the input source setting pop-up window. When the input source setting window is open, turn the **MULTI JOG** dial to select the input source. After selection press the **MULTI JOG** dial to change the input source. (See “Selecting the input source” on page 56.)

### 12 SHIFT button

- While pressing this button, press a button with a blue label to use that function.
- When the Home Screen is open, press this button to scroll file and folder names.
- When the **BROWSE** Screen is open, press this button to scroll file and folder names that are not shown completely.
- While pressing this button, turn the **MULTI JOG** dial to adjust the contrast of the display.

### 13 PHONES jack/knob

- Use this standard stereo jack to connect stereo headphones. Use an adapter to connect headphones with a mini plug. Use the **PHONES** knob to adjust the headphone output level.

#### CAUTION

Before connecting headphones, minimize the volume with the **PHONES** knob. Failure to do so could result in a sudden loud noise that could harm hearing, for example.

### 14 REMOTE jack (2.5 mm dia TRS)

- Connect a TASCAM RC-3F footswitch or TASCAM RC-20 direct play remote control (both sold separately) here. This enables remote starting and stopping of playback and other functions. When a TASCAM RC-3F footswitch is connected, you can change the functions of the three pedals. (See “Using a footswitch (TASCAM RC-3F)” on page 102.)

### 15 USB port

- Connect (and disconnect) USB flash drives here. (See “Connecting and disconnecting USB flash drives” on page 28.)  
When a USB flash drive is connected, files on it can be played back and files can be recorded to it. In addition, you can also connect a USB keyboard here and use it to input folder and file names, for example, as well as for external control.  
By default, the unit is set to use a Japanese (JIS) keyboard. Since English and Japanese (JIS) keyboards use different layouts, change the setting on the **KEYBOARD TYPE** screen if you are using an English keyboard. (See “Setting the keyboard type” on page 97.)

### 16 SD card slots

- Insert SD cards in these slots. (See “Inserting and removing SD cards” on page 27.)

### 17 Remote control signal receiver

- Signals from the remote control (TASCAM RC-10) are received here. When operating the remote control, point it toward this receiver.

### 18 MEDIA button

- When the Home Screen is displayed, press this button to open the **MEDIA SELECT** Screen. (See “Selecting media” on page 29.)
- Press this button and the **HOME [INFO]** button at the same time to open the **LOCK SETUP** screen. (See “Setting the lock function” on page 30.)

### 19 MULTI JOG dial

- This dial functions as a dial when turned and as a button when pressed.

#### Dial functions

- When the home screen is open during playback or playback standby and marks have been added, turn the **MULTI JOG** dial to move to marks. When there are no marks, turn to skip between tracks.
- When inputting a program, use to select tracks to assign.
- When a Menu Screen is open, turn to select items and change setting values.
- When editing names, use to select characters.
- During jog playback, use to move in 10msec intervals. (See “Jog playback” on page 33.)
- While pressing the **SHIFT** button, turn the **MULTI JOG** dial to adjust the contrast of the display.
- While pressing the **HOME [INFO]** button, turn the **MULTI JOG** dial to adjust the brightness of the display and the various indicators.
- When the **BROWSE** screen is open, turn to select folders and files within the same folder. (See “Navigating the BROWSE

## 2 – Names and Functions of Parts

screen” on page 42.)

### Button functions

- When the Home Screen is open and the unit is stopped, recording, in recording standby, playing back or in playback standby, press this button to add a mark. (See “Adding marks manually when recording” on page 68.), (See “Adding marks” on page 87.)
- When a Menu Screen is open, press to confirm selections and settings (ENTER button function).
- When the BROWSE screen is open, press this to show the pop-up folder/file menu for the selected folder/file. (See “Folder operations” on page 43.), (See “File operations” on page 44.)

### CAUTION

Marks cannot be added when the current medium is CD.

### 20 STOP button/STOP [LOAD] button (SS-CDR250 only)

- Press to stop playback or recording.
- When the playback area is set to PROGRAM and playback is stopped, press to clear the entire program.
- Press this button while pressing and holding the SHIFT button to start flash loading (SS-CDR250N only).

### 21 PLAY button/indicator

- Press when stopped or in playback standby to start playback.
- Press when in recording standby to start recording.
- This button lights during playback and recording.
- This button blinks during jog playback.


### 22 PAUSE [CALL] button/indicator

- Press when stopped or playing back to start playback standby.
- Press when recording to start recording standby.
- This button lights when in playback standby or recording standby.
- This button blinks during jog playback.
- When in playback standby, press this button to search for the call point (last point playback started from playback standby) and resume playback standby. (See “Using the call function” on page 39.)

### 23 RECORD [TRK INC] button/indicator

- Press when stopped to start recording standby.
- When recording, press to divide the recording by creating a new file (increment the track number).
- This button lights when recording or in recording standby.
- If the currently-selected medium is not loaded, pressing this button starts input monitoring and the selected input signal will be output. This button blinks during input monitoring.

## Rear panel

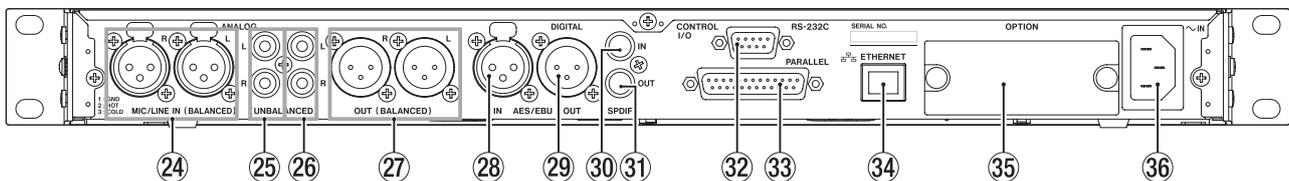

### 24 MIC/LINE IN (BALANCED) L/R jacks

These are balanced XLR analog input jacks.

- The nominal input level can be set to either +4 dBu (default) or +6 dBu. (1: GND, 2: HOT, 3: COLD), (See “Setting the reference level” on page 96.)
- By changing the input sensitivity, you can use these as mic inputs. (See “Setting mic/line input sensitivity” on page 58.)

### 25 ANALOG IN (UNBALANCED) L/R jacks

These are analog RCA pin input jacks.

The nominal input level is -10 dBV.

### 26 ANALOG OUT (UNBALANCED) L/R jacks

These are analog RCA pin output jacks.

The nominal output level is -10 dBV.

### 27 ANALOG OUT (BALANCED) L/R jacks

These are balanced XLR analog output jacks.

The nominal output level can be set to either +4 dBu (default) or +6 dBu. (1: GND, 2: HOT, 3: COLD), (See “Setting the reference level” on page 96.)

### 28 AES/EBU IN jack

This is a balanced XLR AES3-2003/IEC60958-4 (AES/EBU) format digital audio input jack.

A sampling rate converter that supports 32–192 kHz is built-in. (See “Using the sampling rate converter” on page 64.)

To link a second SS-CDR250N/SS-R250N, connect the **AES/EBU OUT** jack on the other unit to this jack. (See “Making connections for link playback” on page 40.)

### 29 AES/EBU OUT jack

This is a balanced XLR AES3-2003/IEC60958-4 (AES/EBU) format digital audio output jack.

To link a second SS-CDR250N/SS-R250N, connect the **AES/EBU IN** jack on the other unit to this jack. (See “Making connections for link playback” on page 40.)

### 30 SPDIF IN jack

This is a digital audio input jack.

A sampling rate converter that supports 32–192 kHz is built-in. (See “Using the sampling rate converter” on page 64.)

To link a second SS-R250N, connect the **SPDIF OUT** jack on the other unit to this jack. (See “Making connections for link playback” on page 40.)

## 2 – Names and Functions of Parts

### 31 SPDIF OUT jack

This is a digital audio output jack. Signals can be output in IEC60958-3 (S/PDIF) format. To link a second SS-R250N, connect the **SPDIF IN** jack on the other unit to this jack. (See “Making connections for link playback” on page 40.)

### 32 RS-232C connector

This is a 9-pin D-sub RS-422 control input/output connector. Connect a TASCAM RC-SS150 remote control or personal computer, for example, here. (See “Using the RS-232C connector” on page 102.)

### 33 PARALLEL connector

This is a 25-pin D-sub parallel control input/output connector. Connect a TASCAM RC-SS20 or other external controller here.

### 34 ETHERNET connector

This is an Ethernet port. Use this to connect to a network, transfer files and control the unit externally.

### 35 OPTION slot

Use this slot to install an I/O card (sold separately).

### 36 AC IN connector

Plug the included power cord in here.

## PARALLEL connector overview

The **PARALLEL** connector on the back allows external control of the unit. (A **TASCAM RC-SS20** can also be connected.)

The pin assignments are as follows.

Pin No.	Function	IN/OUT
1	GND	-
2	PLAY/Flash 1	IN
3	STOP/Flash 2	IN
4	RECORD/Flash 3	IN
5	▶▶ (Next)/Flash 4	IN
6	◀◀ (Previous)/Flash 5	IN
7	Flash Load	IN
8	Fader Start	IN
9	Flash Tally	OUT
10	Ready Tally	OUT
11	Record Tally *1	OUT
12	Stop Tally	OUT
13	Play Tally	OUT
14	Remote Select *2	IN
15	Ready/Flash 6	IN
16	Call/Flash 7	IN
17	Auto Cue/Flash 8	IN
18	Auto Ready/Flash 9	IN
19	Pitch/Flash 10	IN
20	Flash Page *3	IN
21	EOM Tally	OUT
22	Device Select Tally 1 *4	OUT
23	Ducking Tally	OUT
24	Device Select Tally 2 *4	OUT
25	+5V	-

IN: External command reception active low (usually 30 msec or more, 1 sec or more when recording MP3 files, functions when connected to GND)

OUT: Transport status display signals by open collector (10Ω output impedance, 20V withstand voltage, 35mA maximum current)

+5V: 50mA maximum supplied current

#### \*1 Pin 11 (Remote Tally)

The status when recording is paused differs according to the **RECORD TALLY** menu screen setting. (See “Setting the Record Tally” on page 102.)

Setting value	#11 (when recording paused)
REC ONLY	High
REC PAUSE/REC	Low

#### \*2 Pin 14 (Remote Select)

When high, the first function is enabled when there are two functions separated by a / for the input pin in the above table (pins 2–6 and 15–19), and it can be used as an ordinary parallel controller.


When low, those input pins function as flash start keys.

#### \*3 Pin 20 (Flash Page)

When pin 14 (Remote Select) is low, the pin 20 high/low status determines the assigned tracks as follows.

#14	#20	Flash start tracks
Low	High	1–10
Low	Low	11–20

In the following connection example, fader starts and stops control playback of this unit.

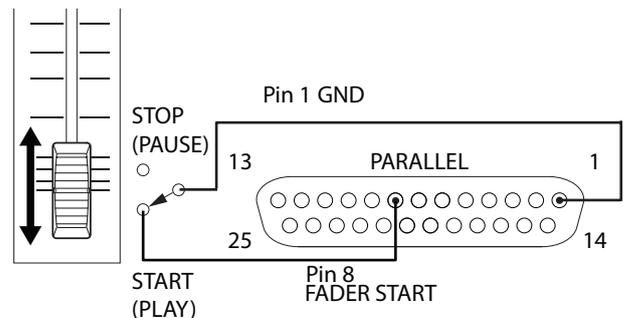


#### \*4 Pin 22/Pin 24 (Device Select Tally 1/2)

The high/low statuses of pins 22 and 24 determine the device assignments as follows.

#22	#24	Device assignment
Low	Low	USB
High	High	SD1
High	Low	SD2
Low	High	CD

## 2 – Names and Functions of Parts

### Wireless remote control (TASCAM RC-10)

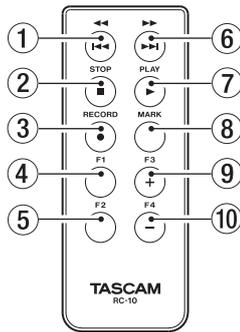


- ① **◀◀/▶▶ button**  
Press briefly during playback to skip to the beginning of the track.  
Press briefly when near the beginning of a track to skip to the beginning of the track before it.  
Press and hold to search backwards.  
When the **BROWSE** screen is open, press to move up one level. (See "Navigating the BROWSE screen" on page 42.)
- ② **STOP [■] button**  
Press to stop playback or recording.
- ③ **RECORD [●] button**  
Press when stopped to start recording standby.  
When recording, press to increment the track number (create a new file and continue recording). (See "Incrementing track numbers manually" on page 66.)
- ④ **F1 button**  
Press when stopped or playing back to start playback standby.  
Press when recording to start recording standby.
- ⑤ **F2 button**  
When a Menu Screen is open, press this button to return to the Home Screen.  
Press when the Home Screen is open to change the display mode. (See "Home Screen" on page 17.)
- ⑥ **▶▶/▶▶▶ button**  
Press briefly to skip to the beginning of the next track.  
Press and hold to search forward.  
When the **BROWSE** screen is open and a folder is selected, press this button to open that folder.
- ⑦ **PLAY [▶] button**  
Press when stopped or playback ready to start playback.  
Press when in recording standby to start recording.
- ⑧ **MARK button**  
When stopped, recording, playing back or in playback standby, press this button to add a mark. (See "Adding marks manually when recording" on page 68.), (See "Adding marks" on page 87.)
- ⑨ **F3 [+ ] button**  
Press to move to the next mark.  
When the **BROWSE** screen is open, press to move the cursor up. (See "Navigating the BROWSE screen" on page 42.)
- ⑩ **F4 [- ] button**  
Press to move to the mark before the current location.  
When the **BROWSE** screen is open, press to move the cursor down. (See "Navigating the BROWSE screen" on page 42.)


### Home Screen

The Home Screen has four display modes: **TRACK**, **TOTAL**, **TITLE** and **FOLDER**.


Each time you press the **HOME [INFO]** button, the display mode will change.

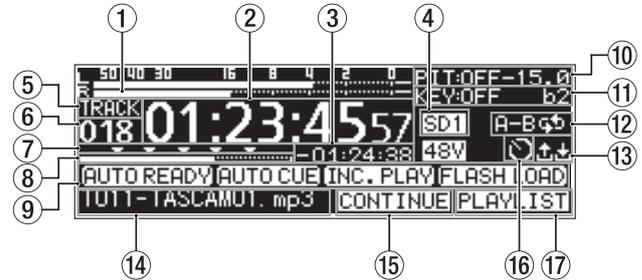


Home Screen **TRACK** display mode

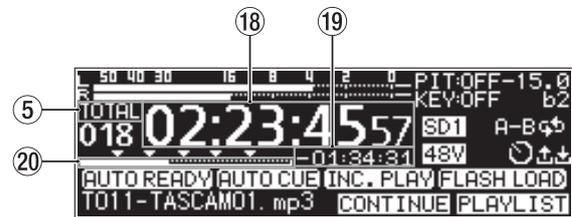

Home Screen **TOTAL** display mode

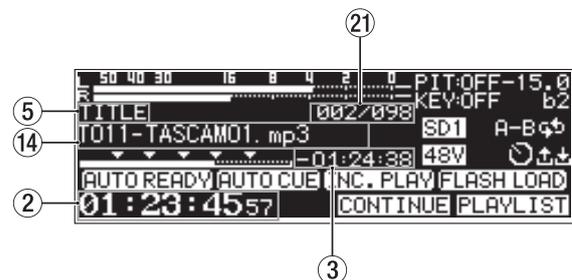

Home Screen **TITLE** display mode

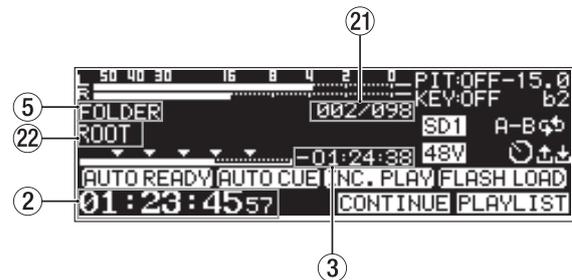

Home Screen **FOLDER** display mode

- ① **Level meters**  
This area shows the levels of the input and playback signals.
- ② **Elapsed time from track beginning**  
This shows the elapsed time from the beginning of the current track (hours: minutes: seconds).  
During jog playback 10msec intervals are also shown.
- ③ **Remaining time to track end**  
This shows the remaining time to the end of the current track (hours: minutes: seconds).

## 2 – Names and Functions of Parts

### ④ Current medium

This shows the name of the currently selected medium. (See “Selecting media” on page 29.)

: USB flash drive selected

: SD card 1 selected

: SD card 2 selected

: CD selected

### ⑤ Display mode

This shows the current Home Screen display mode.

### ⑥ Track number

This shows the number of the currently playing track.

### ⑦ Mark display

Marks are shown by ▼ icons.

### ⑧ Track playback position

This bar shows the current playback position.

As playback progresses, the bar extends from the left.

### ⑨ Playback function activation status

Icons appear for the playback functions that are currently on.

Icon	Meaning
	Appears when auto ready function is on
	Appears when auto cue function is on
	Appears when incremental playback function is on
	Appears when already flash loaded

### ⑩ Pitch control status

This shows whether the pitch control function is on/off and the currently set pitch adjustment.

### ⑪ Key control status

This shows whether the key control function is on/off and the currently set key adjustment.

### ⑫ Repeat playback status

An icon appears when the repeat playback function is on.

: Repeat playback

: A-B repeat playback

### ⑬ Upload/download status

An icon appears when files, for example, are being uploaded or downloaded via a network.

: Uploading

: Downloading

### ⑭ Track title

This shows the title of the current track.

Press the **SHIFT** button on the unit to scroll this.

### ⑮ Playback mode

This shows the current playback mode. (See “Setting the play mode” on page 32.)

: Continuous playback mode

: Single playback mode

: Program playback mode

: Random playback mode

### ⑯ Timer event setting status

The icon appears when the timer event function is on. (See “Turning the timer event function on/off” on page 81.)

### ⑰ Playback area

This shows the current playback file area.

: All files on the current medium

: All files in the selected folder

: All files assigned to the playlist

### ⑱ Total track recorded time

This shows the elapsed time of the play area (hours: minutes: seconds).

### ⑲ Total track remaining time

This shows the remaining time of the play area (hours: minutes: seconds).

### ⑳ Total elapsed playback position

This bar shows the current playback position.

As playback progresses, the bar extends from the left.

### ㉑ Track number/total number of tracks

This shows the current track number and total number of tracks in the current playback area.

### ㉒ Folder name

This shows the name of the folder that contains the current track.

#### NOTE


- When stopped, the total playback time of the playback area is always shown regardless of the Home Screen display mode setting.
- In **PROGRAM** mode, the elapsed time and remaining time are shown for the entire program rather than the entire playback area.

## 2 – Names and Functions of Parts


### Recording Screen

The Recording Screen has four display modes: TRACK, TOTAL, TITLE and FOLDER.


Each time you press the **HOME [INFO]** button, the display mode will change.

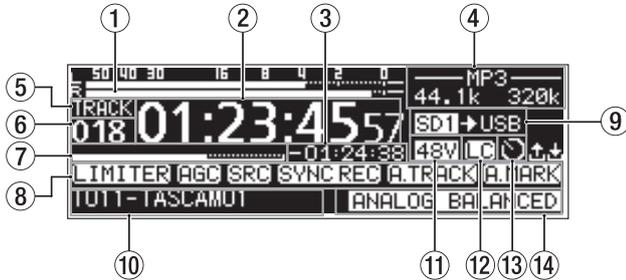


Recording Screen TRACK display mode

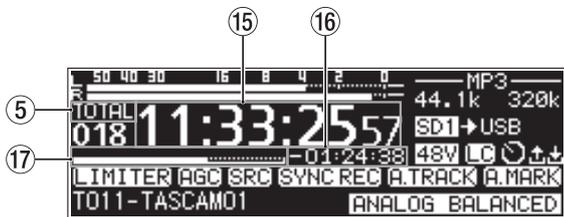

Recording Screen TOTAL display mode

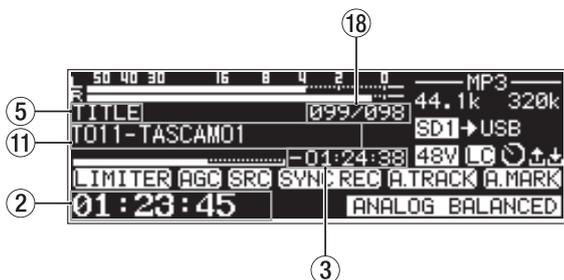

Recording Screen TITLE display mode

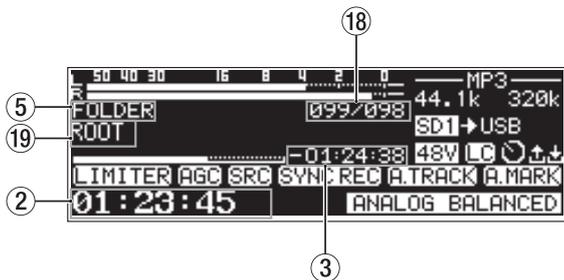

Recording Screen FOLDER display mode

#### ① Input levels

The input sound levels are shown.

#### ② Elapsed track recording time

This shows the elapsed time of the recorded track (hours: minutes: seconds).

#### ③ Remaining track recording time

This shows the remaining available recording time (hours: minutes: seconds).

#### ④ File type

This shows the current recording file format.

When dual format recording is on, two file formats are shown like **MP3/WAV**. (See “Making recording format settings” on page 61.)

#### ⑤ Display mode

This shows the current Home Screen display mode.

#### ⑥ Track number

This shows the number of the track currently being recorded.

#### ⑦ Track recording position

The current recording position is shown by a bar. As recording progresses, the bar extends from the left.

#### ⑧ Recording function activation status

Icons appear for the recording functions that are currently on.

Icon	Meaning
<b>LIMITER</b>	Appears when the dynamics function <b>LIMITER</b> is on
<b>COMP.SOFT</b>	Appears when the dynamics function <b>COMP_SOFT</b> is on
<b>COMP.HARD</b>	Appears when the dynamics function <b>COMP_HARD</b> is on
<b>AGC</b>	Appears when the automatic gain control function is on
<b>SRC</b>	Appears when the sampling rate converter is on
<b>SYNC REC</b>	Appears when the sync recording function is on
<b>A.TRACK</b>	Appears when the automatic track incrementation function is on
<b>A.MARK</b>	Appears when the automatic mark function is on

#### ⑨ Current medium

This shows the name of the currently selected medium.

When the relay recording function is on, an icon like **SD1→SD2** will appear that shows the current medium and the next medium to be used for recording. (See “Making recording format settings” on page 61.)

When the backup function is on, an icon like **SD1SD2** will appear that shows the two types of media used for recording. (See “Making recording format settings” on page 61.)

#### ⑩ Track title

This shows the title of the track being recorded.

#### ⑪ Phantom power supply status

When phantom power is on, the **48V** icon appears. (See “Setting phantom power” on page 59.)

#### ⑫ Low-cut filter setting status

When the low-cut filter is set, the **LC** icon appears. (See “Setting the low-cut filter” on page 60.)

#### ⑬ Timer event setting status

The **☑** icon appears when the timer event function is on. (See “Turning the timer event function on/off” on page 81.)

#### ⑭ Input setting status

This shows the name of the currently selected input.

Icon	Meaning
<b>ANALOG UNBALANCED</b>	Input from <b>ANALOG IN (UNBALANCED)</b> L/R jacks
<b>ANALOG BALANCED</b>	Input from <b>MIC/LINE IN (BALANCED)</b> jacks
<b>DIGITAL XLR</b>	Input from <b>AES/EBU IN</b> jack
<b>DIGITAL COAXIAL</b>	Input from <b>SPDIF IN</b> jack
<b>IF-DA2 (DANTE)</b>	Input from IF-DA2 Dante interface card

## 2 – Names and Functions of Parts

### 15 Total track elapsed time

This shows the total recording time of everything on the current medium (hours: minutes: seconds).

### 16 Total track remaining time

This shows the remaining recording time available on the current medium (hours: minutes: seconds).

### 17 Total recording position

The current recording position is shown by a bar. As recording progresses, the bar extends from the left.

### 18 Track number/total number of tracks

This shows the current track number and total number of track in the current playback area.

### 19 Name of track recording folder

This shows the name of the folder where tracks are recorded.

#### NOTE

The remaining time differs according to the file recording format. (See “Setting the recording file format” on page 61.)

## Menu structure

Press the **MENU [JOG]** button to open the **PLAY 1** page of the menu.

The SS-CDR250N MENU screen has 22 pages and the SS-CDR250N MENU screen has 21 pages organized by types of menu items.

	Page name	Contents
1	PLAY 1	Make playback settings.
2	PLAY 2	
3	PLAY 3	
4	PLAYLIST	Make playlist settings.
5	REC 1	Make recording settings.
6	REC 2	
7	REC 3	
8	REC 4	
9	REC 5	
10	CD	This menu includes CD-specific operations. (SS-CDR250N only)
11	TIMER EVENT	Make timer event settings.
12	MARK LIST	Make mark list settings.
13	NETWORK 1	Make network settings.
14	NETWORK 2	
15	FTP CLIENT	Make FTP settings.
16	SNTP	Make SNTP settings.
17	UTILITY	Make utility settings.
18	PREFERENCES	Make preference settings.
19	REMOTE	Make remote control settings.
20	MEDIA	Work with media.
21	SYSTEM 1	Make system settings.
22	SYSTEM 2	

The various menu items are as follows.

Menu item	Function	Page
PLAY 1 page		
PLAY AREA	Playback area setting	page 31
PLAY MODE	Playback mode setting	page 32
REPEAT	Repeat playback function settings	page 35
AUTO CUE	Auto cue function settings	page 35
AUTO READY	Auto ready function setting	page 36
PLAY 2 page		
INCREMENTAL PLAY	Incremental playback function setting	page 36
MONO MIX	Mono playback function setting	page 36
DUCKING	Ducking function settings	page 37
EOM TRACK	EOM function settings	page 37
EOM MEDIA		
PLAY 3 page		
RESUME	Resume playback function setting	page 38
TIME SKIP	Time skip function setting	page 38
FADER DELAY	Playback start timing setting	page 39
OUTPUT RATE	Audio output setting for external sampling frequency synchronization	page 39
CALL	Call function setting	page 39
PLAYLIST page		
PLAYLIST EDIT	Playlist editing	page 50
REC 1 page		
INPUT SELECT	Input source selection	page 56
REC SET LINK	Input channel link setting	page 57
BAL. INPUT GAIN	Mic input sensitivity setting	page 58
INPUT LEVEL	Input volume setting	page 58
MIC PHANTOM	Phantom power setting	page 59
REC 2 page		
MIC AGC	Automatic gain control for mic input function setting	page 59
DYNAMICS	Dynamics function setting	page 60
LOW CUT	Low-cut filter setting	page 60
REC 3 page		
REC FORMAT	Recording file format setting	page 61
BACKUP/RELAY MEDIA	Backup and relay recording media settings	page 62
WAV SETTING	WAV file settings	page 62
MP3 BITRATE	MP3 file bit rate setting	page 62
FILE TYPE	Recording file type setting	page 62
REC 4 page		
FILE NAME	Set the file name format	page 63
DITHER	Dither setting	page 64
SRC	Sampling rate converter setting	page 64

## 2 – Names and Functions of Parts

Menu item	Function	Page
PAUSE MODE	Pause mode function setting	page 65
DIRECT REC	Direct record function setting	page 65
REC 5 page		
PRE REC	Pre-recording function setting	page 65
SYNC REC	Synchronized recording settings	page 65
AUTO TRACK	Automatic track incrementation function settings	page 67
AUTO MARK	Automatic mark function settings	page 68
CD page (SS-CDR250N only)		
FINALIZE	Finalize unfinalized CD-R/CD-RW discs	page 73
ERASE	Erase a written CD-RW disc	page 73
BURN TO CD	Write from the selected media to a CD-R/CD-RW disc	page 75
RIP TO MEMORY	Write from a CD to the selected media	page 78
TIMER EVENT page		
TIMER EVENT	Timer event function setting	page 81
TIMER EVENT LIST	Timer event list screen settings	page 81
MARK LIST page		
MARK LIST	Mark list editing	page 87
NETWORK 1 page		
MAC ADDRESS	View the unit's MAC address	page 90
IP ADDRESS	View the current IP address	
DNS ADDRESS	View the IP address of the DNS server	
IP SETUP	Set the unit's IP address and related settings	page 90
DNS SETUP	Set the IP address of the DNS server	
NETWORK 2 page		
IP PASSWORD	Password setting	page 91
NICKNAME	Nickname setting	page 91
ADMIN PASSWORD	Admin Password setting	page 91
FTP CLIENT page		
TARGET FTP SERVER	Various settings for FTP server connections	page 91
FTPS MODE	FTP mode setting	
TARGET FOLDER NAME	Set default folder for FTP server uploads and downloads	
ACCESS TEST	Test connection with FTP server	
AUTO UPLOAD	Automatic uploading to FTP server setting	

Menu item	Function	Page
SNTP page		
SNTP STATUS	View the current SNTP status	page 94
SNTP UPDATE	Set the SNTP function update mode	
NTP SERVER	NTP server name setting	page 94
TIMEZONE	Set the time offset from Coordinated Universal Time (UTC)	
DAYLIGHT SAVING	Set the daylight savings time function	
UTILITY page		
LINK PLAY	Link playback settings	page 40
POWER ON ACTION	Power on action function setting	page 96
OUTPUT LEVEL	Analog output attenuation function setting	page 96
REMOTE POWER CONTROL	Remote power control function setting	page 96
PREFERENCES page		
REFERENCE LEVEL	Reference level setting	page 96
BRIGHTNESS	Display and indicator brightness setting	page 26
LCD CONTRAST	Display contrast setting	page 26
KEYBOARD	Keyboard type setting	page 97
REMOTE page		
RS-232C	RS-232C settings	page 102
RC-3F	RC-3F mode setting	page 102
RECORD TALLY	Record Tally setting	page 102
MEDIA page		
MEDIA FORMAT	Media formatting settings	page 29
MEDIA INFORMATION	View media information	page 99
MEDIA REBUILD	Rebuild the media	page 99
SYSTEM 1 page		
CLOCK ADJUST	Date and time settings	page 26
FACTORY PRESET	Restore factory default settings	page 99
SAVE USER PRESET	Write user settings	page 99
LOAD USER PRESET	Load user settings	page 99
SYSTEM BACKUP	Import/export system backup data	page 100
SYSTEM 2 page		
VERSION	View the firmware version	page 101
UPDATE	Update the firmware	page 101

### NOTE

The settings for all menu items are retained even when the unit is turned off.

## 2 – Names and Functions of Parts


### Basic Menu Screen operations

Use the following operations to work with the pages of the Menu Screen.

#### Changing menu items by page:

Press the **MENU [JOG]** button repeatedly until the desired menu page opens.

The pages will open in the following order.

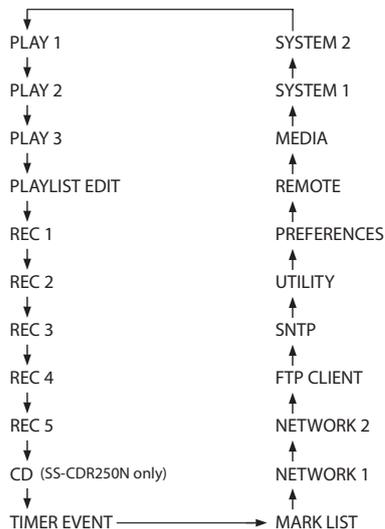

#### NOTE

- Press the **MENU [JOG]** button while pressing and holding the **SHIFT** button to open menu pages in the opposite direction.
- Turn the **MULTI JOG** dial to move up and down on the menu screen one item at a time from the **PLAY 1** page **PLAY AREA** item to the **SYSTEM 2** page **UPDATE** item.

#### Selecting items (moving vertically on a page):

Turn the **MULTI JOG** dial.

#### Confirming a selected item:

Press the **MULTI JOG** dial.

#### Opening a submenu from a page:

Press the **MULTI JOG** dial.

#### Selecting an item in a submenu:

Press the **MULTI JOG** dial or **◀ [A-B] / ▶ [INPUT]** button.

#### Going back one step in a menu:

Press the **MENU [JOG]** button.

#### Returning directly to the Home Screen from a menu screen:

Press the **HOME [INFO]** button.

### Menu operation procedures

In this example, we explain how to set the auto mark function.

1. Press the **MENU [JOG]** button to open the **PLAY 1** menu page.



2. Press the **MENU [JOG]** button to open other menu pages.



REC 5 page open

3. Turn the **MULTI JOG** dial to select the item to set.



AUTO MARK selected

4. Press the **MULTI JOG** dial to open the settings screen.



AUTO MARK screen open

5. Turn the **MULTI JOG** dial to change the setting.
6. To set another item on the same screen, press the **MULTI JOG** dial to move the cursor to the next setting. When you can use the **◀ [A-B] / ▶ [INPUT]** buttons to move the cursor, **<< >>: MOVE Cursor** will appear at the top right of the screen.
7. Repeat steps 5 to 6 as necessary to set other items.
8. Press the **MULTI JOG** dial to confirm the setting changes and return to the Menu Screen. Press the **HOME [INFO]** button to return to the Home Screen.

#### NOTE

- Press the **MENU [JOG]** button to cancel the menu operation and return to the Menu Screen.
- In some cases, in step 8, pressing the **MULTI JOG** dial will return to the Home Screen immediately.
- Menu items that cannot be changed are shown inside brackets [ ], and cannot be selected using the **MULTI JOG** dial.


# 3 – Preparation

## Making connections

This is an example of SS-CDR250N connections.

### Precautions before making connections

- Carefully read the operation manuals of the devices to be connected and then connect them correctly.
- Before making connections, turn this unit and all equipment to be connected off (standby).
- Install all connected devices, including this unit, so that they are powered from the same line. When using a power strip or similar device, be sure to use one that has high current capacity (thick cable) in order to minimize fluctuations in power voltage.

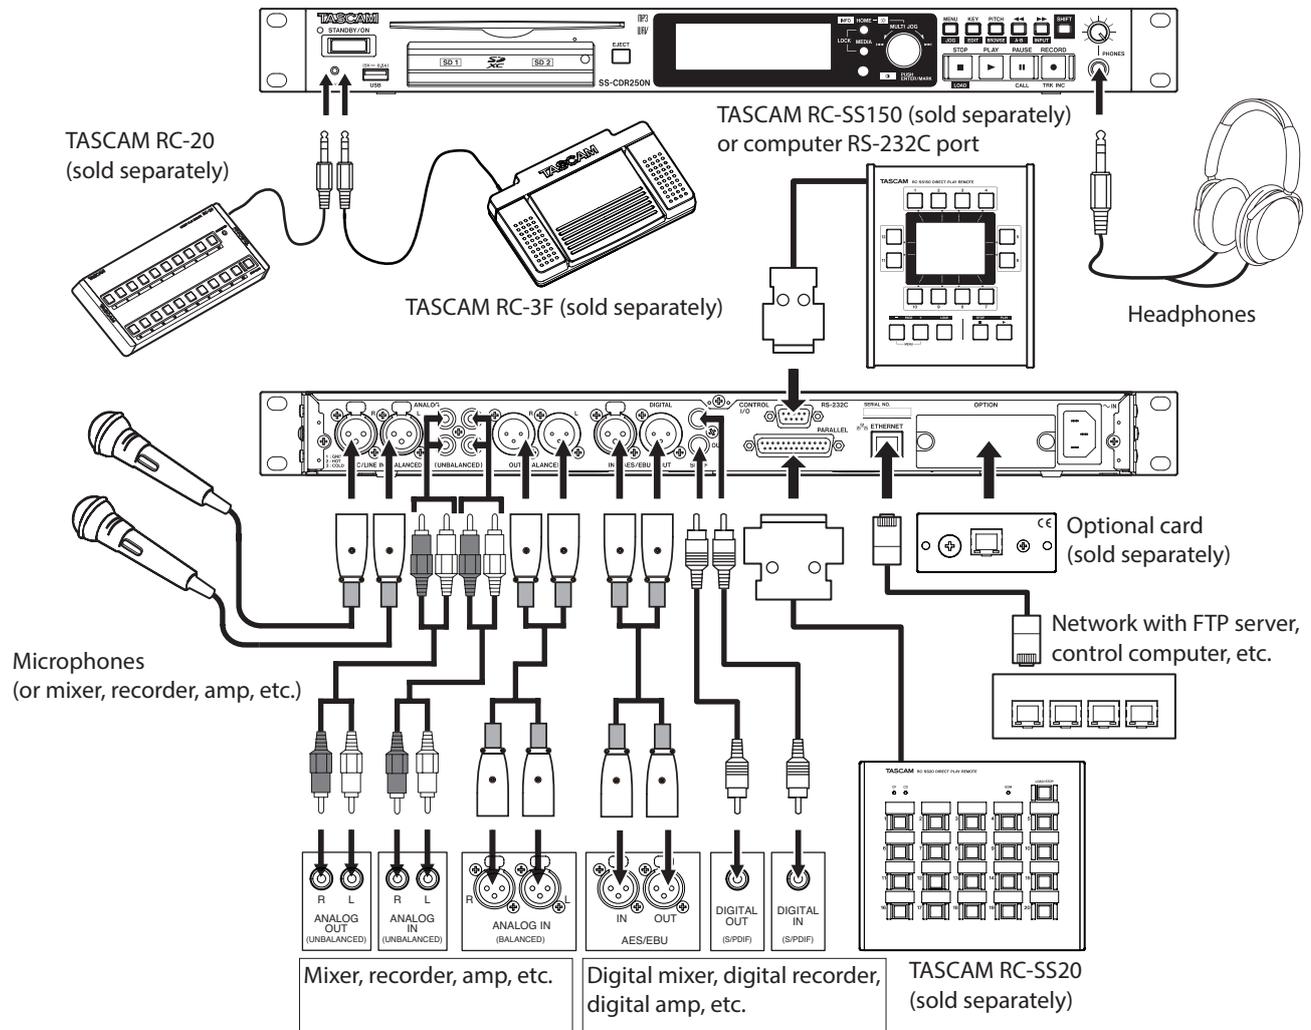

Examples of connections to a SS-CDR250N

## 3 – Preparation


### Preparing the remote control

#### Installing the coin battery


##### NOTE

When this unit is purchased a new, a lithium coin battery (CR2025) is preinstalled in the remote control. To use the remote control, remove the isolation sheet inserted in the battery holder.

1. Remove the battery holder from the remote control. While pressing ①, pull it in the ② direction.

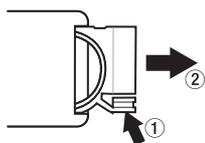

2. Being careful to maintain the correct  $\oplus$  /  $\ominus$  orientation, install the lithium coin battery (CR2025) into the battery holder.

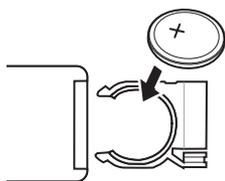

3. Insert the battery holder into the remote control.

#### When to replace the battery

Replace the battery with a new one if the distance from the main unit that the remote can be used decreases or if the unit stops responding to the remote buttons. Use a lithium coin battery (CR2025).

#### Battery precautions

The accidental swallowing of lithium coin batteries by small children is extremely dangerous. Keep these batteries and this remote control in places where small children cannot reach them. Should a child swallow a battery, consult with a doctor immediately.


Misuse of batteries could cause them to leak or rupture, for example. Carefully read and follow the caution labels on batteries. (See "CAUTIONS ABOUT BATTERIES" on page 4.)

- Install lithium coin batteries with the correct orientation.
- Do not charge lithium coin batteries.
- Do not heat or disassemble lithium coin batteries. Do not put them in fire or water.
- Do not transport or store lithium coin batteries with small metal objects. Doing so could cause the batteries to short and leak or rupture, for example.
- When storing and disposing of them, isolate their terminals with tape, for example, so that they do not touch other batteries or metal objects.
- Dispose of used batteries according to the instructions on them and the requirements set by your local government.

#### Using the wireless remote control

See "Wireless remote control (TASCAM RC-10)" on page 17 for the button functions.

When using the remote control, point it toward the receiver on the unit and use it within the range shown below.

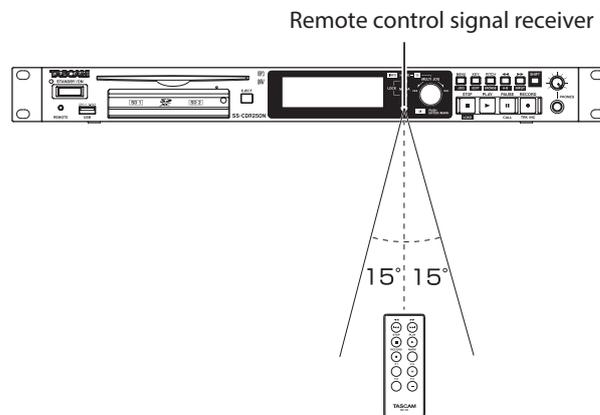

#### Remote control operation range

Front: 7 m  
Angle:  $\pm 15$  degrees


##### CAUTION

- The range will vary according to the angle.
- Operation might not be possible if there are obstacles.
- Remove the battery if not using the remote control for a long time (a month or more).
- If battery fluid should leak, wipe away any fluid inside the case thoroughly and install a new battery.
- When using other devices that can be controlled by infrared rays, operation of this remote control could cause those devices to function improperly.

## Installing a Dante interface card (sold separately)

### CAUTION

Before installing or removing a Dante interface card (sold separately), disconnect the power cord from the outlet or the unit.

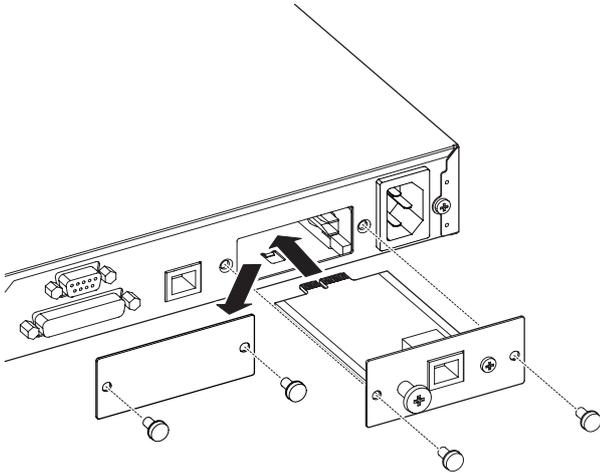

1. Remove the two screws from the plain panel and remove the panel itself.
2. Insert the Dante interface card into the card slot. Align the edges of the Dante interface card with the white guides inside the slot and insert it securely. Push the Dante interface card in until its backplate reaches the back panel of the unit, leaving no gap, and clicks into place. Do not force the card into the slot. If you cannot insert the card properly, remove it once and try reinserting it.
3. Use the two removed screws to secure the Dante interface card in place.
4. Turn this unit on.

When the unit recognizes the Dante interface card, **IF-DA2 (Dante)** will become available as an input source setting on the **INPUT SELECT** screen. (See “Selecting the input source” on page 56.)

If **IF-DA2 (Dante)** does not appear as an option on the **INPUT SELECT** screen, the Dante interface card might not be inserted correctly or the screws might not be tightened securely. Insert the Dante interface card securely into the unit again.

## Turning the unit on and off

Press the **STANDBY/ON** button on the front of the unit to turn it on.



Startup screen



Home Screen

After the unit starts and the startup screen is shown, the Home Screen will open.

If no current medium is loaded or there are no audio files in the current folder, the track number and time will not be shown on the Home Screen.

### Turning the unit off:

1. Press and hold the **STANDBY/ON** button to open a pop-up message.
2. When the confirmation pop-up is open, press and hold the **MULTI JOG** dial to turn the unit off.

### CAUTION

- Do not disconnect the power cord when the unit is operating (including recording, playing back, or writing data to an SD card or USB flash drive). Doing so could cause proper recording to fail, recorded data to be lost, and sudden loud noises from monitoring equipment, which might damage the equipment, harm hearing or cause other trouble.
- When the unit is started up for the first time (or when the built-in clock is reset after being left unused without power for a long time), the **CLOCK ADJUST** screen appears before the start-up screen to allow the date and time of the built-in clock to be set. (See “Setting the built-in clock date and time” on page 26.)

### NOTE


Press the **MENU [JOG]** button briefly to not turn the unit off.

## 3 – Preparation


### Setting the built-in clock date and time

Using its internal clock, this unit includes the date and time when a file is recorded.

1. Select the **CLOCK ADJUST** item on the **SYSTEM 1** page to open the **CLOCK ADJUST** screen. (See “Menu operation procedures” on page 22.)

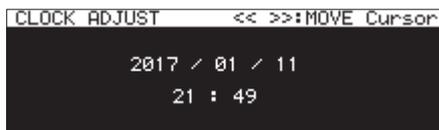

2. Press the **MULTI JOG** dial to enter setting mode and show the cursor on the item to be changed. Use the **<< [A-B]** and **>> [INPUT]** buttons to move the cursor.

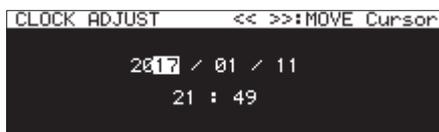

3. Turn the **MULTI JOG** dial to change a value, and press the **MULTI JOG** dial to confirm it and move the cursor to the next item.
4. The cursor will disappear will complete after you change the year, month, day, hour and minute in order.

#### NOTE

When making a setting, you can press the **MENU [JOG]** button to cancel the changes and return to the Menu Screen.

5. Press the **MENU [JOG]** button to confirm the setting and return to the Menu Screen.

 
### Adjusting the display

You can adjust the contrast and brightness of the display as well as the brightness of the **PLAY**, **PAUSE [CALL]** and **RECORD [TRK INC]** buttons as necessary.

### Adjusting the display and indicator brightness

#### Adjusting with controls

While pressing the **HOME [INFO]** button, turn the **MULTI JOG** dial to adjust the brightness of the display and indicators.



#### Adjusting with the menu setting

1. Select **BRIGHTNESS** on the **PREFERENCES** page to open the **BRIGHTNESS** screen. (See “Menu operation procedures” on page 22.)



2. Adjust the display and indicator brightness.  
**Options: 0 – 10 (default: 5)**
3. Confirm the setting and return to the Menu Screen.

### Adjusting the display contrast

#### Adjusting with controls

While pressing the **SHIFT** button, turn the **MULTI JOG** dial to adjust the display contrast.



#### Adjusting with the menu setting

1. Select **LCD CONTRAST** on the **PREFERENCES** page to open the **LCD CONTRAST** screen. (See “Menu operation procedures” on page 22.)



2. Adjust the display contrast.  
**Options: 0 – 50**
3. Confirm the setting and return to the Menu Screen.

## Inserting and removing SD cards


### Inserting SD cards

Insert an SD card into an SD card slot on the front of the unit to enable playback and recording by this unit.


#### NOTE

SD cards can be inserted whether or not the unit is on or off (in standby).


1. Pull the SD card slot cover forward to open it.

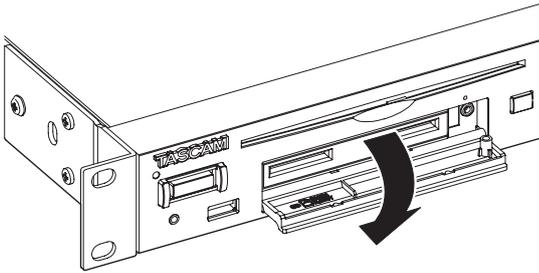

2. Inserted SD cards with the correct orientation. The label should be up and the connector should be inserted toward the back.

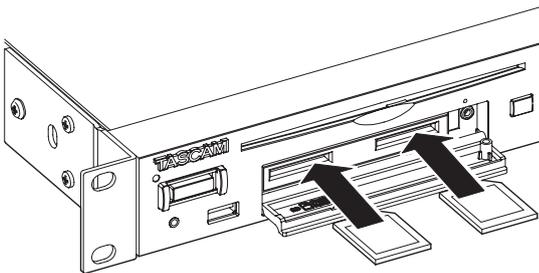

3. Close the card slot cover.

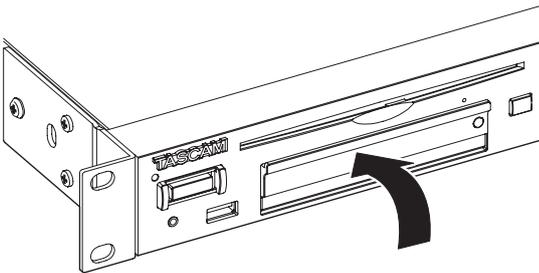

#### NOTE

If the SD card slot cover cannot be closed, remove the SD card and insert it again.

### Removing SD cards

Turn the unit off or stop operation before removing an SD card.

#### CAUTION


Never remove an SD card from the unit when it is being accessed, such as in the cases listed below.

Doing so could cause proper recording to fail, recorded data to be lost, and sudden loud noises from monitoring equipment, which might damage the equipment, harm hearing or cause other trouble.

Moreover, removing a card during **FIRMWARE UPDATE** execution could result in the unit becoming unable to start up or operate properly.

- When recording
- During playback
- During **SYSTEM BACKUP IMPORT** or **EXPORT** execution
- During **FIRMWARE UPDATE** execution (See "Firmware update procedures (USB flash drives and SD cards only)" on page 101.)
- When the **BROWSE** screen is open and the SD card is being accessed

1. Pull the SD card slot cover forward to open it.
2. Press the SD card in gently to make it to come forward.

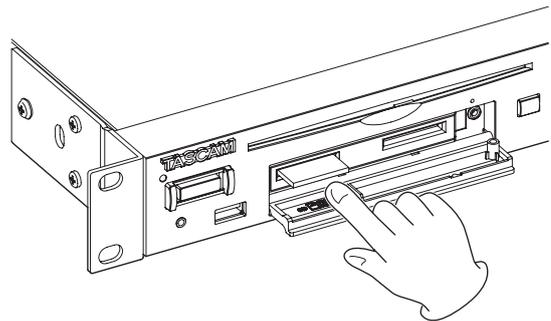


3. Pull the SD card out by hand.

### Using the security screw

You can use the included security screw to lock the card slot cover switch.


Use a Phillips (+) driver to install/remove the security screw.

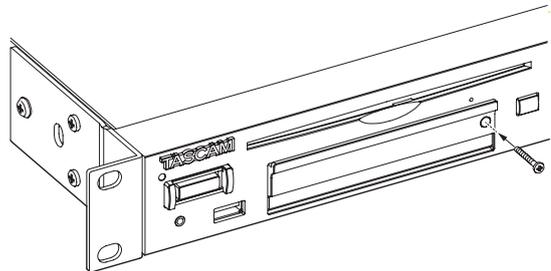

## 3 – Preparation

### SD card write-protection switches

SD cards have write-protection switches that prevent writing new data to them.

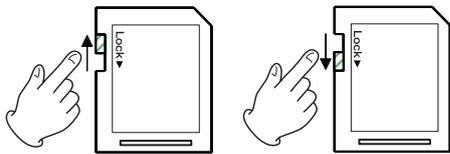


If you slide the protect switch to the LOCK position, file recording and editing will not be possible. Unlock cards to enable changing their data, including recording and erasing.

### Inserting and removing discs (SS-CDR250N only)

#### Inserting discs

With the disc label up, insert it partway into the disc slot. Push the disc in a little further and it will be pulled in automatically just before it disappears into the slot.

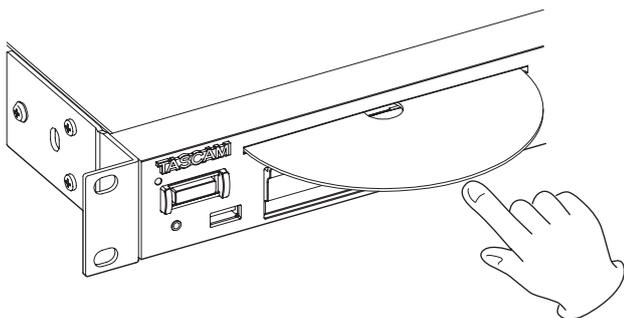

#### CAUTION

- Discs cannot be inserted when the power is off.
- If the disc becomes stuck during insertion, for example, and is difficult to push, do not try to force the disc in. Pull the disc out once and press the **EJECT** button and then try inserting it again. (Trying to force the disc in could scratch it or damage the unit.)
- If a disc other than an audio CD is inserted or a disc is inserted upside down, "NO MEDIA" will continue to appear on the display. Press the **EJECT** button and eject the disc.

#### Ejecting discs

Press the **EJECT** button.  
Holding it by its sides, pull it out the rest of the way.

#### CAUTION

The **EJECT** button does not function when the unit is off.

### Force disc ejection

If pressing the **EJECT** button does not eject the disc because the CD drive is not functioning, for example, you can use the disc force ejection (emergency) hole to force the disc to eject. Turn the unit off (put it in standby) before forcing the disc to eject using the following procedures.

1. Use a paper clip or other fine pin-like tool.
2. Insert the pin into the disc force ejection (emergency) hole as far as possible and repeat several times.
3. After the disc is ejected partway, pull it out by hand.

#### CAUTION

- This function is provided for emergencies. Follow the usual procedures for ejecting discs normally. (See "Ejecting discs" on page 28.)
- Never force disc ejection when the power is on.

### Connecting and disconnecting USB flash drives

You can connect and disconnect USB flash drives whether the unit is on or off.

#### CAUTION

Never disconnect a USB flash drive when it is being accessed, such as in the cases listed below.

Doing so could cause proper recording to fail, recorded data to be lost, and sudden loud noises from monitoring equipment, which might damage the equipment, harm hearing or cause other trouble.

Moreover, removing a card during **FIRMWARE UPDATE** execution could result in the unit becoming unable to start up or operate properly.


- When recording
- During playback
- During **SYSTEM BACKUP IMPORT** or **EXPORT** execution
- During **FIRMWARE UPDATE** execution (See "Firmware update procedures (USB flash drives and SD cards only)" on page 101.)
- When the **BROWSE** screen is open and the USB flash drive is being accessed

## Selecting media


Before conducting other operations, select the medium to use (USB, SD1, SD2 or CD).

Follow the procedures below to select the medium.

1. Press the **MEDIA** button to open the **MEDIA SELECT** screen.

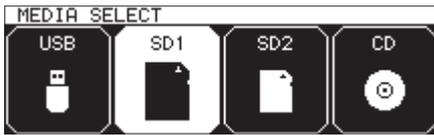

2. Press the **MEDIA** button to select the medium to use, and press the **MULTI JOG** dial to confirm it.
3. The name of the currently selected medium appears in the current medium area of the Home Screen.

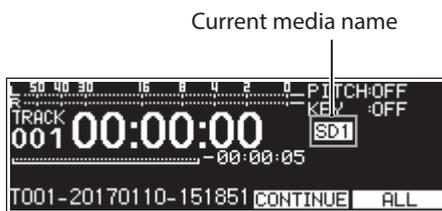

Icon	Meaning
	: USB flash drive selected
	: SD card 1 selected
	: SD card 2 selected
	No media loaded or media invalid
	Finalized CD* (with TOC data)
	Finalized CD-R
	Unfinalized CD-R
	Finalized CD-RW
	Unfinalized CD-RW

\* This will also be used with commercial audio CDs.


## Preparing SD cards and USB flash drives for use

In order to use an SD card or USB flash drive with this unit, you must use this unit to format it first.

### CAUTION

- Formatting erases all the data on the SD card or USB flash drive.
  - Always use this unit to format media to be used with it. Operation of this unit might be affected when using an SD card or USB flash drive that has been formatted by a computer or other device.
  - This cannot be selected when the current medium is **CD**.
1. Open the **MEDIA SELECT** screen, and select the medium to format. (See "Selecting media" on page 29.)

2. Select the **MEDIA FORMAT** item on the **MEDIA** page to open a format method option pop-up. (See "Menu operation procedures" on page 22.)

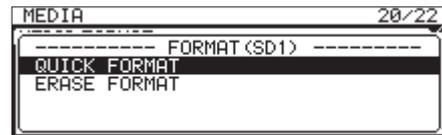

**QUICK FORMAT**: Format only system data on the medium.  
**FULL FORMAT**: Completely format the medium.

### NOTE

The **ERASE FORMAT** item only appears when the current medium is **SD1** or **SD2**.

3. Select the format method, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



### NOTE

Press the **MENU [JOG]** button to cancel formatting.

4. Press and hold the **MULTI JOG** dial to start formatting. The following pop-up message will appear during formatting.



When **QUICK FORMAT** selected

5. When formatting completes, the pop-up disappears and the Home Screen opens.

### NOTE

The writing speeds to SD cards and other storage media that use flash memory tend to decrease after writing occurs repeatedly.

If the writing speed decreases, this could have a negative impact on recording.

Using the **ERASE FORMAT** function of this unit should restore the writing speed of an SD card.\*

For this reason, we recommend using the **ERASE FORMAT** function at the following times.

- Whenever the card has been written to until it became completely full
- On a regular schedule (about once per month)
- Before starting important recordings

\* Writing speed might not be restored depending on the SD card condition (including malfunction and age).

## 3 – Preparation

### Setting the lock function

You can set the lock function to prevent this unit from being controlled from its front panel or an external device.

1. Press the **MEDIA** button while pressing the **HOME [INFO]** button on the front of the unit to open the **LOCK SETUP** screen.



2. Select the lock function to set, and open the lock function setting screen. (See "Menu operation procedures" on page 22.)



Lock function setting screen when **FRONT PANEL** item selected

#### FRONT PANEL

This locks the controls on the front of the unit.

**Options:** UNLOCK (default), LOCK

#### 232C/PARA/NETWORK

This locks external control from the **RS-232C** and **PARALLEL** connectors, as well as file transfer and remote control by Telnet using an FTP client application.

**Options:** UNLOCK (default), LOCK

#### REMOTE/KEYBOARD

This locks operation using a remote control connected to the **REMOTE** jack, a wireless remote control or a USB keyboard or numeric keypad.

**Options:** UNLOCK (default), LOCK

#### NOTE

The following operations are possible even when set to **LOCK**.

- Showing the Home Screen
- Changing settings on the **LOCK SETUP** screen
- Turning the power off with the **STANDBY/ON** button
- Adjusting the brightness of the display and various indicators

3. Confirm the setting and return to the Menu Screen.

### Opening the INFORMATION screen

While pressing the **SHIFT** button, press the **HOME [INFO]** button to show the operation status of the unit on the display.



#### Contents

##### CLOCK

Sampling frequency currently used for operation

##### INPUT

Currently set input

##### FILE

Currently set file type, quantization bit depth and file mode  
Recording date

##### FOLDER

Current folder now selected

#### NOTE

If **DIGITAL HLR**, **DIGITAL COAXIAL** or **IF-DA2 (Dante)** (only when IF-DA2 card installed) is selected, recording cannot be started from recording standby under the following conditions.

- If this unit is not digitally locked to the input source, "UNLOCK" will appear at the end of the input source name.
- If the input source is not audio, "Not Audio" will appear at the end of the input source name.
- If the sampling frequency set with the **SAMPLE** item on the **REC 3** page differs from the input source, "FS UNMATCH" will appear at the end of the input source name. If the sampling rate converter is active, however, recording will be possible even if the sampling frequency is different. (See "Using the sampling rate converter" on page 64.)

This chapter explains functions for playing back audio files stored on SD cards, USB flash drives and CDs.

This explanation assumes that you have already loaded an SD card, USB flash drive or CD, that contains audio files into the unit, that the unit is on, and that the current medium is set appropriately. (See “Selecting media” on page 29.)

## Files that can be played back

This unit can play back files in the following formats.

### USB flash drives, SD cards, data CDs

- MP3: 44.1/48kHz, 64/128/192/256/320kbps
- WAV/BWF: 44.1/48/96kHz, 16/24-bit

### Audio CDs

Commercial audio CDs, CD-R and CD-RW discs that have been created in the audio CD format

#### CAUTION

##### MP3 files that use VBR compression

Due to file format limitations, accurate location detection is not possible in VBR files. For this reason, when using functions that require points to be set in the middle of a track, including time skipping, call and A-B repeat playback (A point setting), slight differences might occur between the set point and the point where playback begins.

#### NOTE

This unit cannot play 96kHz WAV/BWF files on CDs.

#### TIP

Files of the above formats can be played back by this unit even if it was not used to record them. For example, you can use a computer or another audio device to write files that meet the above specifications to an SD card, USB flash drive or CD, and then play those files on this unit. This allows you to efficiently prepare materials for playback on this unit.

## Tracks and files

Audio data are recorded as “audio files” on media.

When the FILE TYPE item on the FILE TYPE screen is set to STEREO, stereo files will be handled as single tracks. When set to MONO {MIX}, mono files will be handled as single tracks. When set to MONO {2ch}, pairs of mono files will be handled as single tracks. (See “Setting the recording file format” on page 61.)

For this reason, when explaining playback and recording in this document, we call audio files “tracks” (and sometimes “songs”). When explaining media management and related topics, we call them “files”. Please understand that they are the same thing.

## Playback area

The range of tracks that can be selected for playback on the Home Screen is called the “playback area”.

For an audio CD, the play area will always be the entire disc. You can set the play area for CD-R/CD-RW discs, USB flash drives and SD cards that contain MP3 or WAV files.

Limiting the play area makes selection of playback tracks easier when you have numerous recorded files on the SD card, USB flash drive or CD.

## Setting the playback area

Use the PLAY AREA item on the PLAY 1 page to set the playback area.

1. Select the PLAY AREA item on the PLAY 1 page to open the PLAY AREA screen. (See “Menu operation procedures” on page 22.)



2. Set the desired playback area.

Option	Meaning
ALL (default)	Play all the files on the medium.
FOLDER	Play all the files in the folder that contains the currently selected file.
PLAYLIST	Play all the files that have been assigned to the playlist. If there is no playlist defined, a “No PLAYLIST” pop-up message appears.


#### NOTE

When using a data CD, you can select ALL or FOLDER. When using an audio CD, the ALL option is always used.

3. Confirm the setting and return to the Menu Screen.

#### NOTE

The current playback area setting appears at the lower right of the Home Screen.

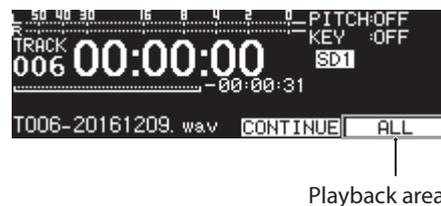

## Selecting the current folder or current playlist

When the playback area is set to FOLDER or PLAYLIST, the Home Screen is open and the unit is stopped, you can use the ◀◀ [A-B] and ▶▶ [INPUT] buttons on the unit to select a folder or playlist as the playback area.

This folder or playlist is called the “current folder” or “current playlist”.

#### NOTE

- You can also select the current folder or current playlist on the BROWSE screen. (See “5 – Working with Folders and Files (BROWSE screen)” on page 42.)
- Up to 999 tracks can be played back by this unit if the formats of the audio files are MP3 or WAV. If a medium with more than 999 tracks is loaded in this unit, 999 tracks selected according to the unit’s system rules can be played. Any other tracks will not be playable or editable.
- Up to 99 tracks can be played back by this unit if the format is audio CD.

# 4 – Playback

## Setting the play mode

The mode used to play tracks in the playback area can be set.

1. Select **PLAY MODE** on the **PLAY 1** page to open the **MODE AREA** screen. (See “Menu operation procedures” on page 22.)



2. Set the desired play mode.

Option	Meaning
CONTINUE (default)	Play tracks in the playback area in track number order.
SINGLE	Play the selected track, and stop after playback.
PROGRAM	Play in program order set in advance. (See “Program playback” on page 33.)
RANDOM	Play all tracks in the playback area in random order regardless of track number. Stop playback after all tracks have been played.

3. Confirm the setting and return to the Menu Screen.

### NOTE

- Unless otherwise specified, explanations in this manual assume that the playback mode is set to **CONTINUE**.
- The current playback mode appears in the lower right of the Home Screen.

## Basic playback operations

This section explains basic playback operations, including starting, stopping and pausing.

This explanation assumes that you have already made necessary connections, turned the unit on, loaded a card or drive that contains audio files, selected the current medium, and opened the Home Screen on the display.

### Playing tracks

Press the **PLAY** button on the unit or the remote control to start playback.

If the medium does not contain any audio files that the unit can play, the Home Screen will appear as shown below.



### Stopping playback:

Press the **STOP** button.

### Pausing playback:

Press the **PAUSE [CALL]** button.

## Selecting tracks for playback

This section explains how to select a track when there are multiple tracks available for playback. The two ways to select tracks are moving (skipping) backward/forward by track number and specifying track numbers directly.

### Skipping to earlier and later tracks

Turn the **MULTI JOG** dial (or use the remote control **◀◀ [I◀◀]** and **▶▶ [▶▶I]** buttons) to skip to earlier and later tracks.

- During track playback, turn the **MULTI JOG** dial counterclockwise (or press the remote control **◀◀ [I◀◀]** button) to return to the track beginning. When already at the beginning of a track, turn the **MULTI JOG** dial counterclockwise (or press the remote control **◀◀ [I◀◀]** button) to skip to the beginning of the previous track.
- When at the beginning or middle of a track, turn the **MULTI JOG** dial clockwise (or press the remote control **▶▶ [▶▶I]** button) to skip to the beginning of the next track.

After selecting a track, press the **PLAY** button (or remote control **PLAY** button) to start playing it back. Press the **PAUSE [CALL]** button to pause playback at the beginning of the selected track.

### NOTE

- Only tracks in the current playback area can be played back.
- The track number, file name and other file information for the currently playing file appear on the display.
- Turn the **MULTI JOG** dial as necessary to move between tracks.

### Selecting tracks directly

On the **BROWSE** screen, turn the **MULTI JOG** dial (or use the remote control **◀◀ [I◀◀]** and **▶▶ [▶▶I]** buttons) to select the track you want to play, and press the **PLAY** button (or remote control **PLAY** button) to start playback.

## Searching backward and forward

You can search backward and forward within a track while listening to it.

1. Play or pause the desired track.
2. Press and hold the ◀◀ [A-B]/▶▶ [INPUT] button on the unit (or remote control ◀◀ [◀◀]/▶▶ [▶▶] button). Searching backward/forward will start.
3. To stop searching, release the button you are pressing. The state (playing or paused) before searching started will resume.


### NOTE

- If the end of a track is reached when searching forward, searching will continue from the beginning of the next track.
- If the end of the last track is reached when searching forward, playback will pause.
- If the beginning of a track is reached when searching backward, searching will continue from the end of the track before it.
- If the beginning of the first track is reached when searching backward, playback will pause.

## Jog playback

You can put the unit into jog playback mode, and use the **MULTI JOG** dial to search in 10msec increments.

1. Press the **MENU [JOG]** button while pressing the **SHIFT** button to activate jog playback mode. The **PLAY** and **PAUSE [CALL]** buttons on the unit will blink, and the track elapsed time will be shown with 10msec increments on the Home Screen in **TRACK** display mode.

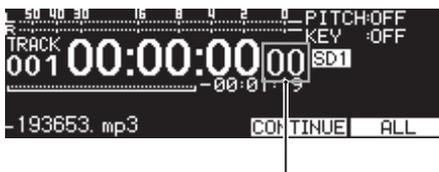

2. Turn the **MULTI JOG** dial to search.
3. To end jog playback mode, press the **STOP**, **PLAY** or **PAUSE [CALL]** button to use its function (stop, playback from or pause at the search position).

## Program playback

By setting a program in advance, you can play the desired tracks in the desired order. Up to 99 tracks can be assigned to the program.

### Setting the program

Follow the procedures below to set the program.

1. When stopped, set the playback mode to **PROGRAM**. (See "Setting the play mode" on page 32.)
2. Turn the **MULTI JOG** dial to select a track number, and press the **MULTI JOG** dial to assign it to the program. This assigns the track to the program.
3. Repeat step 2 to assign desired tracks to the program in order. The program number and total time appear on the display.

### NOTE

- The same track can be assigned to the program multiple times.
  - While pressing the **SHIFT** button, press the **KEY [EDIT]** button to remove the last assigned track from the program.
  - If you try to assign more than 99 tracks to the program, a "PROGRAM FULL" pop-up will appear. Up to 99 tracks can be assigned to the program.
  - If the total time of the programmed tracks exceeds 99:59:59, "- :- - :- -" appears on the display.
4. Press the **PLAY** button to start program playback.

### NOTE

- When the playback mode is set to **PROGRAM**, playback is not possible if no tracks have been assigned to the program.
- When the playback mode is changed, all program data will be cleared.
- When stopped, pressing the **STOP** button will clear all program data
- Program data will be cleared when the unit is turned off.

## 4 – Playback

### Using the pitch control function

Using the pitch control function, you can change the pitch (sound frequency and playback speed) of playback.

#### Turning the pitch control function on/off

1. When the Home Screen is open, press the **PITCH [BROWSE]** button to open the pitch setting pop-up window, and press the **MULTI JOG** dial to turn pitch control on/off.



2. Press the **MENU [JOG]** or **PITCH [BROWSE]** button to close the pitch setting window, and complete the setting.

#### NOTE

- The pitch control function setting is shown at the top right of the Home Screen.



- If you turn the pitch control function on/off during playback, the playback sound might skip momentarily.

#### Adjusting the pitch

1. Press the **PITCH [BROWSE]** button to open the pitch setting pop-up window.
2. Turn the **MULTI JOG** dial to change the pitch.



**Setting range:** -15% – +15.0% (default: 0.0%) in 1% increments

3. Press the **MENU [JOG]** or **PITCH [BROWSE]** button to close the pitch setting window, and complete the setting.

#### NOTE

- Press and turn the **MULTI JOG** dial to change the pitch in 0.1% increments.
- The set pitch adjustment is retained even when the pitch control function is turned off and will be applied when the function is turned on again.

#### TIP

By using the key control and pitch control functions together, you can change the speed without changing the pitch. (See “Using the key control function” on page 34.)

### Using the key control function

The key control function can be used to change the key (pitch in semitones) during playback.

#### Turning the key control function on/off

1. When the Home Screen is open, press the **KEY [EDIT]** button to open the key setting pop-up window, and press the **MULTI JOG** dial to turn key control on/off.



2. Press the **MENU [JOG]** or **KEY [EDIT]** button to close the key setting window, and complete the setting.

#### CAUTION

- The key control function setting is shown at the top right of the Home Screen.



- When using the control function, the playback sound might seem to fluctuate. This is the result of special processing of the playback sound and is not a malfunction.

#### Setting the key

1. Press the **KEY [EDIT]** button to open the key setting pop-up window.
2. Turn the **MULTI JOG** dial to change the key.



**Setting range:** b6 – b1, 0 (default, no key change), #1 – #6

3. Press the **MENU [JOG]** or **KEY [EDIT]** button to close the key setting window, and complete the setting.

#### TIP

When both the key control and pitch control functions are on, the key control function sets the key (pitch in semitones) and the pitch control function sets the speed (but not the pitch). Therefore, you can use pitch control to change only the playback speed without changing the pitch when the key is set to 0 and the key control function is on.

## Using the repeat playback function

All tracks in the playback area can be played back repeatedly. Specified intervals within a track can also be played back (A-B repeat playback).

### Ordinary repeat playback settings

When the repeat playback function is on, operation depends on the playback mode setting.

Playback mode setting	Function
CONTINUE	Repeat playback of the playback area set on the <b>PLAY AREA</b> screen
SINGLE	Repeat playback of the current track
PROGRAM	Repeat playback of the entire program
RANDOM	Repeat playback in random order of the playback area set on the <b>PLAY AREA</b> screen

Follow the procedures below to turn the repeat playback function on.

1. Select **REPEAT** on the **PLAY 1** page to open the **REPEAT** screen. (See “Menu operation procedures” on page 22.)



2. Turn the repeat function on or off.  
**Options:** OFF (default), ON
3. Confirm the setting and return to the Menu Screen.

### A-B repeat playback settings

Specified intervals within a track can be played back (A-B repeat playback). Follow the procedures below to use A-B repeat playback.

1. When playing back or in playback standby, press the **◀◀ [A-B]** button while pressing the **SHIFT** button at the point where you want the repeat playback interval to start (A). On the Home Screen, “-- A-B Repeat --” and “A-” appear in a pop-up.



2. Press the **◀◀ [A-B]** button again while pressing the **SHIFT** button at the point where you want the repeat playback interval to end (B). On the Home Screen, “-- A-B Repeat --” and “A-B” appear in a pop-up.



This confirms the set interval (A-B) and starts A-B repeat playback.

### NOTE

- Press the **STOP** button on the unit or the remote control to clear the set interval (A-B).
- The A-B repeat playback interval cannot include more than one track.

## Using the auto cue function

If the auto cue function is on, when a track is selected, the unit will skip any silence at the beginning of the track and pause at the point where sound actually starts. As a result, sound will be output immediately after playback starts.

The threshold level (auto cue level) for the audio signal detection used by the auto cue function can also be set. In short, the unit will treat signals above the auto cue level as sound and signals below the auto cue level as silence.

### NOTE

When the auto cue function is on, if a track is selected during playback, it will start playing from the point where sound is first detected.

If a track is selected when playback is paused, playback will pause at the point where sound is first detected.

Select **AUTO CUE** on the **PLAY 1** page to open the **AUTO CUE** screen. (See “Menu operation procedures” on page 22.)



### NOTE

When the **AUTO CUE** screen is open, use the **◀◀ [A-B]** and **▶▶ [INPUT]** buttons to move the cursor between setting items.

### Turn the auto cue function on/off

Select **MODE** and turn the auto cue function on/off.

**Options:** OFF (default), ON

### Set the auto cue level

Select **LEVEL** and set the auto cue level.

**Options:** -72dB, -66dB, -60dB, -54dB (default), -48dB, -42dB, -36dB, -30dB, -24dB

### NOTE

When the auto cue function is on, the **AUTO CUE** icon appears in the playback screen function activation status area.

## 4 – Playback

### Using the auto ready function

If the auto ready function is on, after playback of a track completes, playback will pause at the beginning of the next track.

1. Select **AUTO READY** on the **PLAY 1** page to open the **AUTO READY** screen. (See “Menu operation procedures” on page 22.)



2. Turn the auto ready function on or off.  
**Options:** OFF (default), ON
3. Confirm the setting and return to the Menu Screen.

#### NOTE

- When the auto ready function is on, the **AUTO READY** icon appears in the playback screen function activation status area.
- If the auto cue function is also on, playback will pause at the point where sound starts rather than the beginning of the track.
- When playing back using the flash start function, the auto ready function is disabled.

### Using the incremental playback function

When the incremental playback function is on, press the main unit or remote control **PLAY** button during playback to start playback from the beginning of the next track, or press the main unit or remote control **STOP** button during playback to pause at the beginning of the next track.

1. Select **INCREMENTAL PLAY** on the **PLAY 2** page to open the **INCREMENTAL PLAY** screen. (See “Menu operation procedures” on page 22.)



2. Turn the incremental playback function on or off.  
**Options:** OFF (default), ON
3. Confirm the setting and return to the Menu Screen.

#### NOTE

- When the incremental playback function is on, the **INC. PLAY** icon appears in the playback screen function activation status area.
- When the incremental playback function is on and playback is paused, press the main unit or remote control **PLAY** button to start playback from that point.  
When playback is paused press the main unit or remote control **STOP** button to stop playback. When the last track is playing back, press the main unit or remote control **PLAY** button to start playback from the beginning of the first track in the playback area, or press the main unit or remote control **STOP** button to pause at the beginning of the first track in the playback area.

### Playing back in mono

Stereo audio files can be played back in mono. The left and right track channel signals are mixed together, and this mix is output from both the left and right channels.

1. Select **MONO MIX** on the **PLAY 2** page to open the **MONO MIX** screen. (See “Menu operation procedures” on page 22.)



2. Turn the mono playback function on or off.  
**Options:** OFF (default), ON
3. Confirm the setting and return to the Menu Screen.

## Using the ducking function

When the ducking function is active, signals input to this unit and playing back from the recorder are mixed and output. Select **DUCKING** on the **PLAY 2** page to open the **DUCKING** screen. (See “Menu operation procedures” on page 22.)



### NOTE

- When the **DUCKING** screen is open, use the **◀ [A-B]** and **▶ [INPUT]** buttons to move the cursor between setting items.
- When the ducking function is active, ducking tally signals are output from the **PARALLEL** connector.

### Input source information display

This shows the selected input source. (See “Selecting the input source” on page 56.)

### Setting the ducking function operation mode

Select **MODE**, and set the ducking function operation mode.

Option	Meaning
OFF (default)	The ducking function is disabled.
ATT. INPUT	When the recorder playback signal level exceeds the <b>THRESHOLD</b> level setting, the analog input signal is reduced by the <b>ATTENUATION</b> level setting.
ATT. PLAYBACK	When the input signal level exceeds the <b>THRESHOLD</b> level setting, the recorder playback signal is reduced by the <b>ATTENUATION</b> level setting.

### Setting the ducking threshold level

Select **THRESHOLD**, and set the ducking operation threshold level.

**Options:** -30dBFS, -24dBFS, -18dBFS, -12dBFS, -6dBFS (default)

### Setting the ducking attenuation (reduction) level

Select **ATTENUATION**, and set the ducking attenuation (reduction) level.

**Options:** -INFINITY, -24dB, -18dB, -12dB, -9dB, -6dB, -3dB (default)

### Setting the time until ducking stops after the signal goes below the threshold level

Select **RELEASE TIME**, and set the time until ducking stops after the signal goes below the threshold level.

**Options:** 0.1sec (default), 0.5sec, 1.0sec, 1.5sec, 2.0sec, 2.5sec, 3.0sec, 3.5sec, 4.0sec, 4.5sec, 5.0sec

## Using the EOM function

Turn the EOM function on to output an EOM tally signal from the **PARALLEL** connector when the remaining time of the track or playback area becomes less than a set time.

### Setting the EOM tally output trigger

1. Select **EOM TRACK** or **EOM MEDIA** on the **PLAY 2** page. (See “Menu operation procedures” on page 22.)



**EOM TRACK:** Trigger with track remaining time

**EOM MEDIA:** Trigger with playback area remaining time

2. Set the amount of remaining time for the track or playback area that will trigger EOM tally signal output.

**Options:** OFF (default), 0sec – 99sec (in 1sec intervals)

### NOTE

If **EOM TRACK** is set to 0s a pulse of about 100ms will be output when the track finishes.

3. Confirm the setting and return to the Menu Screen.

### Using this function

1. Connect the device to receive the EOM tally signal to the **PARALLEL** connector.
2. Turn this unit and the receiving device on.
3. Start playback on this unit.

When the remaining time of the track or playback area becomes less than the set time, an EOM tally signal will be output from the **PARALLEL** connector.

When when both track and playback area triggers are set, an EOM tally signal will be output when either condition is met.

## 4 – Playback

### Using the resume function

When the resume playback function is on, playback can restart from the point where it was last stopped (resume point). The following actions will clear the resume point.

- Ejecting the current media
- Changing the playback area
- Changing the playback mode
- Changing the contents of the current media (by recording, editing, deleting, etc.)

Use the menu to turn the resume playback function on/off.

1. Select **RESUME** on the **PLAY** 3 page to open the **RESUME** screen. (See “Menu operation procedures” on page 22.)



2. Turn the resume playback function on or off.  
**Options:** OFF, ON (default)
3. Confirm the setting and return to the Menu Screen.

#### NOTE

- If there are no playable tracks (when the playback mode is set to **PROGRAM**), all the counters will have a value of zero.
- If there is no resume point (no time has been set as the resume point), the beginning of the playback track will become the resume point.

### Using the time skip function

When playing back or in playback standby, you can skip forward and backward by the amount of time set using the time skip function.

When playing back or in playback standby, press the main unit ◀◀ [A-B] or ▶▶ [INPUT] button (or remote control ◀◀ [I◀◀] or ▶▶ [▶▶I] button) to skip from the current position by the amount of time set with the time skip function. After skipping time, the same operation will resume.

1. Select **TIME SKIP** on the **PLAY** 3 page to open the **TIME SKIP** screen. (See “Menu operation procedures” on page 22.)



2. Set the amount of time skipped using the time skip function.  
**Range:** OFF, 1sec – 60sec (default, 1sec intervals), 5min, 10min

#### NOTE

Skipping is disabled when the time skip function is **OFF**.

3. Confirm the setting and return to the Menu Screen.

#### NOTE

- If you press the main unit ◀◀ [A-B] button (or remote control ◀◀ [I◀◀] button) when there is less time from the beginning of the track than the amount set by the track skip function, it will skip to the beginning of the current track.
- If you press the main unit ◀◀ [A-B] button (or remote control ◀◀ [I◀◀] button) when less than one second from the beginning of a track, it will skip backward from the end of the previous track by the amount of time set with the track skip function.
- If it is the first track in the current media or program, it will pause at the beginning of the current track. If the playback mode is set to **RANDOM** and you press the main unit ◀◀ [A-B] button (or remote control ◀◀ [I◀◀] button) when there is less time from the beginning of the track than the amount set by the track skip function, it will skip to the beginning of the track.
- If you press the main unit ▶▶ [INPUT] button (or remote control ▶▶ [▶▶I] button) when there is less time to the end of the track than the amount set by the track skip function, it will skip to the beginning of the next track. If it is the last track in the current media or program, however, playback will pause at the end of the current track.

## Setting playback start timing

You can set the timing that playback starts when this unit is in playback standby and a fader on an external controller is raised from its lowest position (–∞).

1. Select **FADER DELAY** on the **PLAY** 3 page to open the **FADER START DELAY** screen. (See “Menu operation procedures” on page 22.)



2. Set the playback start timing.  
**Range:** OFF (default), 100msec, 200msec, 300msec
3. Confirm the setting and return to the Menu Screen.

## Setting the sampling rate of output audio

You can output audio using a set sampling rate regardless of the sampling rates of the files.

1. Select the **OUTPUT RATE** item on the **PLAY** 3 page to open the **OUTPUT RATE** screen. (See “Menu operation procedures” on page 22.)



2. Set the sampling rate used for output audio.

Option	Meaning
AUTO (default)	Use file sampling rates.
44.1kHz	Convert to 44.1 kHz and output.
48kHz	Convert to 48 kHz and output.
96kHz	Convert to 96 kHz and output.
EXTERNAL	Use sampling rate synchronized to input source clock. When an analog input is selected, this setting functions as AUTO.

### NOTE

When set to **EXTERNAL**, if synchronization with the external clock is not possible, file sampling rates will be used.

3. Confirm the setting and return to the Menu Screen.

### NOTE

Audio output from an IF-DA2 (Dante) card will use the card's operating sampling rate regardless of this setting.

## Using the call function

The call function returns to the call point (last point playback started from playback standby) and resumes playback standby. When in playback standby, press the **PAUSE [CALL]** button to return to the last point playback started from a paused state and resume playback standby.

The following actions will clear the call point.

- Turning the unit off
- Ejecting the current media
- Changing the playback area
- Changing the playback mode
- Changing the contents of the current media (by recording, editing, deleting, etc.)


### NOTE

- If the call point is not set, pressing the **PAUSE [CALL]** button will cause a “No Call Point” pop-up warning message to appear.
- You cannot use the call function when the playback mode is set to **PROGRAM** or **RANDOM**.

## Setting the call function

When in playback standby, press the **PAUSE [CALL]** button to search for the call point and resume playback standby.

1. Select **CALL** on the **PLAY** 3 page to open the **CALL FUNCTION** screen. (See “Menu operation procedures” on page 22.)

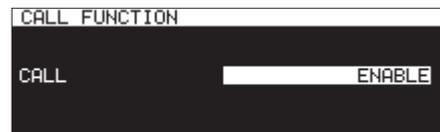

2. Turn the call function on or off.

### Options

- DISABLE:** Do not use call function
- ENABLE (default):** Use call function

### NOTE

If the **CALL FUNCTION** screen setting is **DISABLE**, the unit will not search for call points.

3. Confirm the setting and return to the Menu Screen.

## 4 – Playback

### Using the link playback function

By using the link playback function, you can link the playback operations of a master unit to a slave unit.

The slave unit can be used as a playback backup.

The linked operations are playing back, entering playback standby, stopping, track skipping and searching. The synchronization of actions in response to operations, however, cannot be guaranteed.

In order to reduce delays in operation, whenever possible, use the same types of media from the same manufacturers with the same contents. In addition, make the same playback settings (auto cue, auto ready and other functions) and set the same flash load status, for example, on both units.

 
Clock is not synchronized, so a small difference in playback time could occur after playing back for a long time. Moreover, the digital connectors used for the link playback function cannot be used for audio input and output.

### Making connections for link playback


Connect a digital output connector on the master unit to a digital input connector on the slave unit.

Connect either the **SPDIF IN/OUT** (RCA) or **AES/EBU IN/OUT** (XLR) connectors.

Master device



Slave device

 

### Making link playback settings

Select **LINK PLAY** on the **UTILITY** page to open the **LINK PLAY** screen. (See “Menu operation procedures” on page 22.)



#### NOTE

When the **LINK PLAY** screen is open, use the **◀ [A-B]** and **▶ [INPUT]** buttons to move the cursor between setting items.

### Making link playback mode settings

Select **MODE**, and set whether the unit is the master or the slave during link playback.

**Options:** OFF (default), MASTER, SLAVE

### Setting the link playback connector

Select **TERMINAL**, and set the connector to use for link playback.

Option	Meaning
COAXIAL (default)	SPDIF IN/OUT connectors used
XLR	AES/EBU IN/OUT connectors used

### Using the flash start function

The flash start function allows playback to be started immediately for tracks that have been registered in advance.

The starting points for up to 96 tracks can be loaded into memory so that playback of them can be started immediately. This can be controlled using a USB keyboard connected to the front of the unit, an external device connected to the **PARALLEL** connector on the back of the unit or a TASCAM RC-SS150 (sold separately) flash start remote control unit.

1. Set the playback area. (See “Playback area” on page 31.)  
Set the current playback area to a playlist or folder that contains the tracks you want to flash start.
2. Set the playback mode to **CONTINUE** or **PROGRAM**. (See “Setting the play mode” on page 32.)

#### NOTE

If the playback mode is set to **RANDOM**, flash loading is not possible.

3. When stopped, press the **STOP [LOAD]** button while pressing the **SHIFT** button on the unit (SS-CDR250N only) or press a flash load button on an external controller.  
This unit will load the starting point data for the tracks in the playback area in sequence.  
When the playback mode setting is **CONTINUE**, they will be loaded in order from the first track. If it is **PROGRAM**, they will be loaded in program order.  
While loading, a “Loading Flash Play Data” pop-up message appears on the Home Screen.  
When loading completes, the **FLASH LOAD** icon appears on the Home Screen.

#### NOTE

- If the playback mode is set to **RANDOM**, pressing the **STOP [LOAD]** button while pressing the **SHIFT** button on the unit (SS-CDR250N only) or pressing a flash load button on an external controller will open a “Cannot Select” pop-up warning message, and data will not be loaded.
- If the playback mode is set to **SINGLE**, pressing the **STOP [LOAD]** button while pressing the **SHIFT** button on the unit (SS-CDR250N only) or pressing a flash load button on an external controller will load tracks in order from the first track in the playback area in the same way as if set to **CONTINUE**.

4. When the **FLASH LOAD** icon appears on the Home Screen, you can use a USB keyboard connected to the front of the unit or an external device connected to the **PARALLEL** connector to flash start tracks.

You can use Ctrl + function (F1–F12) keys to flash start tracks 1–12. (See “List of keyboard operations” on page 97.)

When using the **PARALLEL** connector, you can flash start tracks 1–20. (See “PARALLEL connector overview” on page 16.)

#### TIP

If the playback area is set to **PLAYLIST**, you can efficiently set flash starting for desired tracks by assigning them to a playlist and selecting it as the current playlist. (See “Playback area” on page 31.), (See “7 – Editing Playlists (USB flash drives/SD cards only)” on page 50.)

# 5 – Working with Folders and Files (BROWSE screen)

You can manage audio files on SD cards and USB flash drives in a folder structure. You can manage MP3 and WAV files on a data CD in a folder structure. (See “6 – Using the audio CD BROWSE screen (SS-CDR250N only)” on page 49.)

After selecting a folder or file to work with on the **BROWSE** screen, you can open a folder or file pop-up menu.

When using an SD card or USB flash drive, you can create folders, change the names of folders and files, delete them and assign files to playlists, for example, in this menu. In addition, from the **BROWSE** screen, you can move and copy folders and files between folders.

When using a data CD that contains MP3 or WAV files, they cannot be edited or added to playlists on the **BROWSE** screen. If the data CD is unfinalized, however, folders can be created on the **BROWSE** screen.

When using an audio CD, the **BROWSE** screen for audio CDs will be shown. (See “Opening the audio CD BROWSE screen” on page 49.)

## NOTE

- Using a computer to read the contents of SD cards and USB flash drives, you can change the folder structure, edit the names of folders and files, and delete folders and files, for example.
- Making changes with a computer, however, could cause the order of the files to change when played back on the unit.

## Differences between functions on the BROWSE screen for audio CDs and data CDs

- Track names cannot be edited on data CDs.
- Track names (CD-TEXT) can be edited on unfinalized audio CDs.
- Folders can be created on data CDs but not on audio CDs.

## Differences between functions on the BROWSE screen for CDs and USB flash drives/SD cards

- Folder and file editing operations cannot be used on data CDs.
- Track names cannot be edited on finalized audio CDs.
- Folders cannot be created on finalized data CDs.
- CD tracks cannot be added to a playlist.


## Opening the BROWSE screen

In the following examples, we assume that an SD card is loaded and that SD1 is selected as the current medium. (See “Selecting media” on page 29.)


When the playback area is **ALL** or **FOLDER** and the unit is playing back, in playback standby or stopped, press the **PITCH [BROWSE]** button while pressing the **SHIFT** button to open the **BROWSE** screen. (See “Playback area” on page 31.)

The first time, the contents of the current folder on the current medium will be shown.

After the first time, the contents of the last shown medium or folder will be shown again.

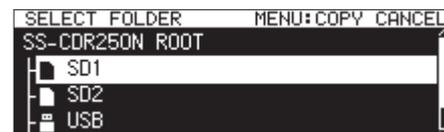

Medium selected on the BROWSE screen

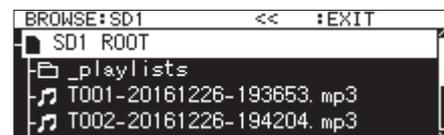

SD1 ROOT open on the BROWSE screen

## NOTE

To return to the media selection screen, on the **ROOT** level screen of the medium, press the **MENU [JOG]** or **◀◀ [A-B]** button.

## 5 – Working with Folders and Files (BROWSE screen)

### Navigating the BROWSE screen

On the BROWSE Screen, folders appear in a list in the same way files are shown on a computer.

When the BROWSE screen is open, use the **MULTI JOG** dial or ◀◀ [A-B]/▶▶ [INPUT] buttons (or remote control F3/F4 or ◀◀ [◀◀]/▶▶ [▶▶] buttons) to select a folder or file for use.

- Press the **MULTI JOG** dial to open a folder or file pop-up menu. (See “Folder operations” on page 43.), (See “File operations” on page 44.)
- Turn the **MULTI JOG** dial or press the remote control **F3/F4** buttons to select a folder or file inside the same folder.
- Press the main unit ◀◀ [A-B] button (or remote control ◀◀ [◀◀] button) to move up one level. Press the main unit ▶▶ [INPUT] button (or remote control ▶▶ [▶▶] button) when a folder is selected on the second line or below to open that folder. You can also change levels when a folder is selected by turning the **MULTI JOG** dial to open the pop-up folder menu and select the **EXIT** or **ENTER** item. If the top line of the BROWSE screen is selected, the **EXIT** item that moves up one level will appear. If the second or later line is selected, the **ENTER** item that moves down one level will appear.
- Press the **HOME [INFO]** button (or remote control **F2** button) to return to the Home Screen.
- Press the **MENU [JOG]** button to return to the Menu Screen.
- When a folder or file is selected, press the main unit or remote control **PLAY** button to return to the Home Screen and play that folder or file.  
If the playback area is **FOLDER**, the selected folder will become the current folder.
- When a folder or file is selected, press the **PAUSE [CALL]** button to return to the Home Screen and enter playback standby at the beginning of that folder or file.  
If the playback area is **FOLDER**, the selected folder will become the current folder.
- When a folder or file is selected, press the **SHIFT** button to scroll file and folder names that are not shown completely.

### Icons on the BROWSE screen

The icons that appear on the BROWSE Screen are as follows.

#### Media icons

The icon for the selected medium (□/📁/📀/📁) followed by the word “ROOT” will appear.

- icon: SD card
- 📁 icon: USB flash drive
- 📀 icon: CD
- 📁 icon: FTP

#### Playlists

The file name appears after the 📁 icon.

The 📁 icon appears for the current playlist.

#### Plain folder

The file name appears after to the 📁 icon.

The 📁 icon appears for the current folder.

#### Audio file

The audio file name appears after the 📁 icon.

#### Other files

The file name appears after to the 📁 icon.

#### NOTE

To show the contents of the CD on the BROWSE screen, set the current medium to CD.

# 5 – Working with Folders and Files (BROWSE screen)

## Folder operations

Select the desired folder on the **BROWSE** Screen and press the **MULTI JOG** dial to open the pop-up folder menu.



Turn the **MULTI JOG** dial to select the desired operation, and press the **MULTI JOG** dial to execute it as follows.

### NOTE

- When using an SD card or USB flash drive, all the functions in the folder menu can be executed. When using a data CD, some of the functions cannot be executed.
- When a protected SD card is loaded in the unit, the **RENAME**, **DELETE** and **CREATE FOLDER** items cannot be used. (See “SD card write-protection switches” on page 28.)

### ENTER/EXIT

Press the **MULTI JOG** dial when the **ENTER** item is shown to enter the selected folder and view its contents as a list.

Press the **MULTI JOG** dial when the **EXIT** item is shown to close the selected folder and move up one level.

### RENAME

Open the **RENAME** screen where you can edit the name of the selected folder. (See “Editing folder and file names” on page 45.)

### DELETE

Delete the selected folder. (See “Deleting folders and files” on page 45.)

### UNDO

Immediately after deleting a folder or file, you can undo the deletion. (See “Undoing edit menu operations (UNDO)” on page 72.)

### COPY

Copy the selected folder. (See “Copying folders and files” on page 47.)

### MOVE

Move the selected folder. (See “Moving folders and files” on page 48.)

### SORT BY TIME

Reorder the folders and files shown by creation date.

### NOTE

Reordering is not possible when using a CD.

### SORT BY NAME

Reorder the folders and files shown by name.

### NOTE

Reordering is not possible when using a CD.

### SET TO CURRENT FOLDER

Set the selected folder as the current folder.

### GO TO CURRENT FOLDER

Move to the current folder.

### NOTE

- The current folder:
  - is the playback area when playback area is set to **FOLDER**
  - is where recorded files are saved
  - is where files are downloaded by download events when using the timer event function
- After creating a new folder for saving recorded files, follow the procedures above to make it the current folder.

### CREATE FOLDER

Create a new folder. (See “Creating new folders” on page 47.)

### INFO

Open a pop-up with the information about the selected folder (total number of files, total time, total capacity and last change date).



### CANCEL

Close the folder menu.

### NOTE

The following folder menu items will appear after a new folder is created using the **CREATE FOLDER** operation.

- **RENAME**
- **DELETE**
- **UNDO**
- **MOVE**

## 5 – Working with Folders and Files (BROWSE screen)

### File operations

Select the desired audio file on the **BROWSE** screen and press the **MULTI JOG** dial to open the pop-up file menu.



Turn the **MULTI JOG** dial to select the desired operation, and press the **MULTI JOG** dial to execute it as follows.

#### NOTE

- When using an SD card or USB flash drive, all the functions in the file menu can be executed. When using a CD, some of the functions cannot be executed.
- When a protected SD card is loaded in the unit, the **RENAME**, **DELETE**, **ASSIGN to PLAYLIST** and **COPY** items cannot be used. (See "SD card write-protection switches" on page 28.)

#### SELECT

Set the selected file as the current track.

#### RENAME

Open the **RENAME** screen where you can edit the name of the selected file. (See "Editing folder and file names" on page 45.), (See "Editing CD-TEXT (CD-R/CD-RW discs only)" on page 49.)

#### DELETE

Delete the selected file. (See "Deleting folders and files" on page 45.)

#### UNDO

Immediately after deleting a folder or file, you can undo the deletion. (See "Deleting folders and files" on page 45.)

#### COPY

Copy the selected file to a different folder. (See "Copying folders and files" on page 47.)

#### MOVE

Move the selected file. (See "Moving folders and files" on page 48.)

#### ASSIGN to PLAYLIST

Assign the selected file to the current playlist at the desired position. (See "Assigning files to a playlist" on page 46.)

#### SORT BY TIME

Reorder the files in the folder shown by creation date.

#### NOTE

Reordering is not possible when using a CD.

#### SORT BY NAME

Reorder the files in the folder shown by file name.

#### NOTE

Reordering is not possible when using a CD.

#### INFO

Information about the selected file (including file format and sampling frequency) is shown in a pop-up.

#### CANCEL

Close the file menu.

#### NOTE

The following operations are only possible when the **PLAY MODE** is set to **CONTINUE**.

- **RENAME**, **DELETE**, **UNDO**, **COPY**, **MOVE**, **SORT BY TIME**, **SORT BY NAME**

# 5 – Working with Folders and Files (BROWSE screen)

## Editing folder and file names

### NOTE

When using a data CD or a finalized audio CD, folder and file names cannot be edited.

1. Select the folder or file with the name you want to edit, and open the folder/file pop-up menu. (See “Folder operations” on page 43.), (See “File operations” on page 44.)
2. Select the **RENAME** item to open the **RENAME FOLDER**, **RENAME TRACK** or **RENAME FILE** screen.



Editing a file name

3. Edit the name.  
For details about how to edit the text, see “Editing text” on page 64.
4. After you finish editing the name, select **ENTER** to confirm it. A “**RENAMING. . .**” pop-up appears while the name is being changed.  
After renaming completes, the **BROWSE** screen reopens.

### CAUTION

- You can connect a USB flash drive or SD card to a computer and edit names from the computer. Doing so, however, could cause the order of the files to change when played back on the unit.
- On a text input screen, characters other than half-width (normal) English letters, numerals and symbols will not be shown. If text includes characters other than half-width English letters, numerals and symbols, opening a text input screen will delete them.
- The following symbols and punctuation marks cannot be used in text.

/ : \* ? " ' < > |

## Deleting folders and files

You can delete folders and files from SD cards and USB flash drives.

Deleting a folder will also delete all the files it contains.

This is only possible when the playback mode is set to **CONTINUE**.

### NOTE

Folders and files on CDs cannot be deleted.

1. Select the folder or file that you want to delete, and open the folder/file pop-up menu. (See “Folder operations” on page 43.) and (See “File operations” on page 44.)
2. Select the **DELETE** item, and press the **MULTI JOG** dial. The following pop-up message will appear.



When deleting a file

### NOTE

Press the **MENU [JOG]** button to cancel deletion.

3. Press the **MULTI JOG** dial.  
A second confirmation pop-up message will appear.
4. Press and hold the **MULTI JOG** dial to delete the selected folder or file from the USB flash drive or SD card.  
A “**Deleting Folder. . .**” pop-up, for example, appears while the folder or file is being deleted.  
When deleting completes, the **BROWSE** screen opens.

### NOTE

Immediately after deleting a folder or file, you can undo the deletion. (See “Undoing edit menu operations (UNDO)” on page 72.)

## 5 – Working with Folders and Files (BROWSE screen)

### Undoing folder or file deletion (UNDO)

Immediately after deleting a folder or file, you can undo the deletion.

Undoing (UNDO) is only possible when the playback mode is set to **CONTINUE**.

#### NOTE

Undoing (UNDO) is not possible when using a CD.

1. On the **BROWSE** screen, press the **MULTI JOG** dial to open the folder or file pop-up menu. (See “Folder operations” on page 43.), (See “File operations” on page 44.)
2. Select **UNDO**, and press the **MULTI JOG** dial to open a confirmation pop-up message.
3. Press the **MULTI JOG** dial to undo.  
A pop-up window appears while undoing.  
When undoing completes, the **BROWSE** screen opens.

#### NOTE

- Press the **MENU [JOG]** button to cancel undoing (UNDO).
- If there are no folders or files for which deletion can be undone, “Cannot UNDO” appears in a pop-up warning message.


### Assigning files to a playlist

Files can be assigned to the current playlist at the desired positions.

#### NOTE

CD tracks cannot be added to a playlist.

1. Select the desired file, and press the **MULTI JOG** dial to open the pop-up file menu. (See “File operations” on page 44.)
2. Select **ASSIGN** to **PLAYLIST**, and press the **MULTI JOG** dial to open the playlist assignment screen.

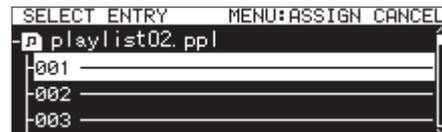

3. Turn the **MULTI JOG** dial to select the playlist entry position where you want to assign the file.
4. Press the **MULTI JOG** dial to open the playlist entry pop-up menu.



5. Select **ASSIGN**, and press the **MULTI JOG** dial to assign the file to the playlist.

#### NOTE

- A maximum of 100 entries can be assigned to a playlist. Flash playback, however, can only be used with 96 entries. See “7 – Editing Playlists (USB flash drives/SD cards only)” on page 50 for details.
- If you want to assign a file to a specific place in a playlist, see “Assigning files to playlists” on page 54.


# 5 – Working with Folders and Files (BROWSE screen)

## Creating new folders

### NOTE

When using an audio CD or finalized data CD, folders cannot be created.

1. Select the folder in which you want to create a new subfolder, and open the folder pop-up menu. (See “Folder operations” on page 43.)
2. Select **CREATE FOLDER**, and open the **CREATE FOLDER** screen.

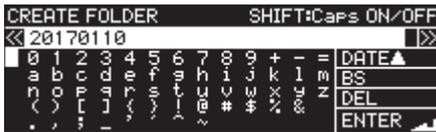

3. Input the folder name.  
For details about how to input a folder name, see “Editing text” on page 64.
4. After you finish editing the folder name, select **ENTER** to confirm it.  
A confirmation pop-up message will appear.



### NOTE

During folder creation, press the **MENU [JOG]** button to cancel it.

5. Press the **MULTI JOG** dial to create the new folder.  
A “Creating Folder...” pop-up appears while the new folder is being created.  
After creation of the new folder completes, the **BROWSE** screen reopens and the new folder becomes the current folder.

### NOTE

- The maximum number of folders that can be created on a single SD card or USB flash drive is 999.
- The maximum number of folders that can be created on a single CD is 250.
- Media that are 2GB or less might not allow the creation of the above maximum number of folders inside the root folder due to file system limitations and use conditions.
- The initial folder name shown will be the year, month and day of the built-in clock. (Example: 20150301)
- If this would be the same as the existing name, a three-digit number is added after the year, month and day provided by the built-in clock. (Example: 20150301\_001)


## Copying folders and files

1. Select the folder or file that you want to copy, and open the folder/file pop-up menu. (See “Folder operations” on page 43.) and (See “File operations” on page 44.)
2. Select **COPY**, and press the **MULTI JOG** dial to open the copy destination folder selection screen.


### NOTE

- You cannot copy from FTP to FTP.
  - Copying to or from a CD is not possible on the **BROWSE** screen. Use the **CD** menu **BURN TO CD/RIP TO MEMORY** item. (See “Copying files from USB flash drives and SD cards to blank CDs with or without conversion” on page 75.), (See “Copying files from CDs to USB flash drives and SD cards with or without conversion” on page 78.)
3. Move to the copy destination folder.

- If it is the first time copying, the media selection screen will open. Select the medium that contains the copy destination folder and then move to that folder.

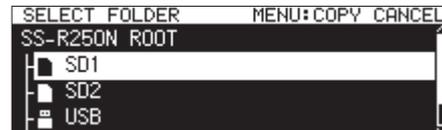


- If it is the second or later time, the last shown copy destination folder selection screen will reopen.

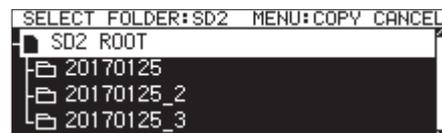

### NOTE

- During copy destination folder selection, **SELECT FOLDER** blinks on the **BROWSE** screen.
  - While selecting a copy destination folder, press the **MENU [JOG]** button to open a “CANCEL COPY?” confirmation pop-up message. Press the **MULTI JOG** dial to close the copy destination folder selection screen and return to the **BROWSE** screen.
  - While the copy destination is selected, select the **CANCEL** item from the folder or file menu, and press the **MULTI JOG** dial to close the copy destination folder selection screen and return to the **BROWSE** screen.
4. Select the copy destination folder, and open the folder pop-up menu.

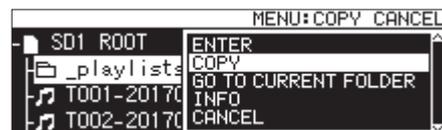

5. Select **COPY**, and press the **MULTI JOG** dial to open a confirmation pop-up message.



## 5 – Working with Folders and Files (BROWSE screen)

6. Press the **MULTI JOG** dial to copy the item.  
Press the **MENU [JOG]** button to cancel copying or change the copy destination.

### NOTE

If a folder or file with the same name already exists in the copy destination, a “Cannot Copy Folder” or “Cannot Copy File” pop-up message will open.

To change the name of the copied folder or file, press the **MULTI JOG** dial.

For details about how to input text, see “Editing text” on page 64.

Press the **MENU [JOG]** button to cancel copying.

7. A “COPYING Track...” pop-up message appears while the item is being copied.  
When copying completes, the pop-up disappears and the **BROWSE** screen reopens.

## Moving folders and files

1. Select the folder or file that you want to move, and open the folder or file pop-up menu. (See “Folder operations” on page 43.) and (See “File operations” on page 44.)
2. Select **MOVE**, and press the **MULTI JOG** dial to open the move destination folder selection screen.

### NOTE

Movement to or from CD or FTP is not possible.

3. Move to the selected destination folder.
  - If it is the first time moving, the media selection screen will open. Select the folder on the medium that contains the destination folder.
  - If it is the second or later time, the last shown move destination folder selection screen will reopen.

### NOTE

- During move destination folder selection, **SELECT FOLDER** blinks on the **BROWSE** screen.
  - While selecting a move destination folder, press the **MENU [JOG]** button to open a “CANCEL MOVE?” confirmation pop-up message. Press the **MULTI JOG** dial to close the move destination folder selection screen and return to the **BROWSE** screen.
  - While the move destination is selected, select the **CANCEL** item from the folder or file menu, and press the **MULTI JOG** dial to close the move destination folder selection screen and return to the **BROWSE** screen.
4. Select the folder or file that you want to move it to, and open the folder/file pop-up menu.
  5. Select **MOVE**, and press the **MULTI JOG** dial to open a confirmation pop-up message.
  6. Press the **MULTI JOG** dial to move the item.  
Press the **MENU [JOG]** button to cancel moving or change the move destination.

### NOTE

If a folder or file with the same name already exists in the copy destination, a “Cannot Move Folder” or “Cannot Move File” pop-up message will open.

To change the name of the moved folder or file, press the **MULTI JOG** dial.

For details about how to input text, see “Editing text” on page 64.

Press the **MENU [JOG]** button to cancel moving.

7. A “MOVING Track...” pop-up appears while the item is being moved.  
When moving completes, the pop-up disappears and the **BROWSE** screen reopens.

# 6 – Using the audio CD BROWSE screen (SS-CDR250N only)


You can use the **BROWSE** screen with an audio CD to select tracks for playback. In addition, you can edit CD-TEXT on unfinalized CD-R/CD-RW discs in the audio CD format.

In the following explanations, we assume that an audio CD is loaded and that **CD** is selected as the current medium.

## Opening the audio CD BROWSE screen

When the unit is playing back, in playback standby or stopped, press the **PITCH [BROWSE]** button while pressing the **SHIFT** button to open the audio CD **BROWSE** screen.

This screen shows the tracks in numerical order.

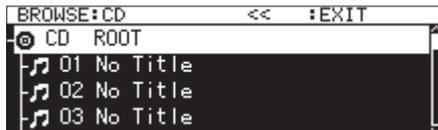


## Closing the BROWSE screen and returning to the Home Screen:

Press the **HOME [INFO]** button (or remote control **F2** button).

## Selecting a track to play

Follow the procedures below select tracks for playback from the audio CD **BROWSE** screen.

1. Open the **BROWSE** screen and select the track that you want to play.

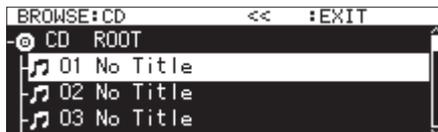

2. Press the **PLAY** button (or remote control **PLAY** button).  
When stopped, doing this will start playback of the selected track.  
When in playback standby, doing this will start playback standby at the beginning of the selected track.

### NOTE

You can also use the file menu **SELECT** item to set the selected track as the current track.


## Editing CD-TEXT (CD-R/CD-RW discs only)

If an unfinalized CD-R/CD-RW disc in the audio CD format is loaded, you can edit CD-TEXT on it using the following procedures.

1. Open the **BROWSE** screen and select the desired track.



2. Press the **MULTI JOG** dial to open the pop-up file menu. (See "File operations" on page 44.)

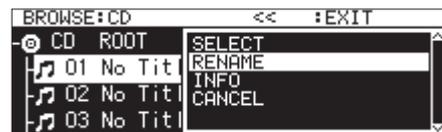

3. Select **RENAME**, and open the **RENAME TRACK** screen.



4. Edit the name.  
For details about how to edit the text, see "Editing text" on page 64.
5. After you finish editing the CD-TEXT, select **ENTER** to confirm the change.  
After CD-TEXT editing completes, the **BROWSE** screen re-opens.

### CAUTION

- If you press the **EJECT** button, a pop-up warning message will appear. Finalize the disc in order to save the CD-TEXT. (See "Finalizing CD-R/CD-RW discs" on page 73.)
- On a text input screen, characters other than half-width (normal) English letters, numerals and symbols will not be shown. If text includes characters other than half-width English letters, numerals and symbols, opening a text input screen will delete them.
- The following symbols and punctuation marks cannot be used in text.

/:\*?"' "<>|

# 7 – Editing Playlists (USB flash drives/SD cards only)

## Playlist editing overview

The first time that any SD card or USB flash drive is loaded in the unit, one empty playlist will be created on it automatically. You can also create new playlists.

Playback units in the playlist are called “entries”.

A maximum of 100 entries can be assigned to a playlist.

Only files on the medium that contains the created playlist can be assigned as entries.

To assign files from other media to a playlist, copy them to the current medium first.

An entry can be assigned and removed from a playlist even when it is being played back.

The entry that is currently being played, however, cannot be changed.

## Opening the playlist screen


### Opening the playlist screen from the BROWSE screen

You can view the playlist screen from the BROWSE screen.

If the medium was formatted by this unit, a `playlist01.ppl` playlist will automatically be created inside the `_playlists` folder in the first level of the ROOT folder. You can also create new playlists inside the `_playlists` folder. (See “Creating new playlists” on page 53.)

The following operation examples use `playlist01.ppl`, which is automatically created after formatting.

1. Press the **PITCH [BROWSE]** button while pressing the **SHIFT** button to open the BROWSE screen.
2. When the ROOT folder is selected, turn the **MULTI JOG** dial to select the `_playlists` folder.

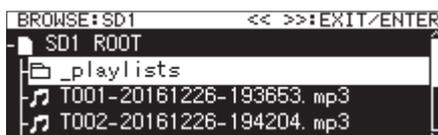

3. Press the **MULTI JOG** dial to open the pop-up folder menu.




4. Select **ENTER**, and press the **MULTI JOG** dial. This opens the `_playlists` folder where the `playlist01.ppl` playlist that was automatically created appears.



5. Select `playlist01.ppl`, and then press the **MULTI JOG** dial to open the playlist pop-up menu.



6. Select **ENTER** (if the current playlist is `playlist01.ppl`) or **LOAD** (if the current playlist is not `playlist01.ppl`), and press the **MULTI JOG** dial to show the files that have been assigned to `playlist01.ppl`. If nothing has been assigned yet, 100 blank entries will appear.

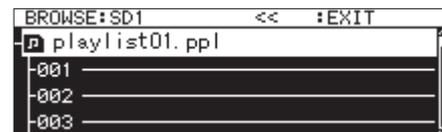


### NOTE

On this unit, `playlist01.ppl` will be the current playlist at first. After other playlists have been created, the playlist opened last becomes the current playlist.

### Opening the current playlist screen from the menu page

Select **PLAYLIST EDIT** on the **PLAYLIST** page to open the entry list screen for the current playlist.

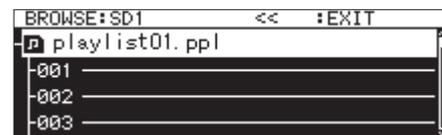

## Assigning files to a playlist

Files can be assigned to playlists.

See “Assigning files to playlists” on page 54 for details.

# 7 – Editing Playlists (USB flash drives/SD cards only)

## Playlist menu operations

When a playlist is selected, press the **MULTI JOG** dial to open the playlist menu.

This is a menu of operations that affect playlists.

### NOTE

If the **Playlists** folder or current playlist is selected when the playlist menu pop-up is opened, the **RENAME** and **DELETE** items will not be shown.

### LOAD

Load the selected playlist as the current playlist and open the entry list screen for the playlist. (See “Setting the current playlist” on page 51.)

### ENTER

Open the entry list screen for the selected current playlist.

### EXIT

Move up one screen level.

If the entry list screen is open, move to the **\_playlists** folder.

### RENAME

Change the name of the playlist. (See “Editing playlist names” on page 52.)

### SAVE AS

Save the current playlist in the same **\_playlists** folder with a different name. (See “Saving the current playlist with a different name” on page 52.)

### DELETE

Delete the playlist. (See “Deleting playlists” on page 52.)

### COPY

Copy the selected playlist file. (See “Copying folders and files” on page 47.)

### MOVE

Move the selected playlist file. (See “Moving folders and files” on page 48.)

### CREATE PLAYLIST


Create a new playlist. (See “Creating new playlists” on page 53.)

### NOTE

When a protected SD card is loaded in the unit, the **RENAME**, **DELETE** and **CREATE PLAYLIST** items cannot be used. (See “SD card write-protection switches” on page 28.)

### INFO

Shows playlist information.

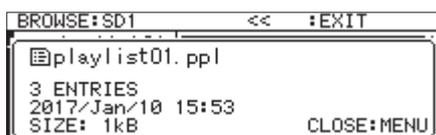

### CANCEL

Do no operation on the selected playlist and return to the playlist menu.

### NOTE

The following operations are only possible when the **PLAY MODE** is set to **CONTINUE**.

- **RENAME**, **DELETE**, **UNDO**, **COPY**, **MOVE**, **SORT BY TIME**, **SORT BY NAME**

## Setting the current playlist

1. Select the playlist you want to set as the current playlist, and open the playlist pop-up menu. (See “Playlist menu operations” on page 51.)
2. Select **LOAD**, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



### NOTE

Press the **MENU [JOG]** button to cancel playlist loading.

3. Press the **MULTI JOG** dial again to load the selected playlist as the current playlist. While loading, “LOADING PLAYLIST . . .” appears in a pop-up.



When loading completes, the entry list screen for the current playlist opens.


# 7 – Editing Playlists (USB flash drives/SD cards only)

## Editing playlist names

1. Select the playlist with the name you want to edit, and open the playlist pop-up menu. (See “Playlist menu operations” on page 51.)
2. Select **RENAME**, and open the **RENAME FILE** screen.



3. Edit the playlist name.  
For details about how to edit the playlist name, see “Editing text” on page 64.
4. After you finish editing the playlist name, select **ENTER** and press the **MULTI JOG** dial to confirm the name.  
A “**RENAMING . . .**” pop-up appears while the playlist name is being changed.

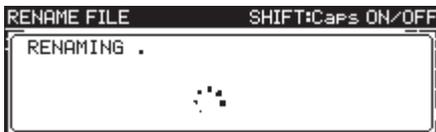

After renaming the playlist completes, the **BROWSE** screen reopens.

## Saving the current playlist with a different name

1. Select the playlist that is set as current, and open the playlist pop-up menu. (See “Playlist menu operations” on page 51.)
2. Select **SAVE AS**, and open the **PLAYLIST NAME** screen.



3. Edit the playlist name, and save it.  
For details about how to edit the playlist name, see “Editing text” on page 64.
4. After you finish editing the playlist name, select **ENTER** and press the **MULTI JOG** dial to confirm the name.  
A “**Saving File . . .**” pop-up appears while the playlist name is being saved.



When saving with a different name completes, the **BROWSE** screen opens.

## Deleting playlists

### NOTE

The current playlist cannot be deleted.

1. Select the playlist that you want to delete, and open the playlist pop-up menu. (See “Playlist menu operations” on page 51.)
2. Select **DELETE**, and press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.



### NOTE

Press the **MENU [JOG]** button to cancel playlist deletion.

3. Press the **MULTI JOG** dial again to open a second confirmation pop-up message.



4. Press and hold the **MULTI JOG** dial to delete the selected playlist.  
A “**DELETING FILE . . .**” pop-up appears while the playlist name is being deleted.



When deleting completes, the **BROWSE** screen opens.

### NOTE

When a playlist is deleted, the audio files themselves are not deleted. Only the information added to function as a playlist is deleted.

If you want to delete the audio files themselves, see “Deleting folders and files” on page 45.

# 7 – Editing Playlists (USB flash drives/SD cards only)

## Creating new playlists

New playlists can be created inside the `_playlists` folder.

1. On the **BROWSE** screen, select the `_playlists` folder or a playlist, and open the playlist pop-up menu. (See “Playlist menu operations” on page 51.)
2. Select **CREATE PLAYLIST**, and open the **CREATE PLAYLIST** screen.



3. Input the desired playlist name.  
For details about how to input playlist names, see “Editing text” on page 64.
4. After you finish inputting the playlist name, select **Enter** and press the **MULTI JOG** dial to confirm the name.  
A confirmation pop-up message will appear.



### NOTE

Press the **MENU [JOG]** button to cancel playlist creation.

5. Press the **MULTI JOG dial** to create the new playlist.  
A “CREATING...” pop-up appears while the playlist is being created.



After creation completes, the **BROWSE** screen reopens.

## Playlist entry menu operations

When a file that has been assigned to a playlist is selected, press the **MULTI JOG** dial to open the playlist entry menu.



This is a menu of operations that affect files that have been assigned to playlists.

### SELECT

Set the file that has been assigned to the selected playlist as the current track, and return to the Home Screen.

### ASSIGN

Assign the file to the playlist at the selected position. If the selected position already has an assigned file, it will be replaced. (See “Assigning files to playlists” on page 54.)

### CLEAR

Remove the file assigned to the playlist at the selected position. (See “Clearing file assignments from playlists” on page 54.) After clearing the assignment, the entry will become empty.

### RC-SS150 MODE

Change the list style playlist assignment screen to a screen for use with a TASCAM RC-SS150.

### LIST MODE

Change the playlist assignment screen for use with a TASCAM RC-SS150 to a list style screen.

### INFO

Show information about the files assigned to the playlist.

### NOTE

When a protected SD card is loaded in the unit, the **ASSIGN** and **CLEAR** items cannot be used. (See “SD card write-protection switches” on page 28.)

### CANCEL


Do no operation on the selected playlist file and return to the playlist file menu.

## 7 – Editing Playlists (USB flash drives/SD cards only)

### Assigning files to playlists

Use **ASSIGN** in the playlist entry menu to assign files to a playlist.

1. Select the entry position in the playlist that you want to assign, and open the playlist entry pop-up menu. (See “Playlist entry menu operations” on page 53.)

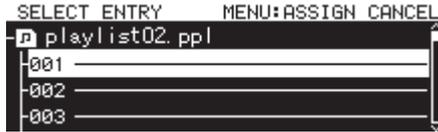

2. Select **ASSIGN**, and open the **SELECT TRACK** screen.
3. Select the file you want to assign, and press the **MULTI JOG** dial to open the pop-up file menu.



4. Select **ASSIGN**, and press the **MULTI JOG** dial to assign the file to the playlist.

#### NOTE

- A maximum of 100 entries can be assigned to a playlist. Flash playback, however, can only be used with 96 entries.
- For the procedures for assigning specific files to playlists, see “Assigning files to a playlist” on page 46.

### Clearing file assignments from playlists

To clear files assigned to playlists, use **CLEAR** in the playlist file menu.

This operation clears file assignments in playlists. The files themselves are not deleted.


1. Select the track in the playlist that you want to clear, and open the playlist entry pop-up menu. (See “Playlist entry menu operations” on page 53.)
2. Select **CLEAR**, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



#### NOTE

Press the **MENU [JOG]** button to cancel assignment clearing.

3. Press and hold the **MULTI JOG** dial to clear the assignment.
4. After clearing an assignment completes, the **BROWSE** screen reopens. After clearing the assignment, the entry will become empty.

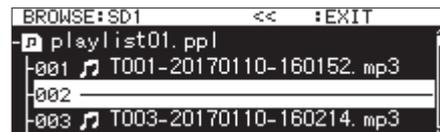

#### NOTE


If you want to delete the audio files themselves, see “Deleting folders and files” on page 45.

## 7 – Editing Playlists (USB flash drives/SD cards only)

### RC-SS150 MODE playlist assignment screen

This screen allows you to make playlist assignments following the layout of a TASCAM RC-SS150 (sold separately).

Turn the **MULTI JOG** dial to select an entry or page.

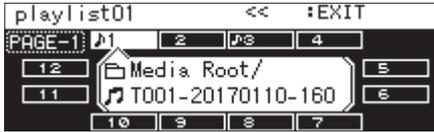

When an entry is selected, press the **MULTI JOG** dial to open the playlist entry menu pop-up and use the desired function. Operation procedures are the same as when using the list format.



Press the **MULTI JOG** dial when the page item at the top left of the screen is selected to open a screen where you can change the page that is edited.



Turn the **MULTI JOG** dial to change the page.

The setting range is 1–8.

Press the **MULTI JOG** dial to confirm the change and return to the RC-SS150 MODE playlist assignment screen.

# 8 – Recording

This unit can record to SD cards, USB flash drives and CD R/CD-RW discs (SS-CDR250N only) in the following formats.

## CD-DA

Fs=44.1kHz, bit=16bit

## MP3

44.1/48kHz sampling frequency, 64/128/192/256/320kbps

## WAV/BWF

44.1/48/96kHz sampling frequency, 16/24-bit

The following explanations assume that a recordable SD card, USB flash drive or CD R/CD-RW disc (SS-CDR250N only) has been loaded, necessary connections have been completed and the unit is on.

### CAUTION

- If the current medium is **CD** and recording will be in CD-DA format, a blank or unfinalized CD-R/CD-RW disc must be loaded.
- If the current medium is **CD** and recording will be in MP3 format, a blank CD-R/CD-RW disc must be loaded.

### NOTE

- The maximum numbers of tracks that can be recorded and folders that can be created are as follows. (This is the same for SD cards, USB flash drives and CD-R/CD-RW discs.)

Number of tracks: 999 maximum per media

Number of folders: 999 maximum per medium (except CDs) 250 maximum for CDs

- Media that are 2GB or less might not allow the recording of 999 tracks inside the root folder due to file system limitations. A maximum of 999 tracks can be recorded in subfolders. (This may differ according to use conditions.)
- When a protected SD card is loaded in the unit, recording is not possible. (See “SD card write-protection switches” on page 28.)
- WAV format files cannot be recorded to CD-R/CD-RW discs. WAV files can, however, be copied from SD cards and USB flash drives to CD-R/CD-RW discs. Data CDs that contain WAV files can also be played. (See “Creating data CDs” on page 76.)
- Audio files can also be copied with or without conversion from CDs to SD cards and USB flash drives. See “Copying files from USB flash drives and SD cards to blank CDs with or without conversion” on page 75 and “Copying files from CDs to USB flash drives and SD cards with or without conversion” on page 78 for details.
- Creating a file structure with eight or more levels of subfolders on a data CD could cause the reading speed to become noticeably slower. Please avoid doing this

## Unexpected power interruptions

The unit has a protection function to prevent the deletion of all recording tracks if an unexpected power interruption occurs while recording to an SD card, USB flash drive or CD. Data up to 25 seconds before the interruption will be protected.

### CAUTION

- The unit has a protection function, but all the files on the SD card or USB flash drive could be damaged or deleted due to other factors, including the characteristics of the medium, power interruption while writing to a system area or removal of the medium from the unit. For these reasons, as much as possible avoid power interruptions during recording and playback.
- When using a CD-R or CD-RW disc, the unit will try to recover recorded audio data. Since recovery sometimes fails, always try to avoid power interruptions during recording.
- This function was not designed for use with an external timer to turn off the power during recording, for example.

## Selecting the input source

Select one of the following input (recording) sources.

Option	Meaning
ANALOG UNBALANCED (default)	Input from <b>ANALOG IN (UNBALANCED) L/R</b> jacks
ANALOG BALANCED	Input from <b>ANALOG MIC/LINE IN (BALANCED) L/R</b> jacks
DIGITAL COAXIAL	Input from <b>SPDIF IN</b> jack
DIGITAL XLR	Input from <b>AES/EBU IN</b> jack
IF-DA2 (Dante) (appears only if IF-DA2 installed)	Input from IF-DA2 Dante interface card

Follow the procedures below to select the input source.

### NOTE

The input source cannot be changed during recording.

### Selecting from the Home Screen


1. Press the **▶▶ [INPUT]** button while pressing the **SHIFT** button to open the input source setting pop-up window. The input source setting window shows the current input.



2. When the input source setting window is open, turn the **MULTI JOG** dial to select the input source, and press the **MULTI JOG** dial to change it.

## Selecting from the Menu Screen

1. Select **INPUT SELECT** on the **REC 1** page to open the **INPUT SELECT** screen. (See “Menu operation procedures” on page 22.)

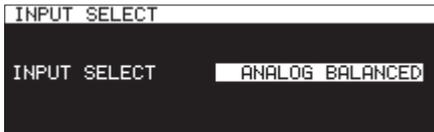

2. Select the input source.

**Options:** **ANALOG UNBALANCED** (default), **ANALOG BALANCED**, **DIGITAL COAXIAL**, **DIGITAL XLR**, **IF-DA2 (Dante)** (shown only if IF-DA2 installed)

### NOTE

If the input source is **DIGITAL COAXIAL**, **DIGITAL XLR** or **IF-DA2 (Dante)** (shown only if IF-DA2 installed), but it is unlocked, “\*” will appear at the end of the option.

3. Confirm the setting and return to the Menu Screen.

## Input source display

Confirm the currently selected input source by following the procedures in “Selecting the input source” above or checking the input setting status on the recording screen.



Input source information display

### NOTE

If **DIGITAL XLR**, **DIGITAL COAXIAL** or **IF-DA2 (Dante)** (only when IF-DA2 card installed) is selected, pop-up messages will appear under the following conditions.

- The unit is not digitally locked to the input source (**DIN UNLOCK** will appear).
- The input source is not audio (**DIN Not Audio** will appear).
- If the sampling frequency set with the **SAMPLE** item on the **REC 3** page differs from the input source, “**FS UNMATCH**” will appear. If the sampling rate converter is active, however, recording will be possible even if the sampling frequency is different. (See “Using the sampling rate converter” on page 64.)

## Setting left/right channel inputs separately

Left and right channel input settings can be made separately on this unit.

The screens where they can be set separately are as follows.

- **BALANCED INPUT GAIN** screen (See “Setting mic/line input sensitivity” on page 58.)
- **INPUT LEVEL** screen (See “Adjusting input signal levels” on page 58.)
- **PHANTOM POWER** screen (See “Setting phantom power” on page 59.)
- **MIC AGC** screen (See “Setting automatic gain control for mic inputs” on page 59.)
- **DYNAMICS** screen (See “Using the dynamics function” on page 60.)
- **LOW CUT** screen (See “Setting the low-cut filter” on page 60.)

1. Select the **REC SET LINK** item on the **REC 1** page to open the **REC SET LINK** screen. (See “Menu operation procedures” on page 22.)



2. Select the left/right channel setting method.

Option	Meaning
OFF	Left and right channels input settings are made separately.
ON (default)	The left and right channel input settings are linked.

### NOTE

When the left and right channel settings are unlinked, if the **REC SET LINK** screen **LINK** item is changed to **ON**, the right channel settings will change to match the left channel settings. If the **REC SET LINK** screen **LINK** item is reset to **OFF**, the right channel will retain the same settings as the left channel.

3. Confirm the setting and return to the Menu Screen.

# 8 – Recording

## Setting mic/line input sensitivity

Before starting recording, input gains should be adjusted to prevent recorded sounds or signals from being distorted due to excessive input levels and to prevent them from being so low that they are below the noise floor.

**NOTE**

This item will not appear when the input source is set to anything other than **ANALOG BALANCED**. (See “Selecting the input source” on page 56.)

1. Select **BAL. INPUT GAIN** on the REC 1 page to open the **BALANCED INPUT GAIN** screen. (See “Menu operation procedures” on page 22.)




2. Set the mic input sensitivity.

Option	Meaning
LINE (default)	Use when connecting the line output jacks of external devices to this unit's <b>MIC/LINE IN (BALANCED) L/R</b> jacks.
MIC-LOW	Use when mics are connected to the <b>MIC/LINE IN (BALANCED) L/R</b> jacks.
MIC-HIGH	

**NOTE**

When **REC SET LINK** is set to **OFF** on the REC 1 page, the levels of the left and right channel inputs are adjusted separately. (See “Setting left/right channel inputs separately” on page 57.)

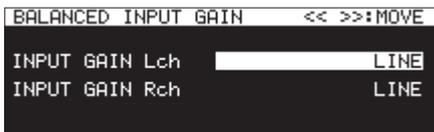


3. Confirm the setting and return to the Menu Screen.

## Adjusting input signal levels

Use the following procedures to adjust input signal levels.

1. Select **INPUT LEVEL** on the REC 1 page to open the **INPUT LEVEL** screen. (See “Menu operation procedures” on page 22.)

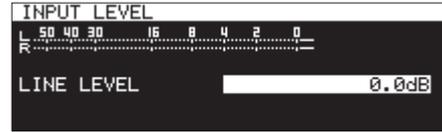

INPUT LEVEL screen when adjusting line level

2. Adjust the input signal levels.
  - LINE LEVEL** (when **BALANCE INPUT GAIN** screen set to **LINE**)
    - Options:** -inf, -54dB, -48dB, -42dB, -36dB, -30dB, -24dB, -20dB, -16dB, -12dB, -10dB, -8dB, -6dB - 0.0dB (default) - +6.0dB (0.5dB increments), +7.0dB - +18.0dB (1.0dB increments)
  - MIC LEVEL** (when **BALANCE INPUT GAIN** screen setting is **MIC-LOW** or **MIC-HIGH**)
    - Options:** MUTE (minimum), -4.0dB - 0.0dB (default) - +6.0dB (0.5dB increments), +7.0dB - +31.0dB (1.0dB increments), +31.5dB
  - DIGITAL LEVEL** (**INPUT SELECT** screen set to **DIGITAL COAXIAL, DIGITAL XLR** or **IF-DA2 (Dante)**)
    - Options:** -6.0dB - 0.0dB (default value, 0.1dB increments) - +6.0dB

**NOTE**

When **REC SET LINK** is set to **OFF** on the REC 1 page, the levels of the left and right channel inputs are adjusted separately. (See “Setting left/right channel inputs separately” on page 57.)

3. Confirm the setting and return to the Menu Screen.


**NOTE**

You can use the level meters shown on the **INPUT LEVEL** screen to check input levels as you adjust them. Set the level so that they are as high as possible without exceeding the level meter peak levels.

## Setting phantom power

Phantom power can be turned on when an external mic that requires it is connected to a **MIC/LINE IN (BALANCED) L/R** jack.

1. Select **MIC PHANTOM** on the **REC 1** page to open the **PHANTOM POWER** screen. (See “Menu operation procedures” on page 22.)

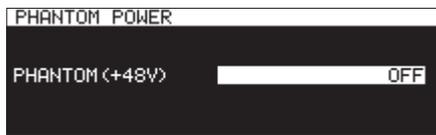

2. Turn phantom power on or off.  
**Options:** OFF (default), ON

### NOTE

- When phantom power is on, the **48V** icon appears in the recording function activation status area on the recording screen.  
The unit will actually output phantom power when the **INPUT SELECT** screen is set to **ANALOG BALANCED**, or the **BAL. INPUT GAIN** screen is set to **MIC-LOW** or **MIC-HIGH**. When phantom power is actually turned on, a “Phantom Power ON?” pop-up message will appear.
- When **REC SET LINK** is set to **OFF** on the **REC 1** page, phantom power of the left and right channel inputs are adjusted separately. (See “Setting left/right channel inputs separately” on page 57.)

3. Confirm the setting and return to the Menu Screen.

Phantom power (48V) will be turned on for the **MIC/LINE IN (BALANCED) L/R** jacks and supplied to connected mics.

### CAUTION

- Before making connections, turn this unit and all equipment to be connected off (standby).
- Confirm that phantom power is OFF before connecting a line level device to a **MIC/LINE IN (BALANCED) L/R** jack. If you connect a line level device while phantom power is being supplied, that device and this unit could be damaged.
- Do not connect or disconnect mics with the **MIC/LINE IN (BALANCED) L/R** jacks while phantom power is on. Doing so could cause a loud noise and might damage the equipment.
- Turn phantom power ON only when using a condenser microphone that requires phantom power. Turning phantom power on when a dynamic mic or other mic that does not require it is connected could damage this unit and connected equipment.
- When using condenser mics that require phantom power and dynamic mics together, be sure to use balanced dynamic mics. Unbalanced dynamic mics cannot be used when phantom power is enabled.
- Supplying phantom power to some ribbon mics will break them. If you are unsure, do not supply phantom power to a ribbon mic.
- Some condenser microphones will not operate when phantom power is set to 48V.

## Setting automatic gain control for mic inputs

When the **MIC AGC** (automatic gain control during mic input) function is on, mic input levels will be adjusted automatically in response to the input audio.

Using this function, the recording level is automatically increased when the input sound is too quiet or decreased when it is too loud. This function is useful for recording meetings, for example.

1. Select **MIC AGC** on the **REC 2** page to open the **MIC AGC** screen. (See “Menu operation procedures” on page 22.)



2. Turn the **MIC AGC** function on or off.  
**Options:** OFF (default), ON

### NOTE

- When the automatic gain control function is on, the **AGC** icon appears in the recording function activation status area on the recording screen.
  - When **REC SET LINK** is set to **OFF** on the **REC 1** page, the automatic gain control of the left and right channel inputs are adjusted separately. (See “Setting left/right channel inputs separately” on page 57.)
3. Confirm the setting and return to the Menu Screen.

# 8 – Recording

## Using the dynamics function

By turning the dynamics function on, you can apply this unit's limiter or compressor to recording sources and prevent input signal levels from overloading during recording.

1. Select **DYNAMICS** on the **REC 2** page to open the **DYNAMICS** screen. (See "Menu operation procedures" on page 22.)



2. Set the input signal dynamics function.

Option	Meaning
OFF (default)	Do not use the dynamics function.
LIMITER	This applies the limiter. This suppresses distortion of sound due to sudden excessive input.
COMP_SOFT	This applies light compression. This setting is good for music.
COMP_HARD	This applies heavy compression. This setting is good for recording meetings and similar situations.

### NOTE

- When the dynamics function is on, the **LIMITER**, **COMP.SOFT** or **COMP.HARD** icon appears in the recording function activation status area on the recording screen.
  - Distortion of sounds may occur when signals that are very loud are input even when the limiter is activated. In such a case, lower the recording level or increase the distance between the mic and the sound source.
  - Compressors are effects that suppress peak sounds and make audio easier to hear overall by raising and lowering levels for a more even volume.
  - When **REC SET LINK** is set to **OFF** on the **REC 1** page, the levels of the left and right channel inputs are adjusted separately. In this case, the left channel setting will be shown on the Home Screen when recording or in recording standby. If the left channel setting is **OFF**, but the right channel setting is not **OFF**, however, the right channel setting will be shown on the Home Screen. (See "Setting left/right channel inputs separately" on page 57.)
3. Confirm the setting and return to the Menu Screen.

## Setting the low-cut filter

The low-cut filter can reduce bothersome noise, such as from wind, air-conditioners and projectors.

1. Select **LOW CUT** on the **REC 2** page to open the **LOW CUT** screen. (See "Menu operation procedures" on page 22.)



2. Set the cutoff frequency of the low-cut filter used during input.

**Options:** OFF (default), 40Hz, 80Hz, 120Hz, 180Hz, 220Hz

### NOTE

- When the low-cut filter function is on, the **LC** icon appears in the recording function activation status area on the recording screen.
  - When **REC SET LINK** is set to **OFF** on the **REC 1** page, the low-cut filter of the left and right channel inputs are adjusted separately.
3. Confirm the setting and return to the Menu Screen.

## Setting the recording file format

To set the recording file format, use the REC FORMAT, BACKUP/RELAY MEDIA, WAV SETTING, MP3 BITRATE and FILE TYPE items on the REC 3 page. (See “Menu operation procedures” on page 22.)

### Making recording format settings

Select REC FORMAT, and open the REC FORMAT screen. (See “Menu operation procedures” on page 22.)

Set the sampling frequency and file format combination for recording.

If the current medium is CD and the REC FORMAT item is set to CD-DA, the file recording format will be fixed to 44.1kHz/16bit/STEREO.



Options:	Recording contents	
	Sampling frequency/ file format	Optional func- tions
44k WAV	44.1kHz WAV	None
44k MP3 (default)	44.1kHz MP3	None
44k WAV+MP3	44.1kHz WAV (16-bit) + MP3	Dual format re- cording function
44k WAV (BACKUP)	44.1kHz WAV	Backup recording function
44k MP3 (BACKUP)	44.1kHz MP3	
44k WAV (RELAY)	44.1kHz WAV	Relay recording function
44k MP3 (RELAY)	44.1kHz MP3	
44k WAV+MP3(RLV)	44.1kHz WAV (16-bit) + MP3	Relay/dual format recording func- tions
48k WAV	48kHz WAV	None
48k MP3	48kHz MP3	None
48k WAV+MP3	48kHz WAV (16-bit) + MP3	Dual format re- cording function
48k WAV (BACKUP)	48kHz WAV	Backup recording function
48k MP3 (BACKUP)	48kHz MP3	
48k WAV (RELAY)	48kHz WAV	Relay recording function
48k MP3 (RELAY)	48kHz MP3	
48k WAV+MP3(RLV)	48kHz WAV (16-bit) + MP3	Relay/dual format recording func- tions
96k WAV	96kHz WAV	None

### If CD is selected as the current medium

Options:	Recording contents	
	Sampling frequency/file format	
CD-DA	44.1kHz 16bit	
44k MP3	44.1kHz MP3	
48k MP3	48kHz MP3	

### Recording option functions

#### ● Simultaneous recording of files in two formats (dual format recording)

When an option with “WAV+MP3” is selected, both WAV 16bit (BWF) and MP3 file formats will be simultaneously recorded.

#### ● Simultaneous recording to multiple media (backup recording)

When an option with “(BACKUP)” is selected, simultaneous recording to multiple media is enabled.

By using this function, unplanned recording interruptions caused by media problems can be avoided.

#### ● Recording to multiple media in succession (relay recording)

When an option with “(RELAY)” is selected, recording to multiple media in succession is enabled.

Continuous recording for long periods of time is possible using this function.

#### ● When relay recording completes, the media used at the beginning of recording is reset as the current media.

#### ● Files created using relay recording have an “R” added to the beginnings of their names, for example “R001\_20170101-123456.wav”.

#### NOTE


- When relay recording is enabled, an icon like showing the current media and the next relay recording media appears at the top right of the recording screen.
- When the dual format recording function is selected, an icon like showing both recording formats appears at the top right of the recording screen.
- When using dual format recording, the bit length setting for WAV files is fixed at 16-bit.
- If the BIT LENGTH was set to 24bit on the WAV SETTING screen, it will automatically be changed to 16bit. (See “WAV file settings” on page 62.)
- Recording MP3 format files to a CD-R/CD-RW disc is only possible when a blank disc is loaded. If you eject the disc or turn off the power, adding recordings later will not be possible. (See “Finalizing CD-R/CD-RW discs” on page 73.)

## 8 – Recording

### Setting the second medium for backup and relay recording

Select **BACKUP/RELAY MEDIA**, and open the **BACKUP/RELAY MEDIA** screen. (See “Menu operation procedures” on page 22.)

Set the secondary media to be used for backup and relay recording when each medium is current.

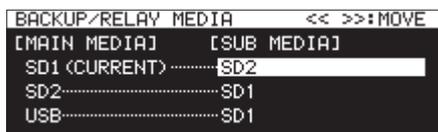

- Select the **SD1** item, and set the second medium (**SUB MEDIA**) to be used for backup and relay recording when it is the current medium (**MAIN MEDIA**).

**Options:** SD2 (default), USB

- Select the **SD2** item, and set the second medium (**SUB MEDIA**) to be used for backup and relay recording when it is the current medium (**MAIN MEDIA**).

**Options:** SD1 (default), USB

- Select the **USB** item, and set the second medium (**SUB MEDIA**) to be used for backup and relay recording when it is the current medium (**MAIN MEDIA**).

**Options:** SD1 (default), SD2

#### NOTE

- **CD** cannot be selected as the backup or relay recording medium. Moreover, if the current medium is **CD**, the **REC 2** page **BACKUP/RELAY MEDIA** item will be shown as “-----”.
- The medium with **{CURRENT}** after its **[MAIN MEDIA]** name is the current medium now.
- A folder with the same file path as the current media will be created on the secondary media and used for backup and relay recording.

### WAV file settings

Select **WAV SETTING**, and open the **WAV SETTING** screen. (See “Menu operation procedures” on page 22.)



- Select **FORMAT TYPE**, and set the file format to use for WAV recording.

**Options:** WAV (default), BWF

- Select **BIT LENGTH**, and set the bit length to use for WAV recording.

**Options:** 16bit (default), 24bit

#### NOTE

- This item does not appear when the current medium is **CD**.
- When dual format recording is on, 24bit cannot be selected.

### MP3 file bit rate setting

Select **MP3 BITRATE**, and open the **MP3 BITRATE** screen. (See “Menu operation procedures” on page 22.)

Set the bit rate to use for MP3 format recording.



**Options:** MP3-64kbps, MP3-128kbps, MP3-192kbps (default), MP3-256kbps, MP3-320kbps

### Setting the recording file type

Select **FILE TYPE**, and open the **FILE TYPE** screen. (See “Menu operation procedures” on page 22.)

Set the recording file type.



Option	Meaning
STEREO (default)	Save the left and right channel input sounds to a stereo file.
MONO (MIX)	Mix the left and right channel input sounds and save the mix as a mono file.
MONO (2ch)	Save the left and right channel input sounds to two separate mono files.

#### NOTE

If the current medium is **CD** and the **REC FORMAT** item is set to **CD-DA**, the file will be recorded as **STEREO**, regardless of the setting. In this case, the **REC 3** page **FILE TYPE** item will appear as “-----”. Moreover, **MONO (2ch)** cannot be selected if **REC FORMAT** is not set to **CD-DA**.

## Monitoring input signals

Press the **RECORD [TRACK INC]** button (or remote control **RECORD** button) to put the unit in recording standby. The **RECORD [TRACK INC]** and **PAUSE [CALL]** buttons will light and the input signals will be output from this unit's various outputs (headphones, analog balanced and unbalanced jacks, and digital connectors). The meters at the top of the Home Screen will also show input levels.

Press the **STOP** button (or remote control **STOP** button) to end recording standby.

### TIP

If you do not plan to record, but just want to monitor the input signals, without setting the current media, press the **RECORD [TRACK INC]** button (or remote control **RECORD** button). The **RECORD [TRACK INC]** button will blink.

The **RECORD [TRACK INC]** button will blink.

To stop monitoring the input signals, press the **STOP** button (or remote control **STOP** button).

## Basic recording operations

Make the following settings (input source selection, recording file format, sampling rate conversion on/off, input level adjustments) before recording.

### Entering recording standby from a stopped state:

Press the **RECORD [TRACK INC]** button (or remote control **RECORD** button). (The **RECORD [TRACK INC]** and **PAUSE [CALL]** buttons light.)

### Starting recording from recording standby:

Press the main unit or remote control **PLAY** button.

### Pausing recording:

Press the **PAUSE [CALL]** button (or remote control **F1** button).

### Stopping recording:

Press the main unit or remote control **STOP** button.

Recording stops, recording data are written and audio files are created.

### NOTE

- On the **FILE NAME** screen, you can set the name that is automatically given to audio files when they are created. (See "Setting the recording file format" on page 61.)
- The maximum file size for each track is 2 GB.
- Recorded tracks are created in the current folder. (See "Folder operations" on page 43.)

### CAUTION

"**WRITING FILE...**" appears while recording data is being written to the current media. During this time, do not move the unit, turn it off, or remove the current media. Doing so could prevent the recording data from being properly written.

## Setting the file name format

You can select the format of names given to files automatically during recording.

1. Select the **FILE NAME** item on the **REC 4** page to open the **FILE NAME** screen. (See "Menu operation procedures" on page 22.)



2. Set the file name format.

Option	Meaning
DATE/TIME (default)	The date and time of the unit's built in clock are used for the file name.
USER01	The text set by the user (8 characters) is used for the file name.
USER02	
USER03	

3. If you selected **DATE/TIME** or **USER01** – **USER03** and do not want to edit the file name, press the **MULTI JOG** dial to return to the menu.

If you selected **USER01** – **USER03** and you want to edit the file name, press the **▶▶ [INPUT]** button to open the rename screen.



4. Edit the file name.
5. After you finish editing, turn the **MULTI JOG** dial and select **ENTER**. Press the **MULTI JOG** dial to confirm the edited text and return to the **FILE NAME** screen.
6. Press the **MULTI JOG** dial again to return to the menu screen.

## 8 – Recording

### Editing text

Use these operations to edit text.

#### Changing the cursor (editing point) position

Press the ◀◀ [A-B] and ▶▶ [INPUT] buttons.

#### Changing the character input:

Turn the **MULTI JOG** dial.

#### Inputting the selected character at the cursor (editing) position:

Press the **MULTI JOG** dial.

#### Leaving a single space open:

Turn the **MULTI JOG** dial to select a blank space at the left end of any row, and press the **MULTI JOG** dial.

#### Deleting a character:

Turn the **MULTI JOG** dial to select DEL (to delete a character to the right of the cursor) or BS (to delete a character to the left of the cursor), and press the **MULTI JOG** dial.

#### Deleting all characters to the right of the cursor:

Turn the **MULTI JOG** dial to select DEL, and press and hold the **MULTI JOG** dial.

#### Deleting all characters to the left of the cursor:

Turn the **MULTI JOG** dial to select BS, and press and hold the **MULTI JOG** dial.

#### Switching between upper and lower case:

Press the **SHIFT** button.

#### Canceling edits:

Press the **MENU [JOG]** button.

#### Inputting the date.

Turn the **MULTI JOG** dial to select **DATE ▲**.

Press the **MULTI JOG** dial to input the date and time of the built-in clock in **yyyy-mm-dd** format.

On the **RENAME FOLDER** screen, if a folder with the same name already exists, an underscore ( \_ ) followed by a number that has not already been used will be added to the end of the name.

#### CAUTION

- You can connect a USB flash drive or SD card to a computer and edit file names from the computer. Doing so, however, could cause the order of the files to change when played back on the unit.
- On a text input screen, characters other than half-width (normal) English letters, numerals and symbols will not be shown. If text includes characters other than half-width English letters, numerals and symbols, opening a text input screen will delete them.
- The following symbols and punctuation marks cannot be used in text.

/: \* ? " ' < > |

#### NOTE

You can also use a USB keyboard to edit characters. (See "Using the keyboard to input names and values" on page 97.)

#### Character input limit

The white background in the character field indicates the maximum number of characters. The gray background shows characters in excess of the maximum number. These will be discarded when you select **Enter** and confirm the input text.

### Applying dithering to recording

When recording in 16-bit WAV format the dynamic range is about 96.3 dB.

You can set how the unit processes the quiet sounds above the 16-bit range that are lost (quantization noise) when it records.

1. Select **DITHER** on the **REC 4** page to open the **DITHER** screen. (See "Menu operation procedures" on page 22.)



2. Set the dither mode.

Option	Meaning
OFF (default)	No dithering is conducted. Unusable quantization bits (17 and higher) are cut, while the 16th bit and below are recorded as is.
DITHER	Random noise (white noise) that is half the size of the smallest quantization bit (16th bit) is added, generating fluctuation in the border between the 16th and 17th bits and suppressing quantization noise.
NOISE SHAPE	This is linear noise shaping. Quantization noise itself is fed back and differentiated to suppress the noise and expand the dynamic range.

3. Confirm the setting and return to the Menu Screen.

### Using the sampling rate converter

This unit has a built-in sampling rate converter, so it is possible to record with a sampling frequency that is different from the digital input sources.

When the sampling rate converter is on, the **SRC** icon appears in the recording function activation status area on the recording screen.

1. Select **SRC** on the **REC 4** page to open the **SRC** screen. (See "Menu operation procedures" on page 22.)



2. Turn the sampling rate converter (SRC) on or off.  
**Options:** OFF (default), ON
3. Confirm the setting and return to the Menu Screen.

#### NOTE

- If you try to record a digital signal through a digital input connector with the sampling frequency that is different from the one set on the **SAMPLING RATE** screen when the sampling rate converter (SRC) is off, a "-- **DIM ERROR** -- Digital input is illegal." message will appear. (See "Setting the recording file format" on page 61.)
- The sampling rate converter operation range is 32–192 kHz.

## Setting the pause mode

You can set the unit to either increment the track number (create a new file) or not when you switch it from recording to recording standby (pausing).

1. Select **PAUSE MODE** on the **REC 4** page to open the **PAUSE MODE** screen. (See “Menu operation procedures” on page 22.)



2. Set the pause mode.

Option	Meaning
<b>SAME TRACK</b> (default)	Track number not incremented when switching from recording to recording standby.
<b>NEW TRACK</b>	Track number incremented when switching from recording to recording standby.

3. Confirm the setting and return to the Menu Screen.

### CAUTION

This cannot be changed when recording or in recording standby.

## Skipping recording standby before recording (direct recording)

Recording can be started without entering recording standby first.

When this function is on, pressing the **RECORD** button will start recording immediately.

1. Select **DIRECT REC** on the **REC 4** page to open the **DIRECT REC** screen. (See “Menu operation procedures” on page 22.)



2. Turn the direct recording function on or off.  
**Options:** OFF (default), ON
3. Confirm the setting and return to the Menu Screen.

## Recording a few seconds in advance (pre-recording)

Using the pre-recording function, the built-in memory can capture up to 5 seconds of the signal input when the unit is in recording standby before recording is started normally.

1. Select **PRE REC** on the **REC 5** page to open the **PRE REC** screen. (See “Menu operation procedures” on page 22.)



2. Set the length of pre-recording.  
**Options:** OFF (default), 1sec, 2sec, 3sec, 4sec, 5sec
3. Confirm the setting and return to the Menu Screen.

### NOTE

If the amount of time in recording standby is less than the set time, that amount of time is recorded instead.

## Using the synchronized recording function

When the synchronized recording function is on, recording will start automatically when a signal is input that exceeds the sync level set in advance. After starting recording, recording will automatically pause if the signal stays below the sync level for the set STOP TIME.

### Synchronized recording settings

Select **SYNC REC** on the **REC 5** page to open the **SYNC REC** screen. Use the **SYNC REC** screen to make synchronized recording settings. (See “Menu operation procedures” on page 22.)



### Turning the synchronized recording function on/off

Select the **MODE** item, and turn the synchronized recording function on/off.

**Options:** OFF (default), ON

### NOTE

When the synchronized recording function is on, the **SYNC REC** icon appears in the recording function activation status area on the recording screen.

### Setting the synchronized recording function sync level

Select **LEVEL**, and set the synchronized recording sync level.

**Options:** -72dB, -66dB, -60dB, -54dB, -48dB, -42dB (default), -36dB, -30dB, -24dB

## 8 – Recording

### Setting the delay before recording starts

Select **DELAY**, and set the delay until recording starts after a signal that exceeds the sync level is detected (in 10msec (0.01sec) increments).

By setting this to a negative value, recording can be started before signal detection (using the memory buffer).

**Options:** -1000msec – 0msec (default, 10msec increments) – +1000msec

### Setting the condition to return to recording standby


Select **STOP TIME**, and set the amount of time until recording standby resumes after the signal goes below the sync level.

**Options:** INF, 5sec (default) – 30sec

### Sync recording operation overview

When the sync recording function is on and the unit is in recording standby, recording will start and stop automatically in response to input source levels.


- When a signal higher than the sync level is input, recording will start automatically. However, if a signal lower than the sync level does not continue for at least one second after the unit is put into recording standby, recording will not start automatically even though input is detected.

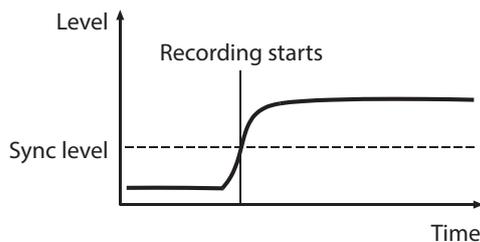

#### NOTE

In the above example, **DELAY** is set to 0msec (default). By changing the **DELAY** item, you can change the point when recording starts.

- During recording, when the signal stays below the sync level for the amount of time set with the **STOP TIME** item, recording will automatically pause.

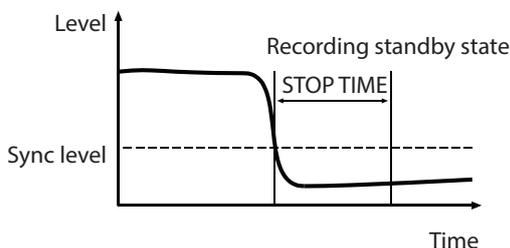


#### NOTE

If **STOP TIME** is set to INF, recording will not pause automatically even if the signal stays below the sync level.

- To disable sync recording, set the **SYNC REC** screen **MODE** item to OFF. (See "Synchronized recording settings" on page 65.)


### If the sync level is too high

If the sync level is set too high, the beginnings of tracks that start quietly might not be recorded, for example.

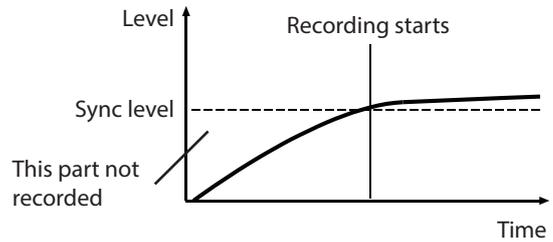

### If the sync level is too low

When in recording playback, if the source has a high noise level that exceeds the sync level, sync recording will not start.

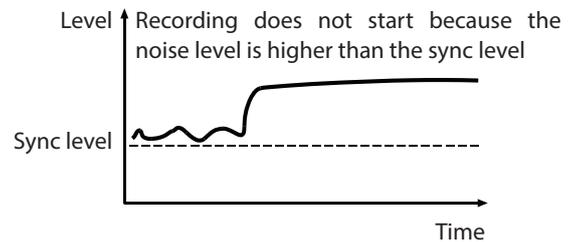

### Incrementing track numbers during recording

Track numbers can be incremented manually or automatically when set conditions are met during recording. Each time the track number is incremented, a new audio file is created.

#### NOTE

- When new tracks are created, incremental numbers are added to the end of each file name.
- If the file name of a track to be created would be the same as that of an existing file, the number will be incremented until the new file has a unique name.

### Incrementing track numbers manually

You can press the **RECORD [TRACK INC]** button (or remote control **RECORD** button) during recording to increment the track number. You cannot, however, create a track that is less than four seconds long.

#### NOTE

If tracks are recorded in WAV format, you can also divide and combine them after recording using the editing functions. (See "Dividing tracks (DIVIDE)" on page 71.), (See "Combining tracks (COMBINE)" on page 72.)

#### CAUTION

Depending on the SD card or USB flash drive, incrementing tracks repeatedly in a short amount of time when recording in MP3 format could cause a "RECORD Error Buffer overflow" error message to appear and recording to stop. To prevent this, leave some time between each incrementation.

## Incrementing track numbers automatically

Use the menu to select the automatic track incrementation mode and make specific settings.

When the automatic track incrementation function is on, the **A TRACK** icon appears in the recording function activation status area on the recording screen.

Automatic track incrementation function settings can be changed anytime, even after starting recording.

### NOTE

If tracks are recorded in WAV format, you can also divide and combine them after recording using the editing functions. (See “Dividing tracks (DIVIDE)” on page 71.), (See “Combining tracks (COMBINE)” on page 72.)

1. Select the **AUTO TRACK** item on the **REC 5** page to open the **AUTO TRACK** screen. (See “Menu operation procedures” on page 22.)



2. Set the automatic track incrementation mode.

Option	Meaning
OFF (default)	Tracks will not be automatically incremented.
LEVEL	The track number will be incremented when the signal stays below the automatic track level (AUTO TRACK screen LEVEL setting) for at least two seconds, and then the signal exceeds the level.
DD	When a digital source (CD, DAT, MD) is being recorded through a digital input, track numbers will be incremented when track divisions on the source are detected. When recording an analog source or a digital source in any other manner, however, LEVEL mode will be used and tracks will be implemented in response to the input level.
SIZE	The track number will be incremented when the file reaches a set size.
TIME	The track number will be incremented at set time intervals.

3. The setting items differ depending on the set automatic track incrementation mode.

### LEVEL mode selected



Select the **LEVEL** item, and set the automatic track incrementation level.

**Options:** -72dB, -66dB, -60dB, -54dB (default), -48dB, -42dB, -36dB, -30dB, -24dB

Select **DELAY**, and set the delay until incrementation after a signal is detected that exceeds the automatic track incrementation level (10 msec = 0.01 sec).

By setting this to a negative value, recording can be started before signal detection (using the memory buffer).

**Options:** -1000msec – 0msec (default, 10msec increments) – +1000msec

### DD mode selected



**Options:** -1000msec – 0msec (default, 10msec increments) – +1000msec

### SIZE mode selected



**Options:** 640MByte, 1GByte, 2GByte (default)

### TIME mode selected



**Options:** 1min – 5min (default) – 10min, 15min, 30min, 1hour, 2hour, 6hour, 8hour, 12hour, 24hour

## 8 – Recording

### Adding marks manually when recording

You can manually add a mark to a file where you want it when recording, allowing you to find that point again quickly during playback.

#### NOTE

- Marks cannot be added manually when the current medium is **CD**.
- Moving between marks is only possible when stopped, playing back or in playback standby. (See “Moving to marks” on page 88.)

### Adding marks when recording

When recording or in recording standby and the Home Screen is open, press the **MULTI JOG** dial to add a mark at that point. The number of the added mark will be shown on a pull-up at the bottom of the display.



#### NOTE

- Marks added to files by this unit during recording are stored in the files themselves. These marks can be used when playing back the file using software or equipment that supports the BWF format.
- The maximum number of marks that can be added to a file is 99. The mark data is stored in the file.
- You can also add marks when the unit is stopped, playing back or in playback standby. (See “Adding marks” on page 87.)
- A mark added manually will be named **MARK<sub>xx</sub>\***.

\* The **xx** is a number given to all marks that is incremented in order.

### Adding marks automatically when recording

By turning the auto mark function on, you can have the unit add marks automatically when audio level overloads occur or when synchronization errors occur because external clock is lost. Using this function, you can quickly search for points where problems occurred during recording.

When the automatic mark function is on, the **A.MARK** icon appears in the recording function activation status area on the recording screen.

1. Select the **AUTO MARK** item on the **REC 5** page to open the **AUTO MARK** screen. (See “Menu operation procedures” on page 22.)



2. Set the following automatic mark function settings.

#### OVER

Add a mark whenever the audio level reaches 0 dB (full bit).

**Options:** OFF (default), ON

#### TIME

Set a time interval for adding marks automatically.

**Options:** OFF (default), 1min, 10min, 15min, 30min, 1hour

#### UNLOCK

Add a mark whenever synchronization with the external clock is lost.

**Options:** OFF, ON (default)

#### REC

Add a mark whenever recording starts if the pre-recording function is on.

**Options:** OFF (default), ON

#### BOF

Add a mark when a buffer overflow occurs.

**Options:** OFF, ON (default)

#### NOTE

When the **AUTO MARK** screen is open, use the **◀ [A-B]** and **▶ [INPUT]** buttons to move the cursor between setting items.

3. When the cursor is at the **BOF** item, press the **MULTI JOG** dial to confirm the setting and return to the menu.

#### NOTE

- The automatic mark function is disabled when the current medium is **CD**. In this case, the **REC 5** page **AUTO MARK** item will appear as “-----”.
- After an **OVER** or **UNLOCK** mark is added, the same type of mark will not be added again until at least 10 seconds have passed.
- When an **OVER** occurs, a mark named **OVER<sub>xx</sub>\*** will be added.
- For **TIME**, a mark named **TIME<sub>xx</sub>\*** will be added.
- For **UNLOCK**, a mark named **UNLK<sub>xx</sub>\*** will be added.
- For **REC**, a mark named **REC<sub>xx</sub>\*** will be added.
- For **BOF**, a mark named **BOF<sub>xx</sub>\*** will be added.

\* The **xx** is a number given to all marks that is incremented in order.

## Recording duration

The table below shows maximum recording times by file format on SD/SDHC/SDXC cards and USB flash drives of different capacities (in hours and minutes).

File format (capacity when recording)		SD/SDHC/SDXC card or USB flash drive capacity					CD-R/CD-RW media (hours:minutes)	
		4 GB	8 GB	32 GB	64 GB	128 GB	700MB	
WAV/BWF 16bit (STEREO/MONO (2ch))	44.1kHz	6 hours 17 minutes	12 hours 35 minutes	50 hours 23 minutes	100 hours 39 minutes	201 hours 16 minutes	1 hours 05 minutes	
	48kHz	5 hours 47 minutes	11 hours 34 minutes	46 hours 17 minutes	92 hours 36 minutes	185 hours 13 minutes	1 hours 00 minutes	
	96kHz	2 hours 53 minutes	5 hours 47 minutes	23 hours 08 minutes	46 hours 17 minutes	92 hours 36 minutes	---	
WAV/BWF 24bit (STEREO/MONO (2ch))	44.1kHz	4 hours 11 minutes	8 hours 23 minutes	33 hours 35 minutes	67 hours 05 minutes	134 hours 24 minutes	43 minutes	
	48kHz	3 hours 51 minutes	7 hours 42 minutes	30 hours 51 minutes	61 hours 44 minutes	123 hours 28 minutes	40 minutes	
	96kHz	1 hours 55 minutes	3 hours 51 minutes	15 hours 25 minutes	30 hours 51 minutes	61 hours 44 minutes	---	
MP3 (STEREO/MONO (2ch))	64kbps	44.1kHz / 48kHz	About 138 hours	About 277 hours	About 1111 hours	About 2222 hours	About 4444 hours	24 hours 50 minutes
	128kbps	44.1kHz / 48kHz	69 hours 26 minutes	About 138 hours	About 555 hours	About 1111 hours	About 2222 hours	12 hours 25 minutes
	192kbps	44.1kHz / 48kHz	46 hours 17 minutes	92 hours 35 minutes	About 370 hours	About 740 hours	About 1480 hours	8 hours 15 minutes
	256kbps	44.1kHz / 48kHz	34 hours 43 minutes	69 hours 26 minutes	About 277 hours	About 555 hours	About 1111 hours	6 hours 10 minutes
	320kbps	44.1kHz / 48kHz	27 hours 46 minutes	55 hours 33 minutes	About 222 hours	About 444 hours	About 888 hours	4 hours 55 minutes
CD-DA	44.1kHz	---	---	---	---	---	1 hours 20 minutes	

- The recording times shown above are estimates. They might differ depending on the SD/SDHC/SDXC card or USB flash drive in use.
- The recording times shown above are not continuous recording times, but rather they are the total possible recording times for the SD/SDHC/SDXC card or USB flash drive.
- If recorded using the MONO (MIX) setting, maximum recording times will be about double those above.
- Recording using dual format (WAV16+MP3) settings, will have shorter recording times than WAV/BWF16bit (STEREO) recording.


### NOTE

MONO(2ch) recording to CD-R/CD-RW disc is not possible.

# 9 – Using the Edit Menu (USB flash drives and SD cards only)

## Edit menu operations

Press the **KEY [EDIT]** button while pressing the **SHIFT** button to open the edit menu pop-up.

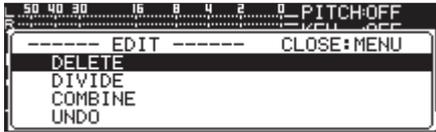

Turn the **MULTI JOG** dial to select the desired operation, and press the **MULTI JOG** dial to execute it as follows.

### NOTE

When a protected SD card is loaded in the unit, the following operations are not possible. (See “SD card write-protection switches” on page 28.)

### DELETE

Delete the selected track. (See “Deleting tracks (DELETE)” on page 70.)

### DIVIDE

Divide the selected track. (See “Dividing tracks (DIVIDE)” on page 71.)

### COMBINE

Combine the selected tracks. (See “Combining tracks (COMBINE)” on page 72.)

### UNDO


Undo an edit menu operation. (See “Undoing edit menu operations (UNDO)” on page 72.)

## Deleting tracks (DELETE)

Tracks shown on the Home Screen can be deleted from USB flash drives and SD cards.

This is only possible when the playback mode is set to **CONTINUE**.

1. Select the track to delete, and press the **KEY [EDIT]** button while pressing the **SHIFT** button to open the edit menu pop-up. (See “Edit menu operations” on page 70.)
2. Select **DELETE**, and press the **MULTI JOG** dial. The following pop-up message will appear.

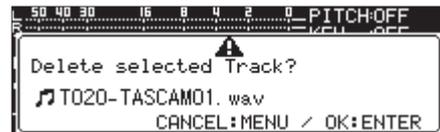

### NOTE

Press the **MENU [JOG]** button to cancel deletion.

3. Press the **MULTI JOG** dial. A second confirmation pop-up message will appear.
4. Press and hold the **MULTI JOG** dial to delete the selected track from the USB flash drive or SD card. A “Deleting Track . . .” pop-up, for example, appears while the track is being deleted.

### NOTE

Immediately after deleting a file, you can undo the deletion. (See “Undoing edit menu operations (UNDO)” on page 72.)

# 9 – Using the Edit Menu (USB flash drives and SD cards only)

## Dividing tracks (DIVIDE)

A recorded track can be divided into two tracks at a specified position.

This is only possible when the playback mode is set to CONTINUE.


### CAUTION

- MP3 tracks cannot be divided.
- The original track does not remain after division.

### NOTE

The division operation can be undone immediately after division. (See “Undoing edit menu operations (UNDO)” on page 72.)

1. Select the track to divide, and press the **KEY [EDIT]** button while pressing the **SHIFT** button to open the edit menu pop-up. (See “Edit menu operations” on page 70.)
2. Turn the **MULTI JOG** dial to select the **DIVIDE** item.
3. Press the **MULTI JOG** dial to open the Home Screen. Division rehearsal mode becomes active, and the **TRACK** display mode on the Home Screen shows 10msec units for the track elapsed time. The **PLAY** and **PAUSE [CALL]** buttons on the main unit also blink.

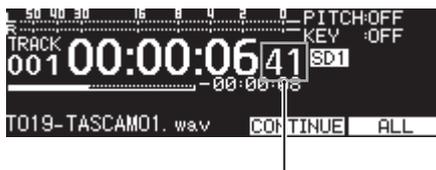

10msec increments

4. Use the scrub playback function to set the division point accurately. Turn the **MULTI JOG** dial to scrub playback and move to the division point

5. After finding the division point, press the **MULTI JOG** dial. A confirmation pop-up message will appear.



Press the **MENU [JOG]** button to change the division point. When division rehearsal mode becomes active again, repeat the procedure from step 3.

Proceed to the next step (6) to execute the division.

### NOTE

- After dividing, two new tracks with “\_a” and “\_b” added to the end of the original track name are created.

Examples:

Track name before division

T001-20170101-123456.wav

Track names after division

T001-20170101-123456\_a.wav

T001-20170101-123456\_b.wav

- If the edited track was assigned to a playlist, that playlist will become unplayable.

Delete it from the playlist on the **PLAYLIST EDIT** screen.

6. Press the **MULTI JOG** dial to divide the track. A “NOW WORKING...” pop-up appears while the item is being divided.



# 9 – Using the Edit Menu (USB flash drives and SD cards only)

## Combining tracks (COMBINE)

Two recorded tracks can be combined into one track. This is only possible when the playback mode is set to **CONTINUE**.

### CAUTION

- MP3 tracks cannot be combined.
- Two tracks cannot be combined if their sampling frequencies, channel counts or file formats differ.
- A track cannot be combined with itself.
- The original tracks do not remain after being combined.

### NOTE

The combine operation can be undone after combining. (See “Undoing edit menu operations (UNDO)” on page 72.)

1. Select a track to combine, and press the **KEY [EDIT]** button while pressing the **SHIFT** button to open the edit menu pop-up. (See “Edit menu operations” on page 70.)
2. Turn the **MULTI JOG** dial to select the **COMBINE** item.
3. Press the **MULTI JOG** dial to open the **TRACK COMBINE** screen where you can choose the other track to combine.



4. Turn the **MULTI JOG** dial to select the track to combine, and press the **MULTI JOG** dial to open the file pop-up menu.
5. Select the **SELECT** item, and press the **MULTI JOG** dial. After a confirmation pop-up appears, the **PLAY** and **PAUSE [CALL]** buttons on the main unit blink and a four-second interval before and after the combination point plays back repeatedly.



Press the **MENU [JOG]** button to cancel combine. When the **TRACK COMBINE** screen reopens, repeat the procedure from step 4.

### NOTE

- Combining creates a track with a name that links both original track names.  
Example:  
Track names before combining  
T001-20170101-123456.wav  
T002-20170101-234501.wav  
Track name after combining  
T001-20170101-123456\_T002-20170101-234501.wav
- If the edited file was assigned to a playlist, that playlist will become unplayable. Delete it from the playlist on the **PLAYLIST EDIT** screen.

6. Press the **MULTI JOG** dial to combine the tracks. A pop-up window appears while combining.

## Undoing edit menu operations (UNDO)

Track division, combination and deletion operations in the edit menu can be undone immediately after they are executed. Moreover, immediately after a folder or file is deleted on the **BROWSE** screen, deletion can be undone. This is only possible when the playback mode is set to **CONTINUE**.

### NOTE

When using the undo function, the track selected on the Home Screen before opening the edit menu does not matter.

1. Press the **KEY [EDIT]** button while pressing the **SHIFT** button to open the edit menu pop-up. (See “Edit menu operations” on page 70.)
2. Turn the **MULTI JOG** dial to select the **UNDO** item.
3. Press the **MULTI JOG** dial. A confirmation pop-up message will appear.



4. Press the **MULTI JOG** dial to undo. A “NOW WORKING...” pop-up message appears while undoing.



When undoing completes, the Home Screen opens.

### NOTE

- Press the **MENU [JOG]** button to cancel undoing.
- If there are no file operations that can be undone, “CAN'T UNDO” appears in a pop-up warning message.

# 10 – CD functions (SS-CDR250N only)

On the **CD** page, CD-R/CD-RW discs can be finalized, CD-RW discs can be unfinalized, tracks can be deleted, discs can be deleted and discs can be refreshed (completely deleted).

In this chapter, we explain these CD-R/CD-RW disc management functions.

In the following examples, we assume that a CD-R/CD-RW is loaded and that **CD** is selected as the current medium.

## NOTE

The CD menu can also be used to copy files between CDs and USB flash drive/SD cards.

## Finalizing CD-R/CD-RW discs

After you have recorded to a CD-R or CD-RW disc, you will need to finalize the disc before the disc can be played back by a CD player or CD drive other than this unit.

The operation of the unit differs depending on whether the format is data CD (MP3) or audio CD (CD-DA).

### When recording with data CD format

The unit will automatically finalize the CD-R/CD-RW disc when you eject it. As a result, additional recording will not be possible to a disc recorded in data CD format after it is removed from the unit once.

In addition, if you turn off the power without ejecting the CD-R/CD-RW disc, the next time the power is turned on, the unit will automatically try to restore the data and then finalize the disc.

You can also use the menu to finalize the disc without ejecting it. (See “Finalizing discs” on page 73.)

### When recording with audio CD format

If you have recorded in audio CD format, the unit will not automatically finalize the disc.


You will be able to make additional recordings on that disc (as long as there is free space remaining on the disc) until you finalize the disc using the menu. However, the disc will not be playable on other devices until you finalize it. For details on how to finalize, refer to the following section.

## Finalizing discs


As explained above, CD-R/CD-RW discs that have been recorded by this unit in audio format must be manually finalized to make them playable on other devices. Moreover, although discs recorded in data CD format will be automatically finalized when they are ejected, as explained above, they can also be manually finalized while they are still loaded.

In either case, follow these procedures to finalize a disc.

1. Press the **MEDIA** button to open the **MEDIA SELECT** screen, and select **CD**. (See “Selecting media” on page 29.)
2. Select the **FINALIZE** item on the **CD** page to open the **FINALIZE** screen. (See “Menu operation procedures” on page 22.)

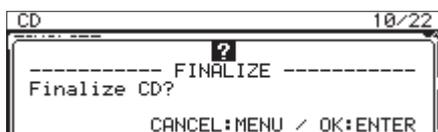

3. Press the **MULTI JOG** dial.  
This starts finalization.

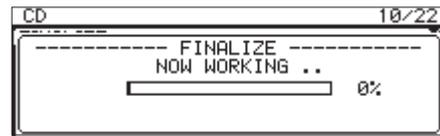

When finalization completes, the **CD** menu will reopen.

## NOTE

You can unfinalize a finalized CD-RW disc. (See “Unfinalizing CD-RW discs” on page 73.)


## Unfinalizing CD-RW discs

The **ERASE** item can be used to unfinalize a loaded audio CD format CD-RW disc that has been finalized.


## NOTE

CD-R discs and data CD format CD-RW discs cannot be unfinalized.

1. Select the **ERASE** item on the **CD** page to open the **ERASE MODE** screen. (See “Menu operation procedures” on page 22.)

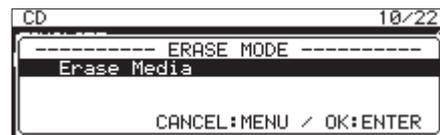


2. Turn the **MULTI JOG** dial to select the **Unfinalize** item.

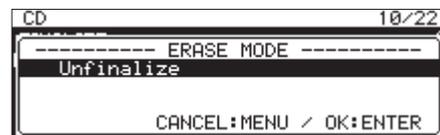

3. Press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.



4. Press and hold the **MULTI JOG** dial to start unfinalization.

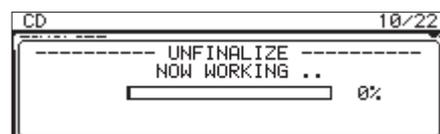

When unfinalization completes, the **CD** menu will reopen.

# 10 – CD functions (SS-CDR250N only)

## Erasing CD-RW discs

You can completely erase an entire CD-RW disc.

1. Select the **ERASE** item on the **CD** page to open the **ERASE** screen. (See “Menu operation procedures” on page 22.)
2. Press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.



3. Press and hold the **MULTI JOG** dial to start erasing the disc.




When disc erasure completes, the **CD** menu will reopen.

## Erasing tracks

Tracks can be erased on CD-RW discs in the audio CD format. The specified track and all later tracks (until the last track on the disc) will be erased.

1. Select the **ERASE** item on the **CD** page to open the **ERASE MODE** screen. (See “Menu operation procedures” on page 22.)
2. Turn the **MULTI JOG** dial to select the **Erase Track** item.

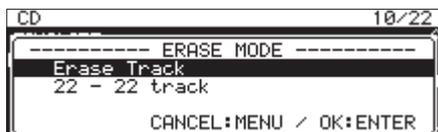

3. Press the **MULTI JOG** dial.  
Select the range of tracks to be deleted.



4. Turn the **MULTI JOG** dial to select the first track in the range of tracks to be deleted.  
In the example above, track 14 was selected.  
The last track in the range (number 22 in the example above) is always the last track on the disc and cannot be changed.

5. After selecting, press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.



6. Press and hold the **MULTI JOG** dial to start erasing the tracks.



When track erasure completes, the **CD** menu will reopen.


### NOTE

- When erasing tracks on a finalized CD-RW disc, the disc will first be unfinalized and then the selected tracks will be erased.
- This operation is only possible with audio CD format discs.

## Refreshing discs

You can refresh (completely erase) a CD-RW disc. The unit might not be able to recognize a CD-RW disc in some cases, such as if finalization was interrupted by a power failure, or if a disc has been used by a computer. In such cases, follow these procedures to refresh the CD-RW disc so that the unit can recognize it.

1. Select the **ERASE** item on the **CD** page to open the **ERASE MODE** screen. (See “Menu operation procedures” on page 22.)
2. Turn the **MULTI JOG** dial to select the **Refresh** item.

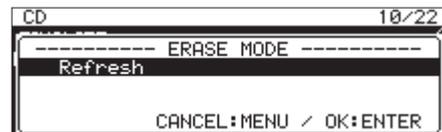

3. Press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.



4. Press and hold the **MULTI JOG** dial to start refreshing (completely erasing) the CD-RW disc.



When the CD-RW disc has been refreshed (completely erased), the **CD** menu will reopen.

## Copying files from USB flash drives and SD cards to blank CDs with or without conversion

You can copy files stored on USB flash drives and SD cards to blank CDs with or without conversion.

When copying MP3 or WAV files from a USB flash drive or an SD card to a blank CD, you can set whether they are recorded in the same file format on a data CD or recorded in audio CD format.

If audio CD is selected, the MP3 or WAV files on the USB flash drive or SD card can be converted to audio CD format and recorded to the blank CD.

If you use an unfinalized CD-R/CD-RW disc that already has tracks on it, the disc format is already set as audio CD or data CD, and that format must be used.

### CAUTION

This unit cannot record WAV files to CD-R/CD-RW discs, but WAV files can be copied from USB/SD media to CD-R/CD-RW discs. This unit can play back WAV files copied to CD-R/CD-RW discs.

## Creating audio CDs

This explains the procedures for converting MP3 and WAV files on USB flash drives and SD cards and copying them to CD-R/CD-RW discs.

In the following procedures, we assume that CD is selected as the current medium and that the USB flash drive or SD card that contains the files to be copied and the CD-R/CD-RW disc to which they are to be copied are loaded in the unit.

### NOTE

Press the **MENU [JOG]** button or select the **PREVIOUS STEP** item in the pull-up menu to return to the previous step.

1. Select the **BURN TO CD** item on the **CD** page. (See “Menu operation procedures” on page 22.)
2. Press the **MULTI JOG** dial to open a pop-up with file copy source media options.



3. Turn the **MULTI JOG** dial to select the medium with the files to be copied.
4. Press the **MULTI JOG** dial to open a pop-up with format options for writing the CD-R/CD-RW disc.



### NOTE


An error message will appear if the selected medium is not loaded.

5. Turn the **MULTI JOG** dial to select **CD-DA**.

### NOTE

If the CD-R/CD-RW disc already contains audio format files, writing format options will not be shown, and **CD-DA** will be selected automatically.

6. Press the **MULTI JOG** dial to open the **SELECT BURN SOURCE** screen for the selected medium.

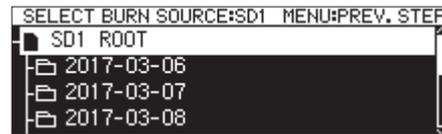


7. Select the desired audio file, and press the **MULTI JOG** dial to open the pop-up file menu.



8. Select the **SELECT/UNSELECT** item in the file menu, and press the **MULTI JOG** dial.

A check (✓) is added to selected files.

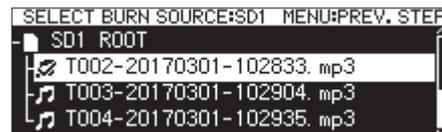

Multiple files can be selected.

You cannot select a folder.

To select multiple files, repeat this procedure: select a desired file, then select the **SELECT/UNSELECT** item from the file menu and press the **MULTI JOG** dial.

To cancel selection of the selected file, select the **SELECT/UNSELECT** item from the file menu and press the **MULTI JOG** dial.

### NOTE

- If the total size of the files to be copied exceeds the remaining capacity of the selected medium or if the number of tracks exceed system limits, a corresponding “No Free Space”, “Track limit reached.” or “Folder limit reached.” pop-up message will appear.
  - If this occurs, press the **MENU [JOG]** button to close the pop-up message, and reduce the total copy source size or number before selecting the **NEXT STEP** item.
  - If a copy source file that is less than four seconds long is selected, a “Cannot select as CD-DA track. This track is under 4sec.” pop-up message will appear.
9. After selecting all the files to copy to the CD-R/CD-RW disc, press the **MULTI JOG** dial to open the pop-up file menu.

# 10 – CD functions (SS-CDR250N only)

10. Select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial.



11. The **SELECT BURN TARGET** screen will open. Select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial.



12. Press the **MULTI JOG** dial. A confirmation pop-up message will appear.



13. Press the **MULTI JOG** dial to start writing the CD-R/CD-RW disc.



When track writing completes, the **CD** menu will reopen.

## Moving tracks within a track list

When the **SELECT BURN TARGET** screen is open, you can change the track order by following the procedures below. The track order on a CD-R/CD-RW disc that has already been written cannot be changed.

1. Turn the **MULTI JOG** dial to select the track for which you want to change the order.
2. Press the **MULTI JOG** dial to open a pop-up menu.
3. Select **MOVE TRACK**, and press the **MULTI JOG** dial. The file selected to be moved will blink.
4. Turn the **MULTI JOG** to move the selected file to the desired position.
5. Press the **MULTI JOG** dial to confirm the move.
6. Repeat steps 1–5 above as necessary.

## Deleting tracks from a track list

When the **SELECT BURN TARGET** screen is open, you can delete tracks by following the procedures below. Tracks cannot be deleted from a CD-R/CD-RW disc that has already been written. Tracks cannot be deleted from a CD-R/CD-RW disc that has already been written using the track list. To erase tracks, see “Erasing tracks” on page 74

1. Turn the **MULTI JOG** dial to select a track that you want to delete.
2. Press the **MULTI JOG** dial to open a pop-up menu.

3. Select **CLEAR TRACK**, and press the **MULTI JOG** dial to open a confirmation pop-up message.
4. Press the **MULTI JOG** dial to delete the selected track from the track list.
5. Repeat steps 1–4 above as necessary.

## Creating data CDs

These are the procedures for copying MP3 and WAV files from USB flash drives and SD cards to data CDs without changing the format.

In the following procedures, we assume that **CD** is selected as the current medium and that the USB flash drive or SD card that contains the files to be copied and the CD-R/CD-RW disc to which they are to be copied are loaded in the unit.

### CAUTION

This unit can copy WAV files from USB flash drives and SD cards to CD-R/CD-RW discs, but it cannot record WAV files to CD-R/CD-RW discs.

### NOTE

Press the **MENU [JOG]** button or select the **PREVIOUS STEP** item in the pull-up menu to return to the previous step.

1. Select the **BURN TO CD** item on the **CD** page. (See “Menu operation procedures” on page 22.)
2. Press the **MULTI JOG** dial to open a pop-up with file copy source media options.




3. Turn the **MULTI JOG** dial to select the medium with the files to be copied.
4. Press the **MULTI JOG** dial to open a pop-up with format options for writing the CD-R/CD-RW disc.



### NOTE

An error message will appear if the selected medium is not loaded.

5. Turn the **MULTI JOG** dial to select **CD-Data**.

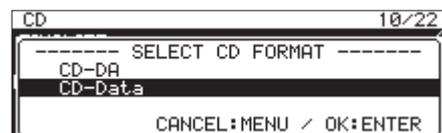


### NOTE

If the CD-R/CD-RW disc already contains MP3 or WAV files, writing format options will not be shown, and **CD-Data** will be selected automatically.

# 10 – CD functions (SS-CDR250N only)


- Press the **MULTI JOG** dial to open the **SELECT BURN SOURCE** screen for the selected medium.

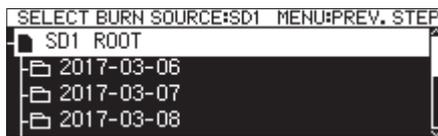

- After selecting all the folders and files to copy to the CD-R/CD-RW disc, press the **MULTI JOG** dial to open the pop-up file menu. If you select a folder, all files inside the folder will be copied.



- Select the **SELECT/UNSELECT** item in the file menu, and press the **MULTI JOG** dial. A check (✓) is added to selected folders and files.

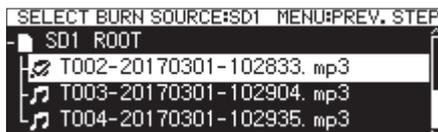

Multiple files and folders inside the same folder can be selected.


To select multiple folders and files, repeat this procedure: select a desired folder or file, then select the **SELECT/UNSELECT** item from the file menu and press the **MULTI JOG** dial.

To cancel selection of the selected folder or file, select the **SELECT/UNSELECT** item from the file menu and press the **MULTI JOG** dial.

### NOTE

Since only folders and files inside the same folder can be selected, you will not be able to move to another folder after selecting the first folder or file.

- After selecting all the files to copy to the CD-R/CD-RW disc, press the **MULTI JOG** dial to open the pop-up file menu.
- Select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial. The **SELECT BURN TARGET** screen will open

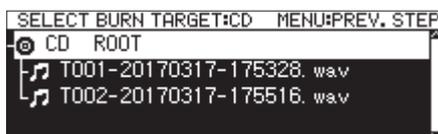


If the open disc space or track number limit would be exceeded by the items selected to copy, you will not be able to open the **BURN TARGET SELECT** screen. If this occurs, deselect some of the selected folders and files so that the limits are not exceeded.


### NOTE

- If the total size of the files to be copied exceeds the remaining capacity of the selected medium or if the number of tracks or folders exceed system limits, a corresponding "No Free Space", "Track limit reached." or "Folder limit reached." pop-up message will appear.
- If this occurs, press the **MENU [JOG]** button to close the pop-up message, and reduce the total copy source size or number before selecting the **NEXT STEP** item.

- Turn the **MULTI JOG** dial to select where you want to write the data (the target). If the disc already has a folder structure, move on the **BROWSE** screen to where you want to write the content. The folders and files will be written to the position indicated by "BURN HERE".

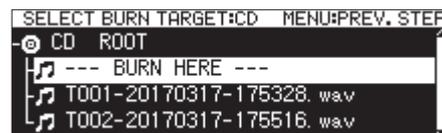

- After selecting the write position, select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.

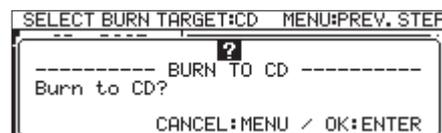

### NOTE

If the same name already exists, a "Cannot BURN. This name already exists." pop-up message will appear.

- Press the **MULTI JOG** dial to start writing the CD-R/CD-RW disc.



When track writing completes, the CD menu will reopen.

### NOTE

When you press the **EJECT** button to eject the CD-R/CD-RW disc, the disc will automatically be finalized before being ejected. (See "Finalizing CD-R/CD-RW discs" on page 73.)

# 10 – CD functions (SS-CDR250N only)

## Copying files from CDs to USB flash drives and SD cards with or without conversion

You can copy files on CDs to USB flash drives and SD cards with or without conversion. When copying from an audio CD, you can also convert each track to a designated file format (MP3 or WAV). When copying from a CD-R/CD-RW disc that contains MP3 or WAV files, the files can be copied in their current format.

### NOTE

You cannot copy to a write-protected SD card. (See “SD card write protection” on page 11.)

## Converting and copying audio CD tracks

This explains how to convert audio CD format tracks on a CD to MP3 or WAV format files and write them to the selected medium (USB flash drive/SD card).

In the following procedures, we assume that CD is selected as the current medium and that the CD that contains the files to be copied and the medium to which they are to be copied are loaded in the unit.

### NOTE

Press the **MENU [JOG]** button or select the **PREVIOUS STEP** item in the pull-up menu to return to the previous step.

1. Select the **RIP TO MEMORY** item on the CD page. (See “Menu operation procedures” on page 22.)
2. Press the **MULTI JOG** dial to open a pop-up with destination media options for file conversion and copying.



3. Turn the **MULTI JOG** dial to select the copy destination medium.
4. Press the **MULTI JOG** dial to open a pop-up with format options for writing the CD-R/CD-RW disc.



### NOTE

An error message will appear if the selected medium is not loaded.

5. Turn the **MULTI JOG** dial to select the file formats to use on the selected medium.

#### FILE

Set the file format.

**Options:** MP3, WAV, BWF

#### BITRATE


Set the MP3 format bit rate.

**Options:** 64kbps, 128kbps, 192kbps, 256kbps, 320kbps

### NOTE

The sampling frequency used to record files to the selected medium is fixed at 44.1 kHz.


6. After completing all settings, press the **MULTI JOG** dial to open the **SELECT RIP SOURCE** screen.

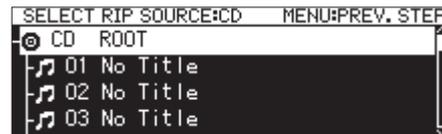

7. Select the tracks to copy. Select the source file, and press the **MULTI JOG** dial to open the pop-up file menu.



8. Select the **SELECT/UNSELECT** item in the file menu, and press the **MULTI JOG** dial. A check (✓) is added to selected files.

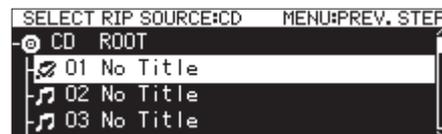

Repeat this operation to select multiple files.

To deselect the selected file, press the **MULTI JOG** dial again to open the pop-up file menu.

Then, select the **SELECT/UNSELECT** item, and press the **MULTI JOG** dial.

### NOTE

If the total size of the files to be copied exceeds the remaining capacity of the selected medium or if the number of tracks or folders exceed system limits, a corresponding “No Free Space,” “Track limit reached,” or “Folder limit reached.” pop-up message will appear.

If this occurs, press the **MENU [JOG]** button to close the pop-up message, and reduce the total copy source size or number before selecting the **NEXT STEP** item.


9. After selecting all the files to copy, press the **MULTI JOG** dial to open the pop-up file menu.
10. Select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial.



11. The **RIP TARGET SELECT** screen where you can select the write destination (target) opens.

# 10 – CD functions (SS-CDR250N only)

- Turn the **MULTI JOG** dial to select where you want to write the data (the target).  
If the medium already has a folder structure, move on the **BROWSE** screen to where you want to write the content.  
The folders and files will be written to the position indicated by "RIP HERE".

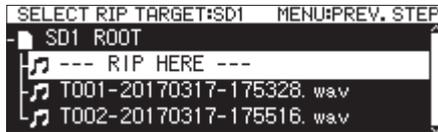

- After selecting the write position, select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



- Press the **MULTI JOG** dial to start writing to the selected medium.



When track writing completes, the CD menu will reopen.

## Copying files on a data CD

These are the procedures for copying MP3 and WAV files from data CDs without changing their formats to the selected medium (USB flash drive or SD card).

In the following procedures, we assume that **CD** is selected as the current medium and that the CD-R/CD-RW disc that contains the files to be copied and the medium to which they are to be copied are loaded in the unit.

### NOTE

Press the **MENU [JOG]** button or select the **PREVIOUS STEP** item in the pull-up menu to return to the previous step.

- Select the **RIP TO MEMORY** item on the **CD** page (See "Menu operation procedures" on page 22.)
- Press the **MULTI JOG** dial to open a pop-up with destination media options for file copying.




- Turn the **MULTI JOG** dial to select the copy destination medium.

### NOTE

An error message will appear if the selected medium is not loaded.


- Press the **MULTI JOG** dial to open the **SELECT RIP SOURCE** screen.

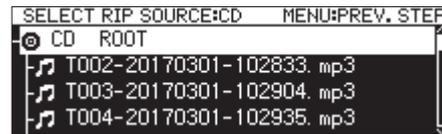

- Select a file or folder to copy on the **SELECT RIP SOURCE** screen, and press the **MULTI JOG** dial to open the pop-up file menu.  
If you select a folder, all files inside the folder will become source files.



- Select the **SELECT/UNSELECT** item in the file menu, and press the **MULTI JOG** dial.  
A check (✓) is added to selected folders and files.

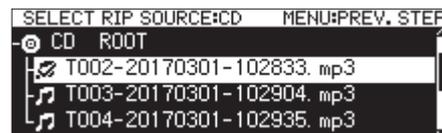

Multiple files and folders inside the same folder can be selected.

To select multiple folders and files, repeat this procedure: select a desired folder or file, press the **MULTI JOG** dial to open the file pop-up menu, select the **SELECT/UNSELECT** item and press the **MULTI JOG** dial.

To deselect the selected folder or file, press the **MULTI JOG** dial to open the file pop-up menu, select the **SELECT/UNSELECT** item and press the **MULTI JOG** dial again.

### NOTE

- Since multiple folders and files can only be selected inside the same folder, you will not be able to use the **SELECT/UNSELECT** item in the file menu to select a different folder after selecting the first folder or file.
- If the total size of the files to be copied exceeds the remaining capacity of the selected medium or if the number of tracks or folders exceed system limits, a corresponding "No Free Space", "Track limit reached." or "Folder limit reached." pop-up message will appear.
- If this occurs, press the **MENU [JOG]** button to close the pop-up message, and reduce the total copy source size or number before selecting the **NEXT STEP** item.

- After selecting the files to copy, select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial to confirm the selection.

The **RIP TARGET SELECT** screen where you can select the write destination (target) opens

## 10 – CD functions (SS-CDR250N only)

8. Turn the **MULTI JOG** dial to select where you want to write the data (the target).  
If the medium already has a folder structure, move on the **BROWSE** screen to where you want to write the content.  
The folders and files will be written to the position indicated by "RIP HERE".



9. After selecting the write position, select the **NEXT STEP** item in the file menu, and press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.



### NOTE

If a file with the same name already exists at the copy destination, a "Cannot RIP. This name already exists." pop-up message will appear.

10. Press the **MULTI JOG** dial to start writing to the selected medium.



When track writing completes, the CD menu will reopen.

# 11 – Timer Event Functions (USB flash drives and SD cards only)

## Turning the timer event function on/off

Timer events allow recording, playback, downloading and other operations to be conducted automatically at set times.

1. Select **TIMER EVENT** on the **TIMER EVENT** page to open the **TIMER EVENT** screen. (See “Menu operation procedures” on page 22.)



2. Enable or disable the timer event function.

Option	Meaning
OFF (default)	This disables the timer event function.
ON	This enables the timer event function.

3. Confirm the setting and return to the Menu Screen.


### NOTE

- The  icon appears on the Home Screen when the timer event function is on.
- Timer event functions cannot be used when **PLAY AREA** is set to **PLAYLIST** or when the current medium is set to **CD**.

## Opening the timer event list screen

The timer event list screen shows the timer events that will be automatically executed at set times and allows you to work with them.

Select **TIMER EVENT LIST** on the **TIMER EVENT** page to open the timer event screen. (See “Menu operation procedures” on page 22.)

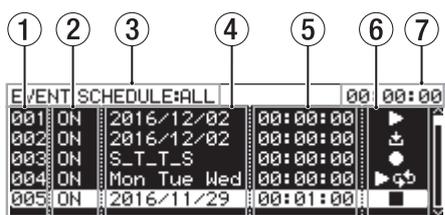

- ① **Number**  
This shows the timer event number.
- ② **ON/OFF status**  
This shows whether a timer event will be executed (ON) or not (OFF).

### ③ SCHEDULE status

Events in the designated range are shown. Use the timer event list menu to set the display range. (See “Timer event bliss menu operations” on page 82.)

Status	Meaning
ALL	All events shown
TODAY	Only today's events shown
YYYY/MM/DD	Events for the set date shown Example: 2016/11/11

### ④ Event execution date/day

This shows the date or day the event will be executed.

- **Date**  
Example: 2016/01/30  
Events that repeat every month will be shown like 2017/\*\*/30.
- **Day**  
Events set for 3 days or less will be shown like Mon/Tue/Wed. Events set for 4 days or more will be shown like \_M\_\_TFS with just the first letters of the days.
- **Every day**  
EVERY DAY will be shown.

### ⑤ Event execution time

This shows the time the event will be executed.

### ⑥ TYPE indicator

Icons are shown for different event types.


Icon	Meaning
	Playback
	Repeat playback
	Record
	Stop
	Download (from an FTP server)
	Delete before downloading (after all audio files in the current folder are deleted, download files from the FTP server)

### ⑦ Current time display (hour: minute: second)

This shows the current time of the built-in clock.

### NOTE

If no events have been added, the screen will appear as shown below.

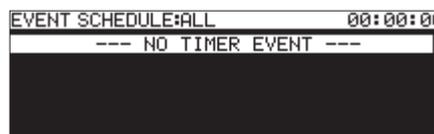

# 11 – Timer Event Functions (USB flash drives and SD cards only)

## Timer event bliss menu operations

Select the desired timer event on the timer event list screen, and press the **MULTI JOG** dial to open the timer event list pop-up menu.



Turn the **MULTI JOG** dial to select the desired operation, and press the **MULTI JOG** dial to execute it as follows.

### SET TO ON/SET TO OFF

Set whether a timer event will be executed (ON) or not (OFF).

### EDIT EVENT

Open the EDIT EVENT screen for the selected timer event. (See “Editing timer events” on page 82.)

### CREATE NEW EVENT

Create a new timer event. (See “Creating new timer events” on page 86.)

### DELETE

Delete the selected timer event. (See “Deleting timer events” on page 86.)

### DELETE ALL

Delete all added timer events. (See “Deleting all timer events” on page 86.)

### SHOW ALL

Show all added timer events.

### SHOW TODAY

Show only timer events for today.

### SHOW SPECIFIED DATE


Show only timer events for a specified date.

### CANCEL


Close the event list menu.

## Editing timer events


Select EDIT EVENT, and open the EDIT EVENT screen.

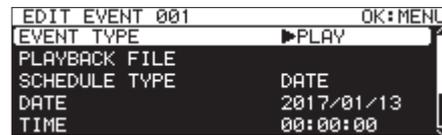


When EVENT TYPE is PLAY or REPEAT PLAY

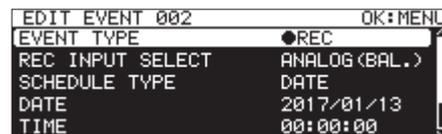

When EVENT TYPE is REC

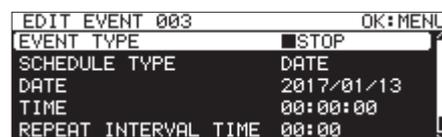

When EVENT TYPE is STOP

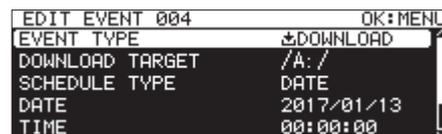

When EVENT TYPE is DOWNLOAD or DEL&DOWNLOAD

Press the **MENU [JOG]** button to confirm the contents and return to the event list screen.

Turn the **MULTI JOG** dial to select the desired item, and press the **MULTI JOG** dial to work with it as follows.

### EVENT TYPE

Set/view the timer event that will be executed automatically at the set time. (See “Setting the event type” on page 83.)

### PLAYBACK FILE

If the EVENT TYPE setting is PLAY or REPEAT PLAY, the PLAYBACK FILE item will appear on the EDIT EVENT screen. Use this item to set/view the file that will be played back automatically at the set time. (See “Selecting files for playback” on page 83.)

### REC INPUT SELECT

If the EVENT TYPE setting is REC, the REC INPUT SELECT item will appear on the EDIT EVENT screen. Use this item to set/view the input that will be used to automatically record at the set time. (See “Selecting the input to use when recording” on page 84.)

### DOWNLOAD TARGET

If the EVENT TYPE setting is DOWNLOAD or DEL&DOWNLOAD, the DOWNLOAD TARGET item will appear on the EDIT EVENT screen. Use this item to set/view the folder/file that will be used when downloading automatically from an FTP server at the set time. (See “Setting folders/files to use for FTP server download” on page 84.)

### SCHEDULE TYPE

Set/show the type of schedule used to execute the timer event. (See “Setting execution schedules for timer events” on page 84.)

# 11 – Timer Event Functions (USB flash drives and SD cards only)

## DATE

Set/view the year, month and day of timer event execution. (See “Setting dates for timer event execution” on page 85.)

## TIME

Set/view the time (hour: minute: second) of timer event execution. (See “Setting times for timer event execution” on page 85.)

## TIME MODE

Set/view whether playback of the playback file starts or stops at the set time. (See “Setting what happens at the time set for the playback timer event” on page 85.)

## REPEAT INTERVAL TIME

Set/view the frequency interval (hours: minutes) of an event that is executed repeatedly. (See “Setting the frequency intervals of events that repeat” on page 85.)

## REPEAT EVENT COUNT

Set/view how many times a repeated event is executed. (See “Setting the number of event repetitions” on page 85.)

## Setting the event type

1. Select **EVENT TYPE**, and open the **EVENT TYPE** screen.



2. Select the timer event that will be executed automatically at the set time.


Option	Meaning
<b>PLAY</b>	Playback
<b>REPEAT PLAY</b>	Repeat playback
<b>REC</b>	Recording
<b>STOP</b>	Stop
<b>DOWNLOAD</b>	Download (from an FTP server)
<b>DEL&amp;DOWNLOAD</b>	Delete before downloading (after deleting all audio files in the current folder, download files from the FTP server)

3. Press the **MULTI JOG** dial.  
This confirms the setting and returns to the **EDIT EVENT** screen.

## Selecting files for playback

If the **EVENT TYPE** setting is **PLAY** or **REPEAT PLAY**, the **PLAYBACK FILE** item will appear on the **EDIT EVENT** screen.

1. Select the **PLAYBACK FILE** item, and press the **MULTI JOG** dial to open the **BROWSE** screen.

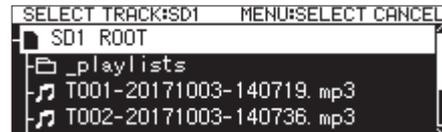

2. Select the desired file as the playback file, and return to the **EDIT EVENT** screen.

## Specifying files for playback

On the **BROWSE** screen for folder selection, press the **MULTI JOG** dial to open a pop-up menu.



Select the **KEYBOARD SCREEN** item, and press the **MULTI JOG** dial to open the file name input screen.

On the file name input screen, input the file name for the item to be played back. Then, return to the **EDIT EVENT** screen.

For details about how to edit the text, see “Editing text” on page 64.

## NOTE


- You can specify files that are not yet on the media.
- On a file name input screen, characters other than English letters, numerals and symbols cannot be input.
- If the file name is wider than the screen, use the **◀ [A-B]** and **▶ [INPUT]** buttons to move the cursor and scroll the file name left and right. If the left or right end is not being shown, “...” will appear at that end.
- To return to the **BROWSE** screen, select **BROWSE ▶** at the top right of the file input screen, and press the **MULTI JOG** dial.

# 11 – Timer Event Functions (USB flash drives and SD cards only)

## Selecting the input to use when recording

If the **EVENT TYPE** setting is **REC**, the **REC INPUT SELECT** item will appear on the **EDIT EVENT** screen.

1. Select **REC INPUT SELECT**, and open the **REC INPUT SELECT** screen.

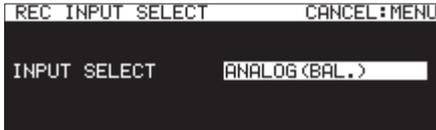

2. Select the input that will be used when recording automatically at the set time.

Options	Meaning
ANALOG<UNBAL.>	Input from <b>ANALOG IN (UNBALANCED)</b> L/R jacks
ANALOG<BAL.>	Input from <b>MIC/LINE IN (BALANCED)</b> L/R jacks
DIGITAL<COAX.>	Input from <b>SPDIF IN</b> jack
DIGITAL<HLR>	Input from <b>AES/EBU IN</b> jack
DIGITAL<Dante>	Input from <b>IF-DA2 Dante</b> interface card

### NOTE

**DIGITAL <Dante>** can only be selected if an **IF-DA2 Dante** interface card (sold separately) is installed in the unit.

### CAUTION

After setting this to **DIGITAL <Dante>**, if the **IF-DA2 Dante** interface card is removed from the unit, recording events will still be executed without changing the input. This could result in audio not being recorded as desired.

3. Press the **MULTI JOG** dial. This confirms the setting and returns to the **EDIT EVENT** screen.

## Setting folders/files to use for FTP server download

If the **EVENT TYPE** setting is **DOWNLOAD** or **DEL&DOWNLOAD**, the **DOWNLOAD TARGET** item will appear on the **EDIT EVENT** screen.

1. Select **DOWNLOAD TARGET**, and press the **MULTI JOG** dial to open the FTP server **DOWNLOAD TARGET** screen.



2. Select the folder/file you want to use for downloading on the FTP server **BROWSE** Screen and press the **MULTI JOG** dial to open the folder or file pop-up menu.
3. Select the **SELECT** item and press the **MULTI JOG** dial to set the folder/file for downloads, and return to the **EDIT EVENT** screen.

## Selecting files/folders for download by inputting path names

Even when an FTP server cannot be connected, you can set names of items to be downloaded.

On the **BROWSE** screen for FTP server folder selection, press the **MULTI JOG** dial to open a pop-up menu.



2. Select the **KEYBOARD SCREEN** item, and press the **MULTI JOG** dial to open the path name input screen.



On the path name input screen, input the path name for the item to be downloaded. Then, return to the **EDIT EVENT** screen.

For details about how to edit the text, see "Editing text" on page 64.

### NOTE

- On a path name input screen, characters other than English letters, numerals and symbols cannot be input.
- "/" and "." only appear when inputting FTP server paths.
- If the path name is wider than the screen, use the ◀◀ [**A-B**] and ▶▶ [**INPUT**] buttons to move the cursor and scroll the path name left and right. If the left or right end is not being shown, "..." will appear at that end.
- To return to the **BROWSE** screen, select **BROWSE ▶** at the top right of the path input screen, and press the **MULTI JOG** dial.

## Setting execution schedules for timer events

1. Select **SCHEDULE TYPE**, and open the **SCHEDULE TYPE** screen.



2. Select the type of schedule used to execute the timer event.

Option	Meaning
DAY OF WEEK	Timer events can be executed on set days of the week (every week).(See "Setting days for timer event execution" on page 85.)
DATE	Timer events can be executed on set dates. (See "Setting dates for timer event execution" on page 85.) , (See "Setting times for timer event execution" on page 85.)
EVERY DAY	Timer events can be set to execute daily.


3. Press the **MULTI JOG** dial. This confirms the setting and returns to the **EDIT EVENT** screen.

# 11 – Timer Event Functions (USB flash drives and SD cards only)

## Setting days for timer event execution

When SCHEDULE TYPE is set to DAY OF WEEK, the DAY OF WEEK item appears on the EDIT EVENT screen, and you can set which days the event executes.

1. Select DAY OF WEEK, and open the DAY OF WEEK screen.

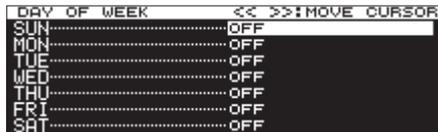

2. Turn the MULTI JOG dial to turn an item on/off. Press the MULTI JOG dial to move the cursor to the next line. Use the ◀◀ [A-B] and ▶▶ [INPUT] buttons to move the cursor.

**Options:** OFF (default), ON

3. Press the MULTI JOG dial when on the bottom row to confirm the settings and return to the EDIT EVENT screen. Press the MENU [JOG] button to cancel setting changes and return to the EDIT EVENT screen.

## Setting dates for timer event execution

When SCHEDULE TYPE is set to DATE, you can set the year/month/day that the timer event executes on the DATE screen.

1. Select SCHEDULE TYPE DATE, and open the DATE screen.




2. Set the year, month and day of timer event execution.
3. The cursor will disappear and setting the date and time will complete after you change the year, month and day in order.

### NOTE

The month can be set to monthly (\*\*) if you want the event to occur every month of the year (01-12).

## Setting times for timer event execution

1. Select SCHEDULE TYPE DATE, and open the TIME screen.

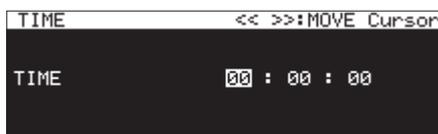

2. Set the time (hour: minute: second) of timer event execution. **Options:** 00:00:00 (default) – 23:59:59

3. Turn the MULTI JOG dial to change the time setting. Press the MULTI JOG dial to move the cursor right. You can also use the ◀◀ [A-B] and ▶▶ [INPUT] buttons to move the cursor. Press the MULTI JOG dial when the cursor is on the second to confirm the setting and return to the EDIT EVENT screen.

## Setting what happens at the time set for the playback timer event

1. Select TIME MODE, and open the TIME MODE screen.



2. Set whether playback of the playback file starts or stops at the set time.

Option	Meaning
START TIME	Set the event to start playback of the playback file at the set time.
END TIME	Set the event to end playback of the playback file at the set time.

## Setting the frequency intervals of events that repeat

1. Select REPEAT INTERVAL TIME, and open the REPEAT INTERVAL TIME screen.




2. Set the frequency interval (hours: minutes) of the event that is executed repeatedly.

**Options:** 00:00 (default) – 23:59

3. After setting the hour and minute in order, the time will be set and the cursor will disappear.

## Setting the number of event repetitions

1. Select REPEAT EVENT COUNT, and open the REPEAT EVENT COUNT screen.

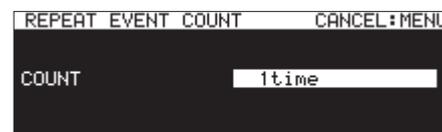

2. Set the number of times that event execution is repeated.

**Options:** 1time (default), 100times


### NOTE

If the REPEAT EVENT COUNT screen is set to 1time, the event will not repeat.

# 11 – Timer Event Functions (USB flash drives and SD cards only)

## Creating new timer events

1. Select **CREATE NEW EVENT**, and open the **EDIT NEW EVENT** screen.

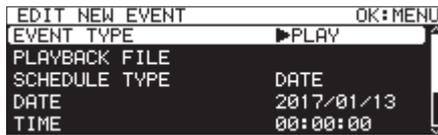

2. Make settings for the timer event. (See “Editing timer events” on page 82.)

### NOTE

A maximum of 200 events can be added and executed. For example, if there are 25 events that are set to repeat 10 times each, the total number of events to execute would be 250 (10×25). Since this is too many, only the first 20 events in the list would be executed, bringing the total down to 200 (10×20). The last 5 events in the list would not be executed.

## Deleting timer events

1. Select the timer event that you want to delete, and open the timer events list pop-up menu. (See “Timer event bliss menu operations” on page 82.)
2. Select **DELETE**, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



3. Press and hold the **MULTI JOG** dial to delete the selected timer event. When deleting completes, the **EDIT EVENT** screen reopens.

### NOTE

Press the **MENU [JOG]** button to cancel timer event deletion.

## Deleting all timer events

1. Open the timer event list pop-up menu. (See “Timer event bliss menu operations” on page 82.)
2. Select **DELETE ALL**, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



3. Press and hold the **MULTI JOG** dial to delete all timer events. When deleting completes, the **EDIT EVENT** screen reopens and “---NO TIMER EVENT---” appears.

### NOTE

Press the **MENU [JOG]** button to cancel timer event deletion.

# 12 – Mark and Locate Functions

## Mark functions (USB flash drives and SD cards only)

### Adding marks

Marks can be added in the following ways. Including marks added by the automatic mark function, one file can have up to 99 marks added to it.

#### Adding marks manually

Press the **MULTI JOG** dial to add a mark at the current playback/recording point.

The mark will be named MARKxx.



#### CAUTION

Marks can be added to MP3 files recorded by this unit, but marks cannot be used with other MP3 files.

#### Adding marks automatically

The automatic mark function allows the unit to add marks automatically during recording. For details about the automatic mark function, see “Adding marks automatically when recording” on page 68.

The marks will be named according to type.


Reason mark added automatically	Mark name
Audio level reached 0 dB (full bit).	OVERxx
At set time interval	TIMExx
Synchronization with external clock lost	UNLKxx
Point where recording started using pre-recording	RECxx
Time when buffer overflow occurred	BOFxx

#### Adding marks with external devices

Used in combination with an Audio-Technica Corporation ATDM-1012 or ATDM-1012DAN Digital SmartMixer, marks can be added especially for minute-taking applications.

For details about connecting an ATDM-1012 or ATDM-1012DAN to this unit and using it to add marks, see the ATDM-1012 User Manual.

Used this way, one file can have up to 999 marks added to it.

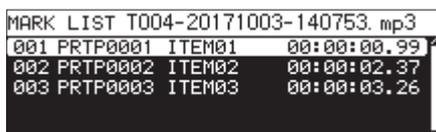

MARK LIST screen with marks added by an ATDM-1012

Notation on screen	Meaning
PRTP	ID number for specific participant
ITEM	ID number for specific minute item


#### CAUTION

- When used in combination with an ATDM-1012 or ATDM-1012DAN, the automatic mark function is disabled.
- Control from an ATDM-1012/ATDM-1012DAN is not supported with CD-R/CD-RW media.

### Using marks

Select the **MARK LIST** item on the **MARK LIST** page to open the **MARK LIST** screen. (See “Menu operation procedures” on page 22.)

No **Mark Point** is shown if the current file has no marks.

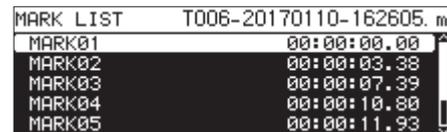

Select the desired mark on the **MARK LIST** screen and press the **MULTI JOG** dial to open the mark pop-up menu.



Turn the **MULTI JOG** dial to select the desired item, and press the **MULTI JOG** dial to work with it as follows.

#### LOCATE

Move to the selected mark. (See “Moving to marks” on page 88.)

#### EDIT TIME

Open the **EDIT MARK TIME** screen where you can edit the selected mark. (See “Editing mark locations” on page 88.)

#### EDIT NAME

Open the **MARK NAME** screen where you can edit the name of the selected mark. (See “Editing mark names” on page 88.)

#### DELETE

Delete the selected mark. (See “Deleting marks” on page 88.)

#### DELETE ALL

Delete all marks in the current file. (See “Deleting all marks in the current file” on page 88.)

#### SORT BY TIME

Show marks sorted by time.

#### SORT BY NAME

Show marks sorted by name.

#### INFO

Open a pop-up with the number of marks of each type in the current file. (See “Viewing mark information” on page 88.)

#### CANCEL

Close the mark menu.

#### NOTE

When marks have been added using an ATDM-1012 or ATDM-1012DAN, only the **LOCATE**, **DELETE** and **CANCEL** items will be shown.

# 12 – Mark and Locate Functions

## Moving to marks

### Using the MULTI JOG dial to move to marks

When the home screen is open during playback or playback standby and marks have been added, turn the **MULTI JOG** dial to move to marks.

### Using the menu to move to marks

1. Turn the **MULTI JOG** dial to select the mark to which you want to move.
2. Press the **MULTI JOG** dial to open the mark pop-up menu, select the **LOCATE** item and press the **MULTI JOG** dial to move to the selected mark. (See “Using marks” on page 87.)

## Editing mark names

1. Select the mark with the name that you want to edit and press the **MULTI JOG** dial to open the mark pop-up menu. (See “Using marks” on page 87.)
2. Select **EDIT NAME** in the mark menu, and press the **MULTI JOG** dial to open the **MARK NAME** screen.



3. Input the mark name.  
For details about how to edit the mark name, see “Editing text” on page 64.

### NOTE

- The names of marks created by the automatic mark function cannot be changed.
- Editing the names of marks is only possible when stopped or in playback standby.

## Deleting marks

1. Select the mark that you want to delete and press the **MULTI JOG** dial to open the mark pop-up menu. (See “Using marks” on page 87.)
2. Select **DELETE** in the mark menu, and press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.
3. Press the **MULTI JOG** dial again to open a second confirmation pop-up message.
4. Press and hold the **MULTI JOG** dial to delete the selected mark.

### NOTE

Deleting marks is only possible when stopped or in playback standby.

## Deleting all marks in the current file

1. Press the **MULTI JOG** dial to open the mark pop-up menu. (See “Using marks” on page 87.)
2. Select **DELETE ALL** in the mark menu, and press the **MULTI JOG** dial.  
A confirmation pop-up message will appear.
3. Press the **MULTI JOG** dial again to open a second confirmation pop-up message.
4. Press and hold the **MULTI JOG** dial to delete all marks in the current file.

### NOTE

Deleting marks is only possible when stopped or in playback standby.

## Editing mark locations

You can use the **MULTI JOG** dial to edit the positions (times) of added marks (marks named “MARK xx”).

### NOTE

- The names of marks created by the automatic mark function cannot be changed.
  - Editing the locations of marks is only possible when stopped or in playback standby.
1. Select the mark with the location that you want to edit and press the **MULTI JOG** dial to open the mark pop-up menu. (See “Using marks” on page 87.)
  2. Select **EDIT TIME** in the mark menu, and press the **MULTI JOG** dial.
  3. When the **EDIT MARK TIME** screen opens, use the **MULTI JOG** dial to change the time.




Press the **MULTI JOG** dial when the cursor is in the last field to confirm the setting and return to the **MARK LIST** screen.

### NOTE

- When editing, you can press the **MENU [JOG]** button to cancel the changes and return to the **MARK LIST** screen.
- You can also use a USB keyboard to input numbers.

## Viewing mark information

Press the **MULTI JOG** dial to open the mark pop-up menu, select the **INFO** item and press the **MULTI JOG** dial again to show the numbers of marks of different types in the current file. (See “Using marks” on page 87.)

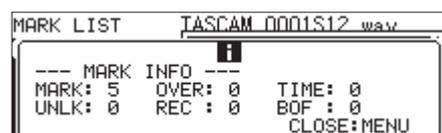

Press the **MENU [JOG]** button to close the pop-up.

---

## Locating to a specific time

---

You can locate to a specific time using a USB keyboard when stopped, playing back or in playback standby.

### CAUTION

Locating is not possible if the playback mode is **PROGRAM** or **RANDOM** or the playback area is **PLAYLIST** or **FOLDER**.

When the Home Screen is open, press the \* (asterisk) key to clear the track number and time display and enable numerical input. Use the keypad to enter numbers in the following order.

- Track number: 3 digits
- Time elapsed from track beginning in hours, minutes, seconds and 10msec increments (2 digits each)

For example, enter the following numbers in order to specify the location 1 minute and 30 seconds from the beginning of track 2.

**0 → 0 → 2 → 0 → 0 → 0 → 1 → 3 → 0 → 0 → 0**

After inputting the 11th digit, the unit will automatically locate to the specified time.

The status of the unit after locating will be the same as it was before (stopped, in playback standby or playing).

For this reason, playback will resume at the new time after locating during playback.

### NOTE

Using the Backspace or / (backslash) key on the USB keyboard will delete the last input number.

---

## Locating before completely specifying the time

Before inputting all the numbers to specify a time, you can locate to the time specified immediately by pressing the Enter key on the USB keyboard, the **MULTI JOG** dial or the **PLAY** or **PAUSE [CALL]** button on the unit.

For example, entering the following incomplete time.

**0 → 0 → 2 → 0 → 0 → 1 → 2**

Press the **PLAY** button to locate to 12 minutes from the beginning of track 2.

What happens after locating depends on which control was pressed.

### If the **MULTI JOG** dial was pressed:

Playback or playback standby is resumed according to the state before locating.

### If the **PLAY** button was pressed:

Playback starts.


### If the **PAUSE [CALL]** button was pressed:

The unit enters playback standby.

# 13 – Network Functions

## Network function settings

The unit can be connected to a network using its Ethernet connector, allowing file transfer and external control of the unit. Use the NETWORK 1 and NETWORK 2 pages to make network function settings.

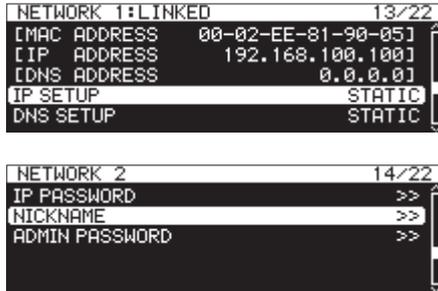

### LINKED/UNLINKED

The status of the network link between devices is shown after the NETWORK page.

Status	Meaning
LINKED	A link is established.
UNLINKED	A link is not established.

### MAC ADDRESS

This shows the unit's MAC address.

### IP ADDRESS

This shows the current IP address.


### DNS ADDRESS

This shows the IP address of the DNS server.

### IP SETUP

This shows the setting status of the MODE item on the IP SETUP screen.

Select the IP SETUP item, and press the **MULTI JOG** dial to open the IP SETUP screen.

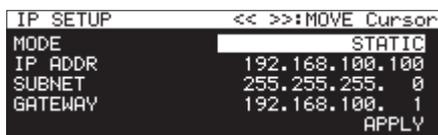

When MODE set to STATIC



When MODE set to AUTO

### MODE item:

Set the IP address setting mode.

Option	Meaning
STATIC	Set the IP ADDR, SUBNET and GATEWAY items on the IP SETUP screen manually.
AUTO (default)	Set the IP ADDR, SUBNET and GATEWAY items on the IP SETUP screen automatically. Use this setting if there is a DHCP server on the network.

### IP ADDR/SUBNET/GATEWAY items:

When the IP SETUP screen MODE item is set to STATIC, the IP ADDR, SUBNET and GATEWAY items appear and their settings can be changed.

### Options: 0 – 255

(IP ADDR item default: 192. 168. 100. 100)

(SUBNET item default: 255. 255. 255. 0)

(GATEWAY item default: 192. 168. 100. 1)

When MODE is set to STATIC, press the **MULTI JOG** dial on APPLY in the last line to confirm the changed settings and return to the Menu Screen.

### NOTE

Press the **MENU [JOG]** button to cancel the menu operation and return to the Menu Screen.

### DNS SETUP

This shows the setting status of the MODE item on the DNS SETUP screen.

Select DNS SETUP, and press the **MULTI JOG** dial to open the DNS SETUP screen.



When MODE set to STATIC



When MODE set to AUTO

On the DNS SETUP screen, set the IP address of the DNS server so the IP address can be looked up from the server name.

### MODE item:

Set the IP address setting mode.

Option	Meaning
STATIC	Set the IP address of the DNS server manually.
AUTO (default)	Set the IP address of the DNS server automatically. Use this setting if there is a DHCP server on the network that will return the IP address of the DNS server.

### DNS ADDR item:

When the DNS SETUP screen MODE item is set to STATIC, a DNS ADDR item appears and its setting can be changed.

Options: 0 – 255 (default: 0. 0. 0. 0)

When **MODE** is set to **STATIC**, press the **MULTI JOG** dial on **APPLY** in the last line to confirm the changed settings and return to the Menu Screen.

### NOTE

Press the **MENU [JOG]** button to cancel the menu operation and return to the Menu Screen.

### IP PASSWORD

Select the **PASSWORD** item, and press the **MULTI JOG** dial to open the **PASSWORD** screen.



Set the password (default: **SS-CDR250N/SS-R250N**). Use up to 10 characters. For details about how to edit the text, see “Editing text” on page 64.

### NOTE

Press the **MULTI JOG** dial on **PRESET** to input the default: “**SS-CDR250N/SS-R250N**”.

### NICKNAME

Select the **NICKNAME** item, and press the **MULTI JOG** dial to open the **NICKNAME** screen.



Set the nickname used to identify the device (default: **SS-CDR250N/SS-R250N**). By setting nicknames, specific devices can be identified by the TASCAM SS250 CONTROL remote control application. Input up to 16 characters. For details about how to edit the text, see “Editing text” on page 64.

### NOTE

Press the **MULTI JOG** dial on **PRESET** to input the default: **SS-CDR250N** or **SS-R250N**.

### ADMIN PASSWORD

Select the **ADMIN PASSWORD** item, and press the **MULTI JOG** dial to open the **ADMIN PASSWORD** screen.




Set the administrator password (default: **SS-CDR250N** or **SS-R250N**). By setting an administrator password, power management with the TASCAM SS250 CONTROL remote control application can be enabled. Input up to 10 characters. For details about how to edit the text, see “Editing text” on page 64.

### NOTE

Press the **MULTI JOG** dial on **PRESET** to input the default: **SS-CDR250N** or **SS-R250N**.


## FTP client function settings

FTP client function settings can be made on the **FTP CLIENT** page.

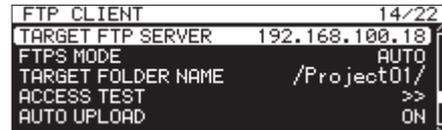

### TARGET FTP SERVER

This opens the **TARGET FTP SERVER** screen. Make various settings for FTP server connections.

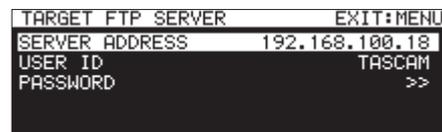

#### SERVER ADDRESS item:

Set the address of the FTP server being connected.

#### USER ID item:

Set the user ID to use when connecting to the FTP server.

#### PASSWORD item:

Set the password to use when connecting to the FTP server.

### FTPS MODE

This shows the setting status of the **MODE** item on the **FTPS MODE** screen. Select **FTPS MODE**, and press the **MULTI JOG** dial to open the **FTPS MODE** screen.



Set the mode used for SSL encryption of data sent and received by FTP on the **FTPS MODE** screen.

#### MODE item:

Option	Meaning
AUTO (default)	Using this mode, the unit will try to connect using FTPS that is encrypted by SSL. If connection is not possible, it will try to connect using ordinary FTP.
OFF	In this mode, the unit connects by ordinary FTP.

### NOTE

- If the FTP server being connected does not support FTPS, the transmission of data using this unit's FTP client might be slower if set to **AUTO**.
- If connection encrypted by SSL is not necessary, setting the **FTPS MODE** to **OFF** might increase the data transmission speed.
- This unit's FTPS supports Explicit mode.

# 13 – Network Functions

- Encryption protocol standards
  - SSLv3/TLSv1 supported
  - TLSv1 support includes TLSv1.0/1.1/1.2
  - Encryption algorithms: ARC4 (RC4), DES, 3DES, AES
  - Hash algorithms: MD5, SHA1, SHA256

## TARGET FOLDER NAME


This sets the default folder on the FTP server used when uploading to it and downloading from it.

1. Select **TARGET FOLDER NAME**, and press the **MULTI JOG** dial to open the FTP server **BROWSE** screen.
2. Select the folder to use on the FTP server **BROWSE** screen and press the **MULTI JOG** dial to open the pop-up folder menu. Select the **SELECT** item, and return to the menu screen.

## Selecting folders to use by inputting path names

Even when an FTP server cannot be connected, you can set names of folders to use.

On the **BROWSE** screen for FTP server folder selection, press the **MULTI JOG** dial to open a pop-up menu.

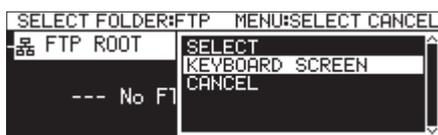

Select the **KEYBOARD SCREEN** item, and press the **MULTI JOG** dial to open the path name input screen.



Input the path name for the item on the path name input screen, and return to the menu screen.

For details about how to edit the text, see "Editing text" on page 64.

### NOTE

- On a path name input screen, characters other than English letters, numerals and symbols cannot be input.
- "/" and "." only appear when inputting FTP server paths.
- If the path name is wider than the screen, use the ◀◀ [A-B] and ▶▶ [INPUT] buttons to move the cursor and scroll the path name left and right. If the left or right end is not being shown, "..." will appear at that end.
- To return to the **BROWSE** screen, select **BROWSE ▶** at the top right of the path input screen, and press the **MULTI JOG** dial.

## ACCESS TEST

Press the **MULTI JOG** dial to test the connection with the set FTP server, and open a pop-up with the result.



The illustration above shows an example of a connection result.

## AUTO UPLOAD

This shows the setting status of the **MODE** item on the **AUTO UPLOAD** screen.

Select **AUTO UPLOAD**, and press the **MULTI JOG** dial to open the **AUTO UPLOAD** screen.



Set the **AUTO UPLOAD** screen to automatically upload files that have completed recording to the FTP server.

### MODE item:

Options	Meaning
OFF (default)	Do not automatically upload.
ON	Automatically upload.
DEL. AFTER UPLOAD	Automatically delete files that have been uploaded.

### NOTE

The automatic uploading function is disabled when the current medium is CD. In this case, the **FTP CLIENT** page **AUTO UPLOAD** item will appear as "-----".

## FTP server functions

By using an FTP client application on a computer, you can transfer files between this unit and the computer. Connect to this unit and log in as you would with another FTP server.

When you connect and log in, "A:", "B:" and "C:" will appear in the root directory. These correspond to the media loaded in "SD1", "SD2" and "USB".

If the corresponding media are not loaded, nothing will appear after "A:", "B:" and "C:".

### NOTE

- CDs cannot be accessed using FTP server functions.
- For information about FTP client applications that have already been confirmed to work with this unit, please contact the TASCAM customer support service.

## Required settings for FTP connection

The following settings are necessary to connect to this unit by FTP.

**IP address:** The IP address of the unit is shown in the **IP ADDRESS** item on the **NETWORK 1** page.

**Port number:** 21

**User name:** SS-CDR250N/SS-R250N Case-sensitive (cannot be changed)

**Password:** SS-CDR250N/SS-R250N (default) (Case-sensitive)  
This can be changed on the **PASSWORD** screen. (See "Network function settings" on page 90.)

### NOTE

- The simultaneous connection number is "1".
- Depending on the FTP client application, you might be able to connect 2 of these units by FTP simultaneously, but this could cause normal file transmission to fail. For this reason, we recommend that you do not simultaneously connect 2 units by FTP.
- FTP connection is not possible when **232C/PARA/NETWORK** is

set to **LOCK** on the **LOCK SETUP** screen. (See “Setting the lock function” on page 30.)

- If the setting is changed to **LOCK** when there is an FTP connection, the connection will be interrupted.
- If a **NETWORK 1** or **NETWORK 2** page setting is changed when there is an FTP connection, the connection will be interrupted.

## Overview of file operations using an FTP client application

1. Reading files from the unit  
Except for the file that is currently being recorded, reading files from the unit is always possible.
2. Adding new files to the unit  
Adding new files to the unit is always possible.  
If BWF, WAV or MP3 files are added to the current folder during recording, files will be shown in the list in order from existing files to recorded files and then added files.
3. Overwriting existing files on the unit  
The current file can only be overwritten when the unit is stopped.  
Overwriting all other existing files on the unit is always possible. However, if the **PLAY MODE** item on the **PLAY MODE** screen is set to **ALL** and the unit is playing, overwriting the file after the current file might not be possible depending on the timing. (See “Setting the play mode” on page 32.)

### CAUTION

- Problems might occur if the size, number of channels, bit depth or sampling frequency of the overwritten file differs from the original file.  
An error message might appear if playback is attempted when a problem has occurred.  
Delete that file from the USB flash drive or SD card to resolve the problem and stop the error message from appearing.
  - Do not overwrite existing audio files with files that use different sampling frequencies. Doing so could make it impossible to resolve the problem
4. Deleting files on the unit  
The current file can only be deleted when the unit is stopped. Files other than the current file can be deleted at any time. Since discrepancies between system and audio files will occur after deleting a file, system files will be automatically updated (after stopping if playing back or recording).  
A “**WRITING SYSTEM FILE**” pop-up message will appear at such times.

### CAUTION

Playback and recording are disabled while the “**WRITING SYSTEM FILE**” message appears.  
Be aware of the timing when deleting folders and files from an FTP client.

5. Adding new folders to the unit  
Adding new folders to the unit is always possible.
6. Deleting folders on the unit  
The current folder can only be deleted when the unit is stopped.  
Folders other than the current folder can be deleted at any time.
7. Change the names of files and folders on the unit  
The names of files and folders on the unit cannot be changed.

## Remote control

Remote control of this unit by Ethernet using Telnet through port 23 is possible.

### Required settings for Telnet connection

The following settings are necessary to connect to this unit by Telnet.

IP address: The IP address of the unit is shown in the **IP ADDRESS** item on the **NETWORK 1** page.

Port number: 23

Password: **SS-CDR250N/SS-R250N** (default) (Case-sensitive)  
This can be changed on the **PASSWORD** screen. (See “Network function settings” on page 90.)

### Connecting to this unit by Telnet

1. After connecting to this unit by Telnet with the above IP address and port number, press the computer Enter key.
2. “**Enter Password**” will appear on the Telnet console. Input the above password and press the Enter key.
3. When login succeeds, “**Login Successful**” will appear on the Telnet console.  
Input “**exit**” and press the Enter key to end the Telnet connection.

### NOTE

- Three Telnet connections are possible at the same time.
- Telnet connection is not possible when **232C/PARA/NETWORK** is set to **LOCK** on the **LOCK SETUP** screen. If the setting is changed to **LOCK** when there is a Telnet connection, the connection will be interrupted. (See “Setting the lock function” on page 30.)
- If a **NETWORK 1** or **NETWORK 2** page setting is changed when there is an Telnet connection, the connection will be interrupted.
- For information about this unit's Telnet command protocol, please contact the TASCAM customer support service.

# 13 – Network Functions

## Setting the SNTP function

Use the **SNTP** page to make settings for automatically synchronizing with the date and time of an Internet time server.



### SNTP STATUS

This shows the current status of the SNTP function.

Message	Status
SUCCESSFUL UPDATE	The time was updated properly.
SUCCESS UPDATE (SKEW)	A delay occurred, but the time was updated.
STARTING UP	The unit is preparing for operation.
ACCESSING SERVER	The unit is connecting with a server.
DISABLED	The SNTP function is disabled.
WAITING FOR NETWORK	The unit is waiting to confirm the network connection.
SERVER NAME NOT FOUND	The server name could not be found on the DNS server.
SERVER NAME FOUND	The server name was found on the DNS server.
SERVER CONNECT FAILED	The server has not responded.
REFUSING CONNECTIONS	Server responded, but is refusing additional connections; select a different SNTP server.

### SNTP UPDATE

This shows the setting status of the **MODE** item on the **SNTP UPDATE** screen.

Select **SNTP UPDATE**, and open the **SNTP UPDATE** screen. (See “Menu operation procedures” on page 22.)



### MODE item:

Set the SNTP function update mode.

Option	Meaning
DISABLE (default)	Do not use an SNTP function update mode.
START UP	When the unit starts up, get the time from an NTP server and use it to set the built-in clock.
START UP/24CYCLE	Get the time from an NTP server and use it to set the built-in clock when the unit starts up, as well as when the time set with the <b>TIME</b> item occurs every 24 hours.

### TIME item:

Set the time to acquire the time from the NTP server.

**Options:** 00:00 – 00:09 – 23:00 – 23:09 (01:00 steps)  
(default: 00:00 – 00:09)

### NOTE

- When using the SNTP function, you must set the **NETWORK 1** page **DNS SETUP** item and the **NTP Server** item, which is explained below.
- On this screen, local time is set, not Coordinated Universal Time (UTC).
- Since access to SNTP servers on the hour could result in congestion, the unit will access the SNTP server randomly during the first 10 minutes of the hour.

### NTP SERVER

This shows the setting status of the **NTP SERVER** screen.

Select **NTP SERVER**, and open the **NTP SERVER** screen. (See “Menu operation procedures” on page 22.)



Edit the NTP server name, which must have no more than 32 characters (default: ntp.nict.jp).

For details about how to edit the text, see “Editing text” on page 64.

### NOTE

Press the **MULTI JOG** dial on **PRESET ▲** to open a pull up menu.



Turn the **MULTI JOG** dial to select a menu item, and press the **MULTI JOG** dial to input the preset value of that item.

Press the **MENU [JOG]** button to close the pull-up menu.

## TIME ZONE

This shows the setting status of the **TIME ZONE** item on the **TIME ZONE** screen.

Select **TIME ZONE**, and press the **MULTI JOG** dial to open the **TIME ZONE** screen. (See “Menu operation procedures” on page 22.)



### TIME ZONE item:

Set the time offset from Coordinated Universal Time (UTC).

**Options:** -12:00 – +14:00 (00:15/step) (default: +09:00)

### NOTE

- To use Japan Standard Time (JST), set this to +09:00.
- For the United States, use one of the following settings.


Zone	Setting
Pacific Standard Time (PST) zone	-08:00
Mountain Standard Time (MST) zone	-07:00
Central Standard Time (CST) zone	-06:00
Eastern Standard Time (EST) zone	-05:00

## DAYLIGHT SAVING


This is the settings screen for the daylight saving time function, which advances the built-in clock during the set period.

This shows the setting status of the **MODE** item on the **DAYLIGHT SAVING** screen.

Select **ENABLE** for the **MODE**, and press the **MULTI JOG** dial to open the daylight saving time function settings screen. (See “Menu operation procedures” on page 22.)

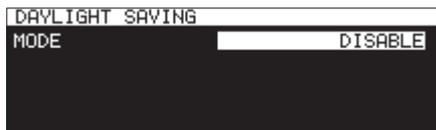

MODE set to **DISABLE**

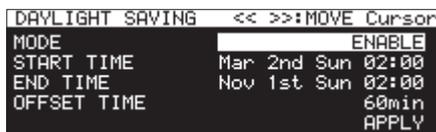

MODE set to **ENABLE**

### MODE item:

Set whether or not to enable the daylight saving time function.

### Options

**DISABLE** (default): Do not use the daylight saving time function.

**ENABLE:** Use the daylight saving time function.

### START TIME/END TIME items:

Set when to start and end use of the daylight saving time function.

Setting item	Options
Month	Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec
Week	1st, 2nd, 3rd, 4th, 5th, Last
Day	Sun, Mon, Tue, Wed, Thu, Fri, Sat
Time	00:00 – 24:00 (01:00/step)

**START TIME** defaults: Mar/2nd/Sun/02:00

**END TIME** defaults: Nov/1st/Sun/02:00

### OFFSET TIME item:

Set the amount to advance the clock during daylight saving time.

**Options:** 30min, 60min (default)

### NOTE

On this screen, local time is set, not Coordinated Universal Time (UTC).

When the **MODE** item is set to **ENABLE**, press the **MULTI JOG** dial on **APPLY** in the last line to confirm the changed settings and return to the Menu Screen.

### NOTE


Press the **MENU [JOG]** button to cancel the menu operation and return to the Menu Screen.

# 14 – Other Settings, Information Screens and Keyboard Operations

## Power on action function setting

By using a commercially-available timer or other external device to turn this unit on, you can make this unit start playing or recording at a desired time.

1. Connect the unit to the timer so that it receives power from the timer's power output.
2. Load the current media to use for playback or recording and make the necessary settings.
3. Select **POWER ON ACTION** on the **UTILITY** page, and open the **POWER ON ACTION** screen. (See "Menu operation procedures" on page 22.)

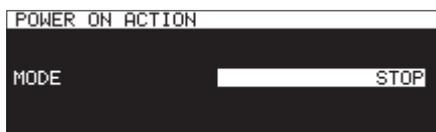

4. Select the **MODE** item, and set the power on action (behavior at time set by external timer).

Option	Meaning
OFF (default)	This turns the unit off (puts it in standby).
STOP	This turns the unit on, but it stays in a stopped state.
PLAY	This turns the unit on, and it automatically starts playback.
REC	This turns the unit on, and it automatically starts recording.

5. Confirm the setting and return to the Menu Screen.
6. Set the external timer to the desired time. When the set time is reached, the set power on action will begin.

## Adjusting the analog output

If sound distorts from an output destination device at maximum output level, you can use this unit's analog output level function, which lowers the output level, to stop distortion.

1. Select **OUTPUT LEVEL** on the **UTILITY** page to open the **OUTPUT LEVEL** screen. (See "Menu operation procedures" on page 22.)




2. Set the analog output level.  
**Options:** -14dB – 2dB (default: 0dB) (1dB increments)
3. Confirm the setting and return to the Menu Screen.

## Setting the remote power control function

The unit can be set to allow it to be turned on by an external controller when it is off (in standby).

1. Select **REMOTE POWER CONTROL** on the **UTILITY** page, and open the **REMOTE POWER CONTROL** screen. (See "Menu operation procedures" on page 22.)

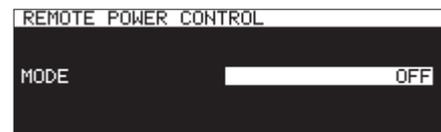

2. Select the **MODE** item, and set the remote power control function.

Option	Meaning
OFF (default)	The power cannot be turned on from an external controller.
ON	The power can be turned on and off from an external controller.

3. Confirm the setting and return to the Menu Screen.

## Setting the reference level

You can set the analog input and output headroom (difference between the maximum and reference levels).

1. Select **REFERENCE LEVEL** on the **PREFERENCES** page, and open the **REFERENCE LEVEL** screen. (See "Menu operation procedures" on page 22.)



2. Set the reference level.

Option	Meaning
-9dB	+6dBu standard level, +15dBu maximum level
-14dB	+4dBu standard level, +18dBu maximum level
-16dB (default)	+4dBu standard level, +20dBu maximum level
-18dB	+4dBu standard level, +22dBu maximum level
-20dB	+4dBu standard level, +24dBu maximum level

3. Confirm the setting and return to the Menu Screen.

# 14 – Other Settings, Information Screens and Keyboard Operations

## Using a USB keyboard to operate the unit

You can connect a Windows-compatible USB keyboard or numeric keypad to the **USB** port on the front of the unit, and use it to control the unit.

Various controls are possible, but it makes inputting text much more efficient.

### Setting the keyboard type

Set the type of keyboard being connected.

1. Select **KEYBOARD** on the **PREFERENCES** page to open the **KEYBOARD TYPE** screen. (See “Menu operation procedures” on page 22.)



2. Set it to **US** (English-language keyboard) or **JPN** (Japanese keyboard).  
**Options:** JPN (default), US
3. Confirm the setting and return to the Menu Screen.

### Using the keyboard to input names and values

You can edit and input characters for the following items in the same way as with a computer.

- Folder names (See “Creating new folders” on page 47.)
- File names (See “Editing folder and file names” on page 45.)
- Passwords (See “Network function settings” on page 90.)
- NTP server names (See “Setting the SNTP function” on page 94.)
- Mark names (See “Editing mark names” on page 88.)

You can also input numbers for the following items.

- Locating to a specific time (See “Locating to a specific time” on page 89.)
- User-set file names 1–3 (See “Setting the file name format” on page 63.)
- FTP server names (See “FTP client function settings” on page 91.)
- FTP user ID (See “FTP client function settings” on page 91.)
- FTP target folder names (See “FTP client function settings” on page 91.)
- Timer event playback path names (See “Selecting files for playback” on page 83.)
- Timer event download target path names (See “Setting folders/files to use for FTP server download” on page 84.)

#### Selecting the type of character input:

Use the Shift and Caps Lock keys to change the type of character input in the same way as with a computer.

#### Inputting characters:

Use the number, character and symbol keys to input characters directly.

#### Moving the cursor:

Use the ← and → keys.

Use the HOME/↑ key to move the cursor to the beginning.

Use the END/↓ key to move the cursor to the end.

#### Deleting a character:

Delete key: delete character at cursor

Back Space key: delete character before cursor

#### Inserting characters:

Input the character at the desired position (default: insert mode).

If the character input mode is not set to the default insert mode, press the Insert key to switch to insert mode before inputting characters.

#### Correcting characters:

Press the Insert key to switch to overwrite mode, move the cursor and input the correct character.

#### CAUTION

- The following symbols and punctuation marks cannot be used in text.  
/: \* ? " ' < > |
- Japanese characters cannot be input.

You can also input values on the following screens.

**EDIT MARK TIME** screen (See “Editing mark locations” on page 88.)

**IP SETUP** screen (See “Network function settings” on page 90.)

**DNS SETUP** screen (See “Network function settings” on page 90.)

- When these screens are open, use the ← or / (slash) key to move the cursor left and the → or Enter key to move it right.
- On the **IP SETUP** and **DNS SETUP** screens, use the “.” (decimal point) key to move the cursor right.
- Use the ↑ or + key to increase values.
- Use the ↓ or – key to decrease values.

## List of keyboard operations

In addition to inputting names, you can also use the keyboard for transport control, editing and various other operations.

The functions of buttons on the front of the unit are assigned to the keyboard as follows. Character input and control modes switch automatically according to the unit operation.

### Transport operations

Keyboard key	Function
← key	Same as ◀◀ [A-B] button
→ key	Same as, ▶▶ [INPUT] button
Space bar	Same as <b>PLAY</b> and <b>PAUSE [CALL]</b> buttons
Ctrl + S key	Same as <b>STOP</b> button
Ctrl+R key	Same as <b>RECORD [TRK INC]</b> button
Ctrl + F key	Track skip (FWD)
Ctrl + B key	Track skip (REW)
↑ key	Same as turning the <b>MULTI JOG</b> dial right on the Home Screen (move to next mark)
↓ key	Same as turning the <b>MULTI JOG</b> dial left on the Home Screen (move to previous mark)

### Operations on menu, browse and other screens

Keyboard key	Function
Esc key	Cancel editing, including text, and return to the Home Screen
F1 key	Open the <b>INFORMATION</b> screen

## 14 – Other Settings, Information Screens and Keyboard Operations

Keyboard key	Function
F2 key	Open the Menu Screen
F3 key	Open the EDIT menu
F4 key	Open the <b>BROWSE</b> screen
F5 key	Turn repeat playback on/off
F6 key	Turn A-B repeat playback on/off
F7 key	Turn the pitch control function on/off
F8 key	Turn the key control function on/off
F9 key	Turn the auto cue function on/off
F10 key	Turn the auto ready function on/off
F11 key	Turn the incremental playback function on/off
F12 key	Start flash loading
Shift + F5 key	Set WAV file bit length
Shift + F6 key	Open recording format screen
Shift + F7 key	Set MP3 file bit rate
Shift + F8 key	Turn automatic track function on/off
Shift + F9 key	Turn synchronized recording function on/off
Shift + F10 key	Turn sampling rate converter on/off
Shift + F11 key	Dynamics setting
Ctrl + F1 key	After flash loading completes, flash start playback of track 1
Ctrl + F2 key	After flash loading completes, flash start playback of track 2
Ctrl + F3 key	After flash loading completes, flash start playback of track 3
Ctrl + F4 key	After flash loading completes, flash start playback of track 4
Ctrl + F5 key	After flash loading completes, flash start playback of track 5
Ctrl + F6 key	After flash loading completes, flash start playback of track 6
Ctrl + F7 key	After flash loading completes, flash start playback of track 7
Ctrl + F8 key	After flash loading completes, flash start playback of track 8
Ctrl + F9 key	After flash loading completes, flash start playback of track 9
Ctrl + F10 key	After flash loading completes, flash start playback of track 10
Ctrl + F11 key	After flash loading completes, flash start playback of track 11
Ctrl + F12 key	After flash loading completes, flash start playback of track 12
Ctrl + C key	Turn the call function on/off
Ctrl + E key	Same as <b>EJECT</b> button (SS-CDR250N only)
Ctrl + I key	Select the input source
Ctrl + J key	Enable jog playback mode
Ctrl + K key	Open the time skip settings screen.
Ctrl + L key	Open the lock function settings screen
Ctrl + M key	Open the <b>MEDIA SELECT</b> screen
Caps Lock key	Lock/unlock use of uppercase English letters
Back Space key	Delete character before cursor

Keyboard key	Function
Enter key	Same as pressing the <b>MULTI JOG</b> dial
Insert key	Insert a character at the cursor position
Home key	Same as <b>HOME [INFO]</b> button
Delete key	Delete character at cursor position
↑ key	Same as turning the <b>MULTI JOG</b> dial
↓ key	
← key	Same as pressing the <b>◀◀ [A-B]</b> button
→ key	Same as pressing the <b>▶▶ [INPUT]</b> button
Shift + ↑ key	Adjust the display contrast
Shift + ↓ key	
Ctrl + ↑ key	Adjust the pitch in ±1% increments with the pitch control function
Ctrl + ↓ key	
Ctrl + ← key	Adjust the key with the key control function
Ctrl + → key	
Number keys	Input numbers
* (asterisk) key	Enable locate time input

### Numeric keypad (only transport operations)

Keyboard key	Function
. (decimal point) key	Same as <b>STOP</b> button
0 key	Same as <b>PLAY</b> and <b>PAUSE</b> buttons
1 key	Search backward
2 key	Search forward
3 key	Same as <b>RECORD</b> button
7 key	Skip to an earlier track
8 key	Skip to a later track
9 key	Same as <b>PAUSE</b> button
/ (slash) key	Enable jog playback mode
- key	Same as turning the <b>MULTI JOG</b> dial left (move to previous mark)
+ key	Same as turning the <b>MULTI JOG</b> dial right (move to next mark)
Enter key	Same as pressing the <b>MULTI JOG</b> dial (add/remove mark)

### NOTE

Press the key for the desired editing function on the keyboard when the **BROWSE** screen is open.

Example: using the **DELETE** function

Press the F4 key to open the **BROWSE** Screen.

Use the ↑/↓/←/→ keys to select the file you want to delete.

Press the Enter key to open the **BROWSE** screen folder or file pop-up menu.

Use the ↑/↓ keys to select the **DELETE** item.

Press the Enter key to open a confirmation message on the display. Press the Enter key again.

When a reconfirmation message appears, press and hold the Enter key again.

# 14 – Other Settings, Information Screens and Keyboard Operations

## Viewing media information

You can view information about the current medium.

1. Select **MEDIA INFORMATION** on the **MEDIA** page to open the **MEDIA INFORMATION** screen. (See “Menu operation procedures” on page 22.)

You can view information about the current medium, and check its total capacity, open space and other use conditions.



2. Press the **MULTI JOG** dial to return to the menu screen.

## Rebuilding media

This function rebuilds the file and folder management data of the current media.

1. On the **MEDIA** page, select the **MEDIA REBUILD** item. (See “Menu operation procedures” on page 22.)
2. Press the **MULTI JOG** dial. A confirmation pop-up message will appear.



3. Press and hold the **MULTI JOG** dial again to start rebuilding. A “Rebuilding All...” pop-up will appear. After it completes, the Menu Screen will reopen.

## Restoring factory default settings

You can restore the various settings stored in the backup memory of the unit to their factory default values. Use the following menu procedures to do so.

1. Select **FACTORY PRESET** on the **SYSTEM 1** page. (See “Menu operation procedures” on page 22.)
2. Press the **MULTI JOG** dial. A confirmation pop-up message will appear.



### NOTE

Press the **MENU [JOG]** button to cancel execution.

3. Press the **MULTI JOG** dial again to restore the factory default settings. A “READING MEDIA...” pop-up will appear. After it completes, the Menu Screen will reopen.


## Saving and loading user settings

This unit can store three sets of user setting data in its built-in memory.

### Saving user settings

This unit can save user setting data in its built-in memory.

1. Select **SAVE USER PRESET** on the **SYSTEM 1** page to open the **SAVE USER PRESET** screen. (See “Menu operation procedures” on page 22.)

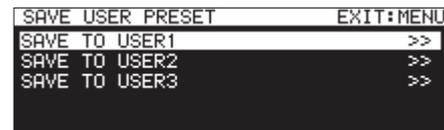

2. Select **SAVE TO USER1 – SAVE TO USER3** as the destination to save the settings, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



3. When the confirmation message is open, press and hold the **MULTI JOG** dial to begin saving the user settings to the built-in memory. After saving completes, the **SAVE USER PRESET** screen re-opens.

### Loading user settings

This unit can load saved user settings from its built-in memory.

1. Select **LOAD USER PRESET** on the **SYSTEM 1** page to open the **LOAD USER PRESET** screen. (See “Menu operation procedures” on page 22.)



2. Select **LOAD USER1 – LOAD USER3** to load the settings in that preset, and press the **MULTI JOG** dial. A confirmation pop-up message will appear.



3. When the confirmation message is open, press and hold the **MULTI JOG** dial to begin loading the user settings from the built-in memory. After saving completes, the **LOAD USER PRESET** screen re-opens.

# 14 – Other Settings, Information Screens and Keyboard Operations


## Exporting/importing system backup data (USB flash drives and SD cards only)

You can export system backup data from the unit's built-in memory to an SD card or USB flash drive loaded in the unit. You can also import this data.

### NOTE

Exporting and importing are not possible when the current medium is CD.

1. Select **SYSTEM BACKUP** on the **SYSTEM 1** page to open the **SYSTEM BACKUP** screen. (See "Menu operation procedures" on page 22.)

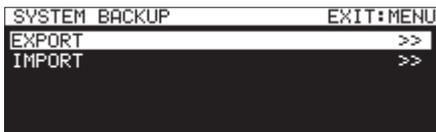

2. Select whether to export or import system backup data to or from the SD card or USB flash drive.  
**EXPORT:** Export system backup data to the SD card or USB flash drive.  
**IMPORT:** Import system backup data from the SD card or USB flash drive.
3. Press the **MULTI JOG** dial.  
 A confirmation pop-up message will appear.



Pop-up message when set to **EXPORT**



Pop-up message when set to **IMPORT**

4. When the confirmation message is open, press and hold the **MULTI JOG** dial to begin exporting to or importing from the SD card or USB flash drive.  
 When exporting/importing ends, the **SYSTEM BACKUP** screen reopens.

- The following setting items are saved and loaded with system backup data.

Screen name	Page name	Setting item	
Home Screen		Time counter display mode	
		Solo selection channel	
LOCK SETUP screen		All settings	
Menu Screen	PLAY 1 page	All settings	
	PLAY 2 page	All settings	
	PLAY 3 page	All settings	
	REC 1 page	All settings	
	REC 2 page	All settings	
	REC 3 page	All settings	
	REC 4 page	All settings	
	REC 5 page	All settings	
	TIMER EVENT page	TIMER EVENT item	
	NETWORK 1 page	All settings	
	FTP CLIENT page		TARGET FTP SERVER screen SERVER ADDRESS and USER ID items
			FTPS MODE item
			TARGET FOLDER NAME item AUTO UPLOAD item
	SMTP page	All settings	
	UTILITY page	All settings	
PREFERENCES page	All settings		
REMOTE page	All settings		

# 14 – Other Settings, Information Screens and Keyboard Operations

## Checking the firmware version

You can check the version of the system firmware used by the unit.

1. Select **VERSION** on the **SYSTEM 2** page to open the **VERSION** screen. (See “Menu operation procedures” on page 22.)

```
VERSION
SYSTEM      1.00 B0010
FPGA        000F
DRIVE       T.06 (W250)
DRIVE WORKED 0 H
```

On the **VERSION** screen, information is shown about the system firmware version, build number, FPGA firmware version, CD drive firmware version and operating time.

2. Press the **MENU [JOG]** button to return to the Menu Screen.

## Firmware update procedures (USB flash drives and SD cards only)

### NOTE

Updating is not possible when the current medium is CD.

1. Download the latest firmware from the TEAC Global Site (<https://teac-global.com/>). Decompress the downloaded file if it is in ZIP format or another compressed file type.
2. Copy the downloaded firmware to the root level of the medium.
3. Load the medium prepared in step 2 in an SD card slot or the USB port on the front of the unit.
4. Set that medium as the current medium on the **MEDIA SELECT** screen.
5. Select **UPDATE** on the **SYSTEM 2** page to open the **FIRMWARE UPDATE** screen. (See “Menu operation procedures” on page 22.)

```
FIRMWARE UPDATE          EXIT:MENU
SYSTEM                   >>>
FPGA                     >>>
RC-SS150                 >>>
DRIVE                    >>>
```

### SYSTEM item

Update the unit's firmware.

### FPGA item

Update the unit's FPGA.

### RC-SS150 item

Update the firmware of a **TASCAM RC-SS150** remote control.

### DRIVE item (SS-CDR250N only)

Update the CD drive firmware.

6. Select the item to update, and press the **MULTI JOG** dial. After the medium and firmware update file have been verified, the following screen will appear.

```
FIRMWARE UPDATE
SS-Main.101
```

### NOTE

- The screen above shows a list of firmware update files in the root folder of the current medium. The firmware copied in step 2 above should also be shown. “No Update File” is shown if no update file is in the directory.
- A maximum of five lines of firmware can be shown at the same time. If there are more files than can be shown on the display at once, use the **MULTI JOG** dial to scroll the list.
- The screen shown above is an example. The actual appearance will differ.

7. Select the firmware update to use. The screen shown below will appear.

```
SYSTEM UPDATE
SS-Main.101
Ver 1.00  -> Ver 1.01
Build0033  Build0034
Are you sure?
```

The number of the current version is shown on the left and the update version is shown on the right.

### NOTE

The screen shown above is an example. The actual appearance will differ.

8. Press the **MULTI JOG** dial to start updating.

### CAUTION

- Be careful not to let the power be interrupted during the update.
  - If the power is interrupted during the update, the unit might become unstartable.
9. When the update completes, the following message will appear.

```
SYSTEM UPDATE
Update Complete!!
----- Shutdown -----
Remain 5sec
```

10. When the unit automatically turns off after the message appears, turn it on again.
11. Confirm that the latest firmware is being used. This completes the update procedure. (See “Checking the firmware version” on page 101.)
12. Delete the firmware update file from the medium.

# 15– Using the Remote Control Connectors

## Using the RS-232C connector

Using the **RS-232C** connector (9-pin D-sub RS-232C standard) on the back of the unit, this unit can be operated by a computer or other external device by serial control. In addition, flash starting by remote control is possible if a TASCAM RC-SS150 (sold separately) is connected.

Select **RS-232C** on the **REMOTE** page to open the **RS-232C** screen. (See “Menu operation procedures” on page 22.)

RS-232C		<< >>:MOVE Cursor
BAUD RATE	57600bps	
PARITY BIT	NONE	
STOP BIT	1	
DATA LENGTH	8bit	

### Setting the transmission speed (baud rate)

Select **BAUD RATE**, and set the transmission speed (baud rate).

**Options:** 4800bps, 9600bps, 19200bps, 38400bps, 57600bps (default)

### Setting the parity bit

Select **PARITY BIT**, and set whether or not there is a parity bit.

**Options:** NONE (none, default value), EVEN (even), ODD (odd)

### Setting the stop bit

Select **STOP BIT**, and set the stop bit.

**Options:** 1 (default), 2

### Set the data length

Select **DATA LENGTH**, and set the data length.


**Options:** 7bit, 8bit (default)

### NOTE

- The 9 pin of this unit's RS-232C connector is used to supply 12V power to the TASCAM RC-SS150. Do not use it to supply power to any other device. The 9 pin of ordinary computer RS-232C connectors is unused, so commercially-available RS-232C cables can be used for connection.
- For information about this unit's RS-232C command protocol, please contact the TASCAM customer support service.

## Using a footswitch (TASCAM RC-3F)

You can use a TASCAM RC-3F footswitch (sold separately) connected to the **REMOTE** jack on the front of this unit to control it.

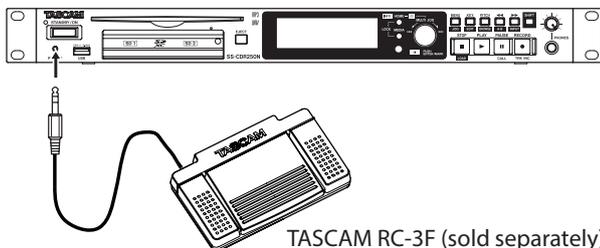

## Setting up the footswitch

1. Select **RC-3F MODE** on the **REMOTE** page to open the **RC-3F MODE** screen. (See “Menu operation procedures” on page 22.)



2. Select one of the three pedal assignment modes.

Option	Meaning
MODE1 (default)	This mode is optimal for recording minutes of meetings, for example.
MODE2	This mode provides basic transport remote control.
MODE3	Use this mode for the pitch control function.

3. Confirm the setting and return to the Menu Screen.

## Using the footswitch

Press the pedals of the footswitch to use the operations assigned to them by the **RC-3F MODE** item.

### Footswitch pedal assignments

MODE	Footswitch		
	L (press)	C (press)	R (press)
	L (press and hold)	C (release)	R (press and hold)
1	⏪	PLAY	⏩
	⏮	PAUSE/STOP	⏭
2	⏪	PLAY/PAUSE	⏩
	⏮	---	⏭
3	PITCH (–) 1% increments	PLAY/PAUSE	PITCH (+) 1% increments
	---	---	---

## Setting the Record Tally

The high/low status of **PARALLEL** connector pin 11 (Record Tally) when recording is paused can be set.

1. Select the **RECORD TALLY** item on the **REMOTE** page and open the **RECORD TALLY** screen. (See “Menu operation procedures” on page 22.)



2. Set the output mode of the **PARALLEL** connector pin 11 (Record Tally) when recording is paused.

Option	Meaning
REC ONLY (default)	Record Tally is not output when recording is paused.
REC PAUSE/REC	Record Tally is output when recording is paused. (Low state)

3. Confirm the setting and return to the Menu Screen.

# 16 – Messages

The following is a list of messages that appear in pop-up windows.

Refer to this list if one of these pop-up messages appears on the SS-R250N/SS-CDR250N and you want to check the meaning or determine a proper response.

Message	Meaning	Note
Backup REC is not available. (MM is not available)	Backup recording is disabled because the medium cannot be used.	MM = SD1, SD2 or USB
Backup REC is not available. MM formatting not optimal for Recording.	Backup recording is disabled because the medium has not been formatted by this unit and cannot be guaranteed to properly record. Format it with this unit before use.	MM = SD1, SD2 or USB
Cannot add timer event. Timer event limit reached.	The limit has been reached so no more timer events can be added.	
Cannot change while playing.	This setting cannot be changed during playback.	
Cannot change while recording.	This setting cannot be changed when recording.	
Cannot Copy. "ffffffff" already exist in current folder	You tried to copy a file to the current folder. The current folder, however, already contained a file with the same name as the file being copied.	ffffffff = file name
Cannot Copy File. "ffffffff" already exist in Destination.	The selected file already exists in the copy destination, so it cannot be copied.	ffffffff = file name
Cannot Copy Folder. "ffffffff" already exist in Destination.	The selected folder already exists in the copy destination, so it cannot be copied.	ffffffff = folder name
Cannot Copy for Insert. "ffffffff" already exist in current Folder.	The selected file already exists in the current folder, so it cannot be inserted.	ffffffff = file name
Cannot Copy. Source folder and Destination folder is same.	The copy source folder and destination folder are the same, so copying is not possible.	
Cannot Copy. Destination folder is sub-folder of source folder.	The copy destination folder is a subfolder of the copy source folder, so copying is not possible.	
Cannot create new file/folder. Media Full.	There is no open space on the medium, so a new file or folder cannot be created.	
Cannot create new mark point. Mark point already exists at the same timestamp.	You are trying to create a mark where one already exists. A time position cannot have more than one mark.	
Cannot edit this mark point. Mark point already exists at the same timestamp.	The mark cannot be edited because another mark already exists at that time.	
Cannot Edit read-only file	The file is read only and cannot be edited.	
Cannot execute combine. Combine file size is over XXX.	The file size after combination would exceed 2 GB, so combining is not possible.	
Cannot execute combine. Media Full.	The medium does not have enough open space so combining is not possible.	
Cannot execute. Media Full.	The medium does not have enough open space so execution is not possible.	
Cannot increment Track Interval is too short.	Either you pressed the <b>RECORD [TRK INC]</b> button within the first 4 seconds of recording, or writing to the medium was too slow, so starting to record a new track is not possible.	
Cannot increment Track System limit reached. Please create new Folder.	The number of files in the folder or total number of files and directories, for example, is too great, so starting to record a new track is not possible.	
Cannot make more than 1000 folders.	The maximum number of folders has already been reached, so a new folder cannot be created.	
Cannot RECORD (Internal state error)	Recording cannot start for some reason.	If this occurs frequently, prepare information about it including the operation steps that cause it, and contact the TASCAM customer support service.
Cannot record. Media full.	The medium does not have enough open space, so recording cannot be started.	

## 16 – Messages

Message	Meaning	Note
Cannot record. System limit.	The number of files in the folder or total number of files and directories, for example, is too great, so starting to record is not possible.	
Cannot record. Track limit.	The maximum number of tracks have already been recorded, so recording cannot be started. Change the folder.	
Cannot RECORD Entry 100 is already assigned. Please create new Playlist or clear Entry 100.	The number of playlist entries would exceed 100. Create a new playlist or clear the 100th entry in the playlist.	
Cannot set Mark point limit reached.	Only 99 marks can be added.	
Cannot set Mark point in read-only file.	The file is read only, so marks cannot be added.	
COPY FAILED	The file or folder could not be copied.	
Delete failed	The file or folder could not be deleted.	
DEVICE ERROR	Mounting the medium failed.	
DIN ERROR Digital input is illegal.	An error occurred with the digital input selected for the digital signal.	
(error) INFO WRITING	An error occurred while writing data.	
File Copy Failed.	Copying a file failed.	
Folder Copy Failed.	Copying a folder failed.	
Format failed.	The media formatting failed.	
Formatting not optimal.	The format of the medium is not supported, so recording cannot be started.	Use this unit's format function to format the media.(See "Preparing SD cards and USB flash drives for use" on page 29.)
Make Playlist failed	Creating a playlist failed.	
No Call Point	The call point has not been set.	
No Mark Point	No mark points have been added.	
Not recommended type for Re- cording.	The medium is not suitable for recording, so recording cannot be started.	
Operation failed. folder limit	The maximum number of folders has already been reached, so the operation cannot be executed.	
Operation failed. long name	The path name exceeds the character number limit, so the operation cannot be executed.	This occurs if the full path name is 255 characters or longer.
Operation failed. playlist limit	The maximum number of playlists has already been reached, so the operation cannot be executed.	
Operation failed. XXXXXXXXXX	The operation could not be executed for some reason.	If this occurs frequently, prepare information about it including the operation steps that cause it, and contact the TASCAM customer support service.
PLAY ERROR Buffer underrun	Data reading processes could not keep up during playback.	
PLAY ERROR	A playback error occurred.	
RECORD Error	An error occurred during recording.	
RECORD Error Buffer overflow.	The recording buffer became full during recording. Writing to the medium could not keep up.	Since the writing performance of the medium has declined, use the ERASE FORMAT function or use a different medium.(See "Preparing SD cards and USB flash drives for use" on page 29.)
RECORD stopped. Media Full.	The medium did not have enough capacity, so recording stopped.	
RECORD stopped. System limit.	Recording stopped because the total number of files, folders and other items inside the folder would have exceeded 999.	
RECORD stopped. SUB media is not available.	Recording to the relay recording medium (SUB MEDIA) could not be started.	
Save Failed.	Saving the file failed.	

Message	Meaning	Note
SD Card Locked	The SD card is locked.	
SD Card Locked Cannot Record/Edit	Since the SD card is locked, recording and editing are not possible.	
This name already exists.	A folder or file with the same name already exists.	
There is no entry.	Playback is not possible because the playlist has no entries. Select a playlist that has entries or assign entries to this one.	
There is no track	Playback is not possible because there are no files.	
Timer Event nn (Download) Failed	The download timer event numbered nn failed.	nn = timer event number
Unsupported File too many tracks	You tried to play a file with more tracks than are supported. Or, you tried to add too many to a playlist.	
Unsupported Fs.	You tried to play a file with a sampling frequency that is not supported. Or, you tried to add one to a playlist.	
unsupported type	The media is not a supported type (not DMA compatible), so it cannot be used.	

# 17 – Troubleshooting

If you are having trouble with the operation of this unit, please try the following before seeking repair. If these measures do not solve the problem, please contact the store where you purchased this unit or TASCAM customer support service.

## The unit will not turn on.

- Confirm that the power plug and other connectors are inserted completely.

## The medium is not recognized.

- Confirm that the SD card or USB flash drive is loaded completely.
- Stop playback or recording once.

## The unit does not function.

- Confirm that the lock function is not on.

## Playback is not possible.

- If you are trying to play a WAV file, confirm that it uses a sampling frequency (44.1/48/96kHz) and a bit depth (16/24-bit) that are supported by this unit.  
If you are trying to play an MP3 file, confirm that the bit rate is supported by this unit.

## No sound is output.

- Check connections with the monitoring system again. Check the volume of the amplifier as well.

## Recording is not possible.

- If you are using an external device, check the connection again.
- Adjust the recording levels.
- If there is not enough room on the medium, delete unnecessary data to increase the amount of open space or change the medium.
- If the total number of files, folders and other items inside the recording folder is great, change the recording folder.

## Changed settings are forgotten.

- This unit backs up the settings every time they are changed. Backup can fail depending on when the power is turned off. Do not turn the power off immediately after changing a setting.

## There is noise.

- Confirm that the connection cables do not have contact issues.

## “Rename failed” appears when editing a name.

- Due to system limitations, 255 is the maximum number of characters (half-width) that can be used in file and folder names as well as in other text fields. Moreover, the full path on the **BROWSE** screen is limited to 255 characters. This limit includes all the folder, subfolders and file names along with the symbols that divide them.

## The RC-10 remote control does not function.

- Confirm that a battery is installed and has not died.

---

## General

---

### Recording media

SD cards (512MB–2GB)  
SDHC cards (4GB–32GB)  
SDXC cards (64GB–128GB)  
USB flash drives (512MB–128GB)  
CD-R, CD-R-DA, CD-RW, CD-RW-DA  
(12cm (650MB/700MB) only, High Speed supported for CD-RW, SS-CDR250N only)

### Recording and playback file formats

MP3: 44.1/48kHz, 64/128/192/256/320kbps  
WAV: 44.1/48/96 kHz, 16/24-bit  
CD-DA: 44.1kHz, 16-bit (SS-CDR250N only)

### Number of channels

2 channels (stereo)  
1 channel (mono)

---

## Input and output

---

### Analog audio input and output ratings

#### Analog input (unbalanced) jacks

Connectors: RCA pin jacks  
Rated input level: –10 dBV (0.316 Vrms)  
Maximum input level: +6 dBV (2.0 Vrms)  
Input impedance: 10 k $\Omega$  or higher

#### Analog input (balanced) jacks

Connectors: XLR-3-31 (1: GND, 2: HOT, 3: COLD)  
**For line**  
Nominal input level  
+4dBu (1.23Vrms, when Ref.Level set to other than –9dBFS)  
+6dBu (1.55Vrms, when Ref. Level set to –9dBFS)  
Maximum input level (switchable):  
+15dBu (4.36Vrms, Ref. Level: –9dBFS)  
+18dBu (6.16Vrms, Ref. Level: –14dBFS)  
+20dBu (7.75Vrms, Ref. Level: –16dBFS)  
+22dBu (9.76Vrms, Ref. Level: –18dBFS)  
+24dBu (12.28Vrms, Ref. Level: –20dBFS)  
Input impedance: 10 k $\Omega$  or higher  
**For mic (phantom power supported)**  
Maximum input level: +4 dBu (1.23 Vrms)  
Minimum input level: –70 dBu (245  $\mu$ Vrms) or higher  
Input impedance: 2.2 k $\Omega$  or higher

#### Analog output (unbalanced) jacks

Connectors: RCA pin jacks  
Rated output level: –10 dBV (0.316 Vrms)  
Maximum output level: +6 dBV (2.0 Vrms)  
Output impedance: 200  $\Omega$

#### Analog output (balanced) jacks

Connectors: XLR-3-32 (1: GND, 2: HOT, 3: COLD)  
Nominal output level: +4dBu (1.23Vrms, when Ref.Level set to other than –9dBFS)  
+6dBu (1.55Vrms, when Ref.Level set to –9dBFS)  
Maximum output level (switchable):  
+15dBu (4.36Vrms, Ref.Level: –9dBFS)  
+18dBu (6.16Vrms, Ref.Level: –14dBFS)  
+20dBu (7.75Vrms, Ref.Level: –16dBFS)  
+22dBu (9.76Vrms, Ref.Level: –18dBFS)  
+24dBu (12.28Vrms, Ref.Level: –20dBFS)  
Output impedance: 200  $\Omega$

#### Phones jack

Connector: 6.3mm (1/4") standard stereo jack  
Maximum output level: 45 mW + 45 mW or higher (THD+N 0.1% or less, into 32  $\Omega$  load)

---

### Digital audio input/output ratings

#### Digital input (AES/EBU) jack

Connector: XLR-3-31  
Input impedance: 110  $\Omega$   
Format: AES3-2003/IEC60958-4 (AES/EBU)  
Supported sampling frequencies: 44.1, 48, 96 kHz  
When SRC ON, 32kHz–192kHz can be received

#### Digital input (S/PDIF) jack

Connector: RCA pin jack  
Format: IEC60958-3  
Supported sampling frequencies: 44.1, 48, 96 kHz  
When SRC ON, 32kHz–192kHz can be received

#### Digital output (AES/EBU) jack

Connector: XLR-3-32  
Output impedance: 110  $\Omega$   
Format: AES3-2003/IEC60958-4 (AES/EBU)  
Supported sampling frequencies: 44.1, 48, 96 kHz

#### Digital output (S/PDIF) jack

Connector: RCA pin jack  
Format: IEC60958-3

# 18 – Specifications

---

## Control input/output

### Remote jack

Connector: 2.5mm (3/32") TRS jack (for TASCAM RC-3F or RC-20 (sold separately))

### USB port

Connector: 4-pin USB A-type  
Protocol: USB 2.0 HIGH SPEED (480 Mbps)

### RS-232C connector

D-sub 9-pin (female, inch-standard)

### Parallel connector

D-sub 25-pin (female, inch-standard)  
Maximum input voltage: +5.5 V  
High level minimum input voltage: +2.31 V  
Low level maximum input voltage: +0.99 V  
Output format: Open collector (10 $\Omega$  output impedance, 20V withstand voltage, 35mA maximum)  
Low level maximum output voltage: 0.5 V  
+5V power supply maximum supplied current: 100mA

### Ethernet connector

Connector: RJ45  
Compatible standard: 100BASE-TX

---

## Audio performance

### Frequency response

20Hz – 20kHz: +/-0.5dB (LINE IN or MIC IN to LINE OUT, Fs = 44.1/48kHz, JEITA)

20 Hz – 40 kHz: +0.5/-3 dB (LINE IN or MIC IN to LINE OUT, Fs = 96kHz, JEITA)

### Distortion

0.002% or less: (LINE IN to LINE OUT, Ref. Level: -16dBFS, Fs = 44.1/48/96kHz, JEITA)

### S/N ratio

106 dB or more (LINE IN to LINE OUT, Fs = 44.1/48/96kHz, JEITA)

### Dynamic range

106 dB or more (LINE IN to LINE OUT, Fs = 44.1/48/96kHz, JEITA)

### Crosstalk between channels

100 dB or more (LINE IN to LINE OUT, Fs = 44.1/48/96kHz, JEITA)

### Equivalent input noise (EIN)

-125 dBu or less (150  $\Omega$ , 20kHz LPF, A-weighted)

Note: JEITA indicates compliance with JEITA CP-2150

---

## Other

### Power

AC100-240V, 50-60 Hz

### Power consumption

When using RC-SS150, IF-DA2  
22W (SS-CDR250N)  
20W (SS-R250N)

### Dimensions

482.6 × 45 × 300.5 mm (W x H x D)


### Weight

3.2 kg (SS-CDR250N)  
2.9 kg (SS-R250N)

### Operating temperature range

5 – 35°C (41 - 95°C)


## Dimensional drawings

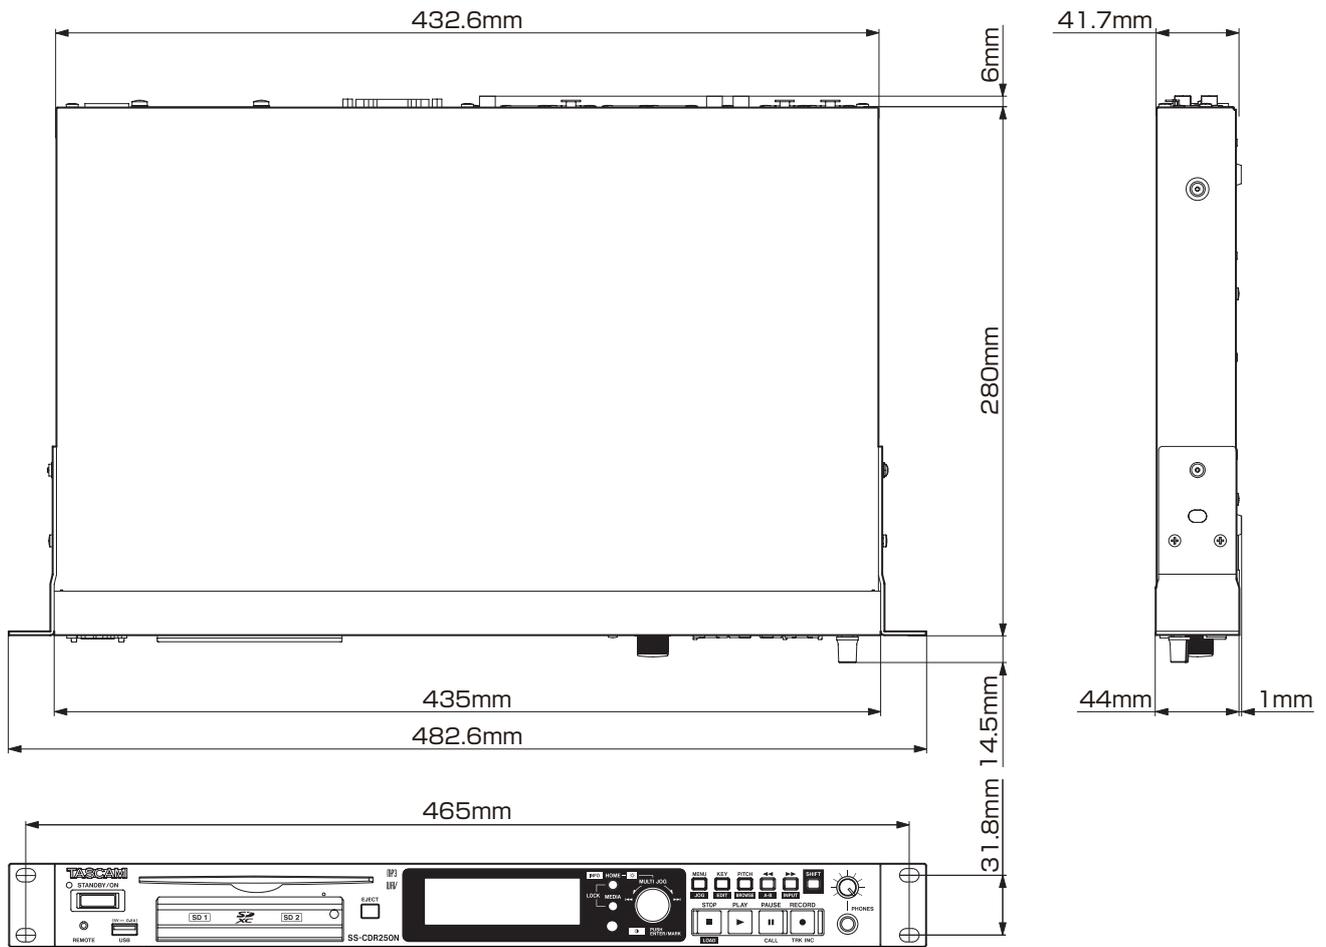

- Illustrations in this manual might differ in part from the actual product.
- Specifications and external appearance might be changed without notification to improve the product.

# 18 - Specifications

## Block diagrams

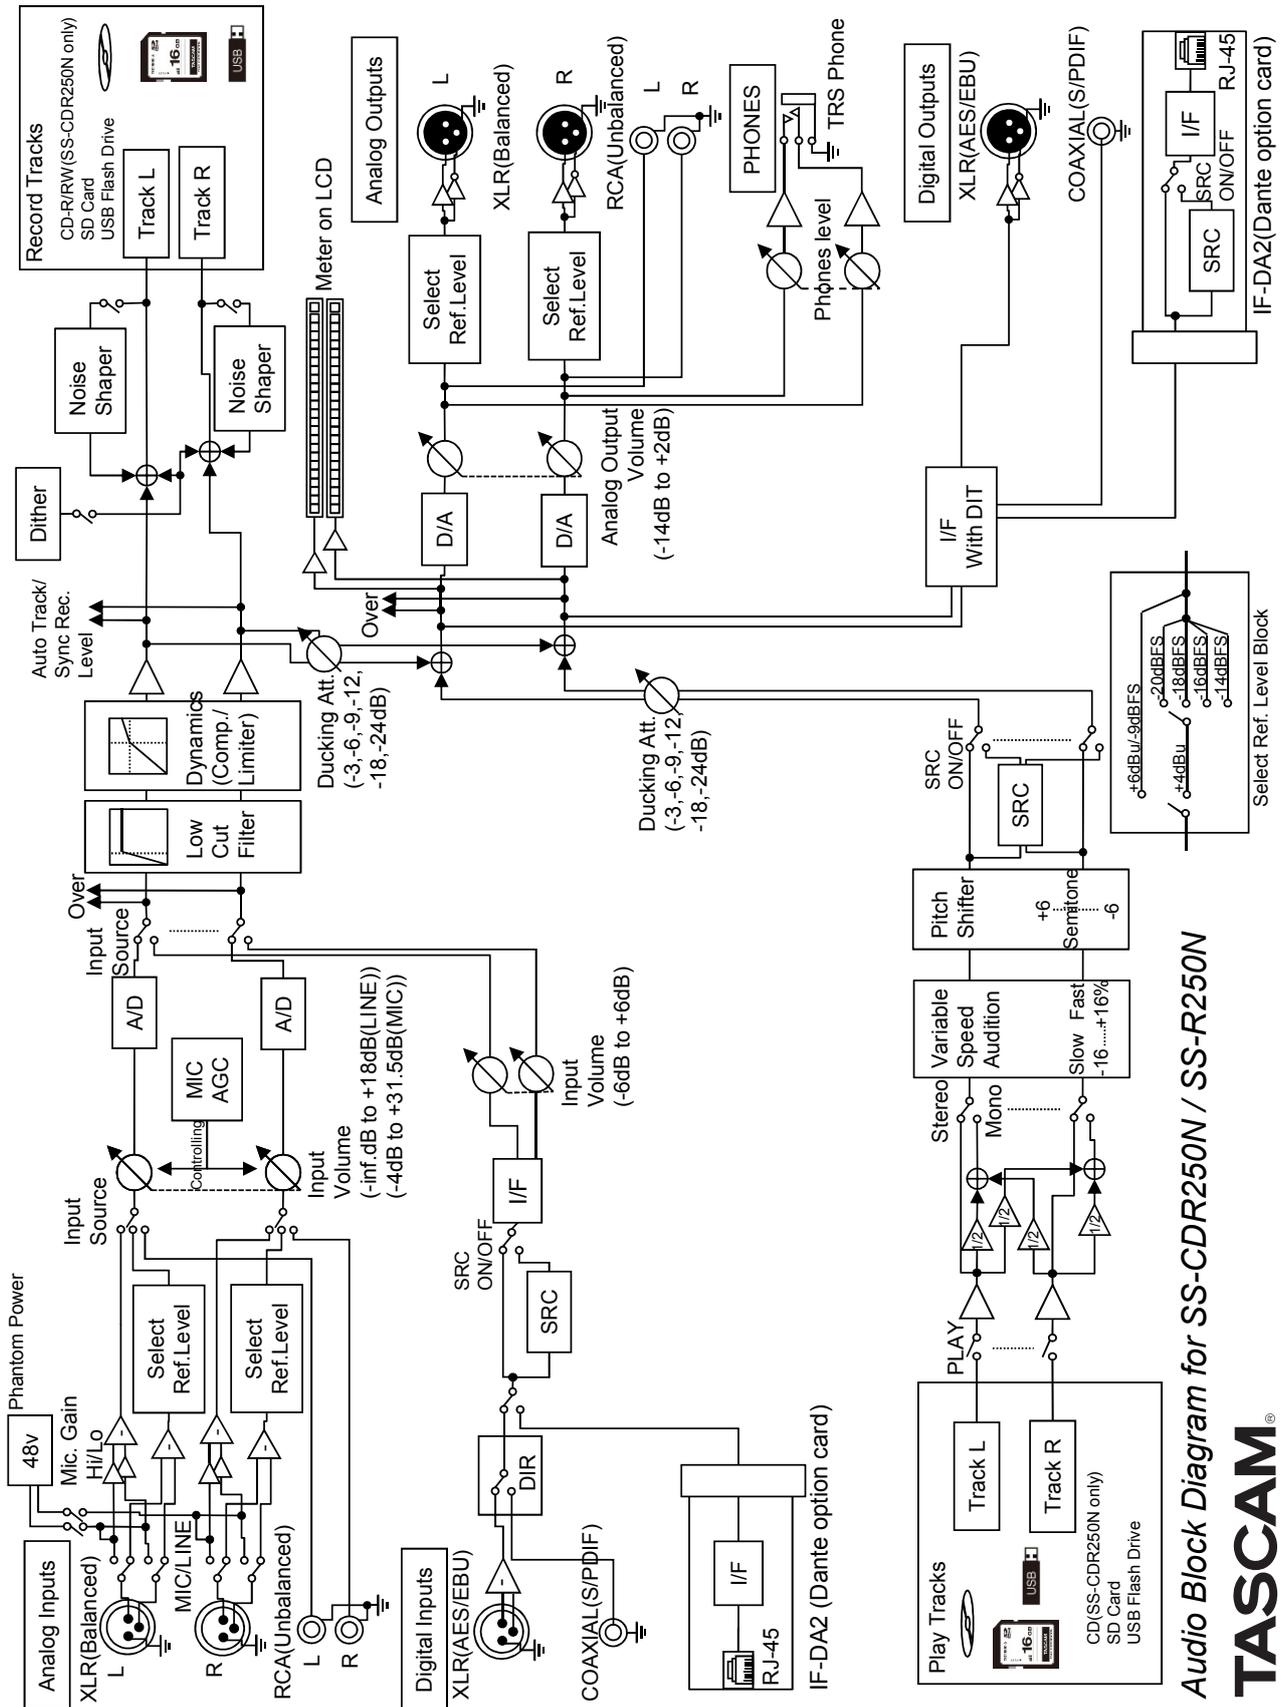

Audio Block Diagram for SS-CDR250N / SS-R250N

**TASCAM**



## WARRANTY

### < In the United States >

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty is only valid within the country the unit was originally purchased.

#### WHAT IS COVERED AND WHAT IS NOT COVERED

Except as specified below, this warranty covers all defects in materials and workmanship in this product. The following are not covered by the warranty:

1. Damage to or deterioration of the external cabinet.
2. Damage resulting from accident, misuse, abuse or neglect.
3. Damage resulting from failure to perform basic daily maintenance and/or calibration or otherwise resulting from failure to follow instructions contained in your owner's manual.
4. Damage occurring during shipment of the product. (Claims must be presented to the carrier)
5. Damage resulting from repair or attempted repair by anyone other than TEAC or an authorized TASCAM service station.
6. Damage resulting from causes other than product defects, including lack of technical skill, competence, or experience of the user.
7. Damage to any unit which has been altered or on which the serial number has been defaced, modified or is missing.

#### WHO IS COVERED UNDER THE WARRANTY

This warranty may be enforced only by the original purchaser. This warranty is not valid if the product was purchased through an unauthorized dealer.

#### LENGTH OF WARRANTY

All parts except heads and disk drives are warranted for one (1) year from the date of original purchase. Heads and disk drives are warranted for ninety (90) days from date of original purchase. Labor is warranted for ninety (90) days from date of original purchase.

#### WHAT WE WILL PAY FOR

We will pay all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section

of this warranty.

#### HOW YOU CAN GET WARRANTY SERVICE

Your unit must be serviced by an authorized TASCAM service station in the United States. (This warranty is not enforceable outside the U.S.) If you are unable to locate an authorized TASCAM service station in your area, please contact us. We either will refer you to an authorized service station or instruct you to return the unit to the factory. Whenever warranty service is required, you must present a copy of the original dated sales receipt from an Authorized TASCAM Dealer.

You must pay any shipping charges if it is necessary to ship the product to service. However, if the necessary repairs are covered by the warranty, we will pay return surface shipping charges to any destination within the United States.

#### LIMITATION OF IMPLIED WARRANTIES

Any implied warranties, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, are limited in duration to the length of this warranty.

#### EXCLUSION OF DAMAGES

TEAC's liability for any defective product is limited to repair or replacement of the product, at TEAC's option. TEAC shall not be liable for:

1. Damages based upon inconvenience, loss of use of the product, loss of time interrupted operation or commercial loss; or
2. Any other damages, whether incidental, consequential or otherwise.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

#### To locate an Authorized Service Center in Your Area

CALL 1-323-726-0303

### < Europe >

This product is subject to the legal warranty regulations of the country of purchase. In case of a defect or a problem, please contact the dealer where you bought the product.

Ce produit est sujet aux réglementations concernant la garantie légale dans le pays d'achat. En cas de défaut ou de problème, veuillez contacter le revendeur chez qui vous avez acheté le produit.

Dieses Gerät unterliegt den gesetzlichen Gewährleistungsbestimmungen des Landes, in dem es erworben wurde. Bitte wenden Sie sich im Gewährleistungsfall an den Händler, bei dem sie das Gerät erworben haben.

Questo apparecchio è conforme alle norme sulla garanzia vigenti nel rispettivo Paese in cui esso è stato acquistato. Si prega di rivolgersi al proprio commerciante, presso il quale è stato acquistato l'apparecchio, nel caso in cui si voglia richiedere una prestazione in garanzia.

Las condiciones de garantía de este aparato están sujetas a las disposiciones legales sobre garantía del país en el que ha sido adquirido. En caso de garantía, debe dirigirse al establecimiento donde adquirió el aparato.

### < In other countries/areas >

This warranty gives you specific legal rights, and you may also have other rights that vary by country, state or province.

If you have a warranty claim or request, please contact the dealer where you bought the product.

该保证书赋予了顾客特定的合法权利，并且因国家、州或省等地域的不同，顾客可能拥有其他权利。如需申请或要求保修，请与购买本产品的销售店进行联系。

If you require repair services for your TASCAM equipment, please contact the dealer where the product was purchased from or the TASCAM Distributor in your country. A list of TASCAM Distributors can be found on our website at: <https://teac-global.com/>

# TASCAM

## TEAC CORPORATION

Phone: +81-42-356-9143  
1-47 Ochiai, Tama-shi, Tokyo 206-8530 Japan

<https://tascam.jp/jp/>

## TEAC AMERICA, INC.

Phone: +1-323-726-0303  
10410 Pioneer Blvd. Suite #1 Santa Fe Springs, California 90670, U.S.A.

<https://tascam.com/us/>

## TEAC UK Ltd.

Phone: +44-1923-797205  
Luminous House, 300 South Row, Milton Keynes, Buckinghamshire, MK9 2FR, UK

<https://www.tascam.eu/en/>

## TEAC EUROPE GmbH

Phone: +49-611-71580  
Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany

<https://www.tascam.eu/de/>

## TEAC SALES & TRADING(SHENZHEN) CO., LTD

Phone: +86-755-88311561~2  
Room 817, Xinian Center A, Tairan Nine Road West, Shennan Road, Futian District, Shenzhen, Guangdong Province 518040, China

<https://tascam.cn/cn/>

0221.MA-2502C

Printed in China

## WARRANTY

Model / Modèle / Modell  
Modello / Modelo / 型号

**SS-CDR250N / SS-R250N**

Owner's name / Nom du propriétaire / Name des Eigentümers  
Nome del proprietario / Nombre del propietario / 顾客姓名

Serial No. / No de série / Seriennummer  
Numero di serie / Número de serie / 序列号

Address / Adresse / Adresse  
Indirizzo / Dirección / 顾客地址

Date of purchase / Date de l'achat / Datum des Kaufs  
Data dell'acquisto / Fecha de compra / 购买日期

Dealer's name / Nom du revendeur / Name des Händlers  
Nombre du commerce / Nombre del establecimiento / 销售店名

**TASCAM**

<https://teac-global.com/>

Dealer's address / Adresse du revendeur / Adresse des Händlers  
Indirizzo del commerciante / Dirección del establecimiento / 销售店

**Sample**

