




**EV** Innovative **D**esign

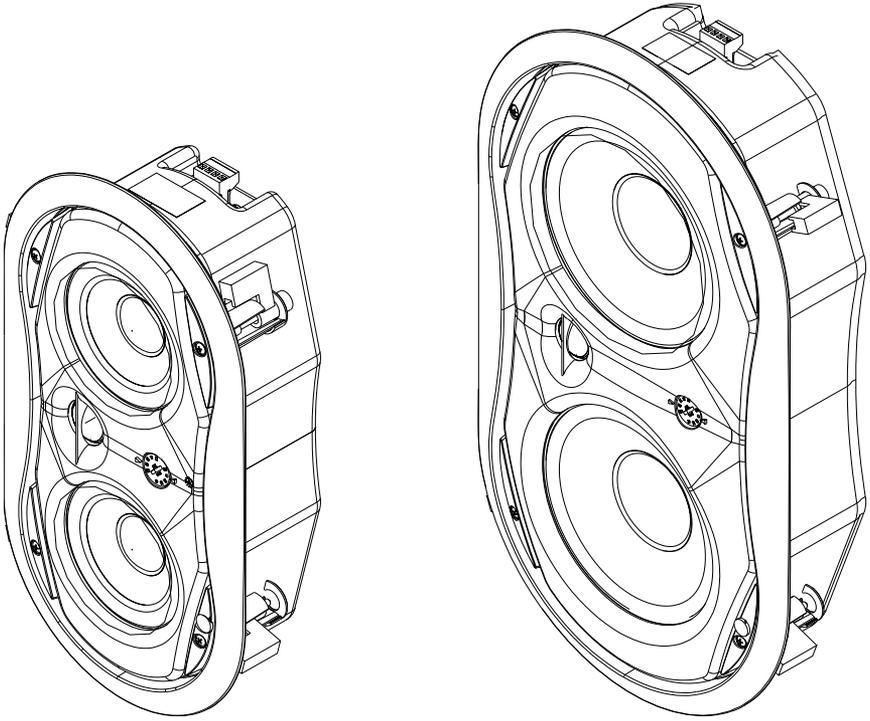

**EVID FM-Series  
Loudspeaker User Manual**



# Table of Contents

|  |     |
|--|-----|
| Table of Contents.....                                 | TOC |
| Welcome.....   | 1   |
| Important Features .....                               | 1   |
| Model Summary .....                                    | 2   |
| Packing List.....                                      | 4   |
| Product Feature Identification.....                    | 5   |
| Installation and Wiring.....                           | 6   |
| Step 1 — Cut the Hole.....                             | 6   |
| Step 2 — Attach Wiring to the Terminal Connector ..... | 6   |
| Step 3 — Mount the Speaker into the Wall .....         | 8   |
| Step 4 — Adjust Tap Selector.....                      | 8   |
| Step 5 — Insert the Grille .....                       | 9   |
| Appendix A — Painting the Speaker.....                 | 10  |
| Appendix B — Troubleshooting Table .....               | 11  |
| Appendix C — Warranty.....                             | 12  |
| Appendix D — Product Specifications.....               | 13  |

# Welcome/Important Features

## Welcome

Thank you for purchasing EVID™ FM Series loudspeakers. Read through this manual to familiarize yourself with features, applications, and precautions before you use these products. EVID FM Series loudspeakers use innovative design and materials to provide premium level performance in a flush-mount format. Two models comprise the EVID FM Series: the FM4.2 with a 4-inch LF driver, a 4-inch LF passive radiator, and a 1-inch, titanium-coated tweeter; the FM6.2 with a 6.5-inch LF driver, 6.5-inch LF passive radiator, and a 1-inch titanium-coated tweeter.

## Important Features

- Matches acoustically to the EVID surface mount speaker line
- Model for model, has superior performance to competing brands
- Comes with both 70V/100V or 8-ohm operation standard on every model
- Includes all installation accessories commonly needed for most jobs

# Model Summary

## EVID™ FM4.2

The Electro-Voice® EVID FM4.2 flush-mounted loudspeaker system is a complete two-way in-wall loudspeaker package. The package consists of a bezel assembly, grille, rear enclosure, 4" two-way loudspeaker coupled with a 4" passive radiator and an internal line-matching transformer.

The loudspeaker features 4" low-frequency cone and high-temperature voice-coil assembly along with a 4" long excursion passive radiator and titanium coated dome tweeter. The EVID FM4.2 loudspeaker utilizes a crossover network, centered at 3,600 Hz, that provides 16-dB-per-octave tweeter protection outside of its operating range. In addition the EVID FM4.2 features a comprehensive protection circuit to shield the woofer and tweeter drivers from excessive power levels.

The EVID FM4.2 utilizes a transformer that offers a selection of 1.75, 3.75, 7.5, 15 or 30 watts delivered to the loudspeaker system using either 70-V or 100-V lines. The wattage is selected via a convenient switch on the front baffle. The unit can also be operated as an 8-ohm speaker via the same front panel selector switch.

The perforated grille is finished in semi-gloss white powder-coated enamel. The baffle and bezel is constructed from heat resistant ABS. The rear enclosure is constructed from zinc-plated, steel. The rear enclosure provides an optimum internal volume, ensuring extended low-frequency performance. It is constructed from heavy-gauge, rugged steel. The steel rear enclosure was optimized using FEA to virtually eliminate panel resonance. The entire enclosure is less than 4" deep providing an easy installation into nearly any tight wall or ceiling space. A rear cover, with provisions for a junction box fitting, provides access to a 4-pin terminal block that allows direct connection to the speaker and provides pass through to additional speakers. FM4.2 loudspeakers provide wide dispersion, high-efficiency, high-maximum output, ease of installation, and wide-range reproduction of music or voice.

# Model Summary

## EVID™ FM6.2


The Electro-Voice® EVID FM6.2 loudspeaker system is a complete two-way in-wall loudspeaker package. The package consists of a bezel assembly, grille, rear enclosure, 6.5" two-way loudspeaker coupled with a 6.5" passive radiator and an internal line-matching transformer. The loudspeaker features 6.5" low-frequency cone and high-temperature voice-coil assembly along with a 6.5" long excursion passive radiator and titanium coated dome tweeter. The EVID FM6.2 loudspeaker utilizes a crossover network, centered at 3,300 Hz, that provides 16-dB-per-octave tweeter protection outside of its operating range. In addition the FM6.2 features a comprehensive protection circuit to shield the woofer and tweeter drivers from excessive power levels.

The FM6.2 utilizes a transformer that offers a selection of 7.5, 15, 30, or 60 watts delivered to the loudspeaker system using either 70-V or 100-V lines. The wattage is selected via a convenient switch on the front baffle. The unit can also be operated as an 8-ohm speaker via the same front panel selector switch.

The perforated grille is finished in semi-gloss white powder-coated enamel. The baffle and bezel is constructed from heat resistant ABS. The rear enclosure is constructed from zinc-plated, steel. The rear enclosure provides an optimum internal volume, ensuring extended low-frequency performance. It is constructed from heavy-gauge, rugged steel. The steel rear enclosure was optimized using FEA to virtually eliminate panel resonance. The entire enclosure is less than 4" deep providing an easy installation into nearly any tight wall or ceiling space. A rear cover, with provisions for a junction box fitting, provides access to a 4-pin terminal block that allows direct connection to the speaker and provides pass through to additional speakers. FM6.2 loudspeakers provide wide dispersion, high-efficiency, high-maximum output, ease of installation, and wide-range reproduction of music or voice.

# Packing List


| EVID™ FM Series Packing List |          |  |
|------------------------------|----------|--|
| Figure                       | Quantity | Part                                   |
| A                            | 2        | Speaker System                         |
| B                            | 2        | Grille                                 |
| C                            | 1        | Owner's Manual                         |
| D                            | 2        | Terminal Connector (Factory Installed) |
| E                            | 1        | Service Center Card                    |
| F                            | 1        | Cutout Template                        |
| G                            | 2        | Paint Shield                           |

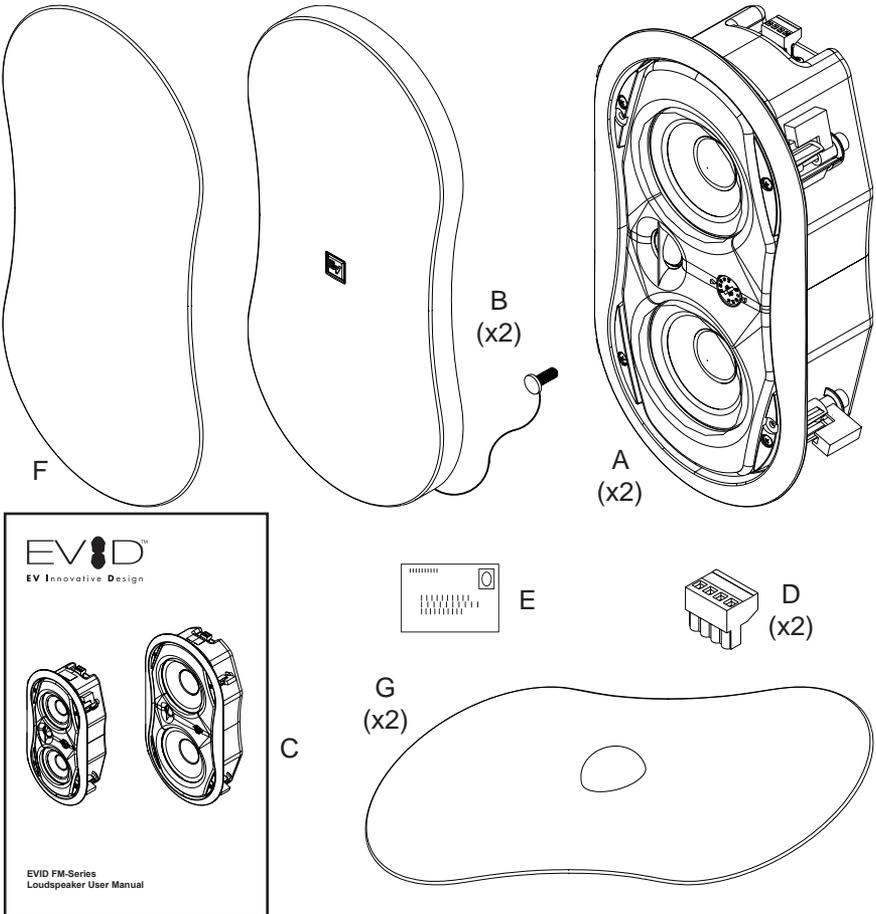


**Figure 1:**  
Packing List

# Product Feature Identification

| EVID™ FM Series Systems (Sold in Pairs) |               |   |
|---|---------------|---|
| Model                                   | Part No.      | Description                                 |
| FM4.2                                   | PRD000120-000 | Dual 4" Flush-Mounted Two-Way Loudspeaker   |
| FM6.2                                   | PRD000121-000 | Dual 6.5" Flush-Mounted Two-Way Loudspeaker |

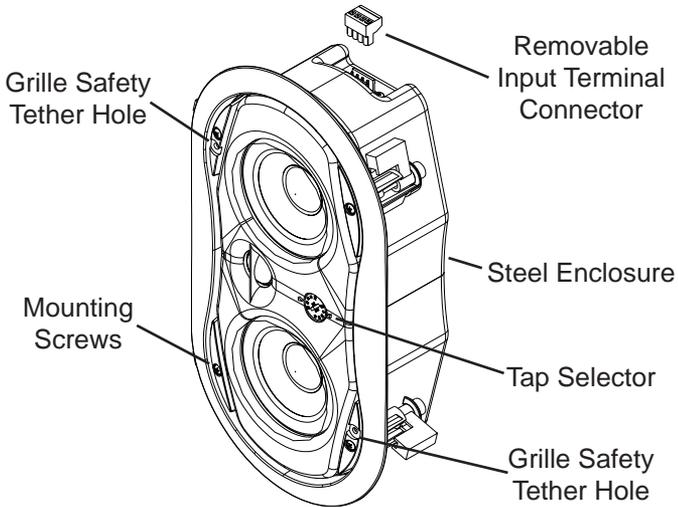

**Figure 2:**  
*Front of Speaker*

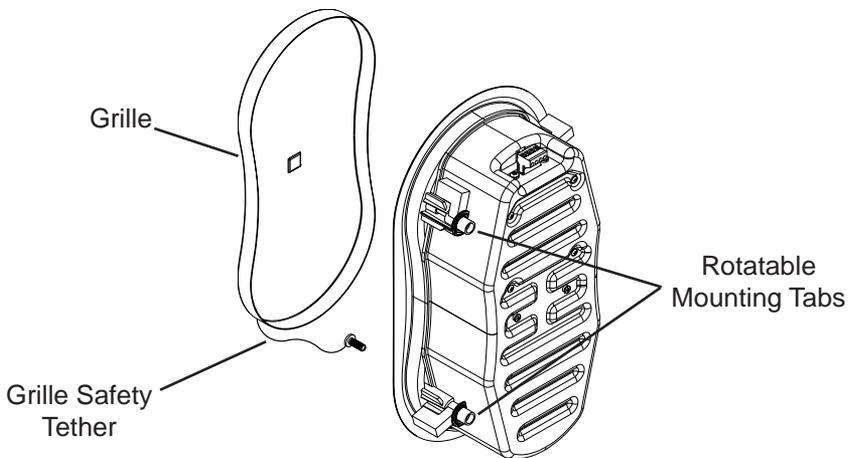

**Figure 3:**  
*Rear of Speaker*

# Installation and Wiring

## INSTALLATION NOTE: CONTROLLING VIBRATION


Because of their high performance, EVID FM Series loudspeakers can generate substantial vibration, which can cause buzzing in loose sections of the wall, depending on the character of the wall and related components.

### Step 1: Cut the Hole


For sheetrock walls, cut out the hole by tracing the cardboard template (See Figure 4). If the wire has been pre-installed, pull the wiring through the cutout hole.

### Step 2: Attach Wiring to the Terminal Connector

Insert the bare end of wire into the appropriate connector terminals as described below and screw down the hold-down screw until tight, using a small screwdriver.

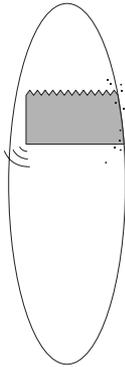

**Figure 4:**  
*Cutting Hole*

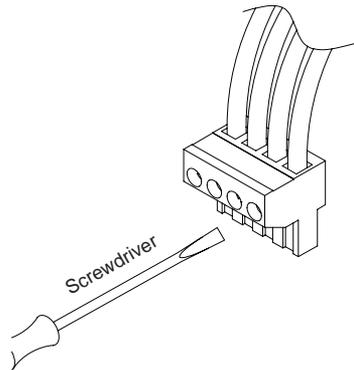

**Figure 5:**  
*Tighten with Screwdriver*

## INSTALLATION NOTE: CONNECTOR WIRING GUIDELINES


The input connector's 4 terminals are numbered and marked on the connector. Pins 1 and 2 are positive (+); pins 3 and 4 are negative (-). (Pin 1 is connected to Pin 2 and Pin 3 is connected to Pin 4 inside the speaker.) Pins 1 and 4 are used as daisy-chain connections to other loudspeakers.

# Installation and Wiring

## INSTALLATION NOTE: CONNECTOR WIRING GUIDELINES

Two possible layouts for wiring a group of speakers are described below.


1. Wiring in parallel. Connect the wire pair of the subsequent speaker to pins 2 and 3. When one input connector is removed, subsequent speakers will remain connected. See Figure 6.
2. Daisy-chaining. Connect the wire pair of the subsequent speaker to pins 1 and 4. When one input connector is removed, subsequent speakers will also be disconnected. See Figure 7.

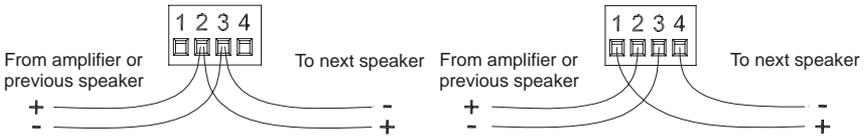

**Figure 6:**  
*Parallel Wiring*

**Figure 7:**  
*Daisy-Chain Wiring*

When all wiring has been completed to the connector, plug the connector into the socket in the speaker's terminal cup. See Figure 8. Tighten all screws to eliminate vibration.

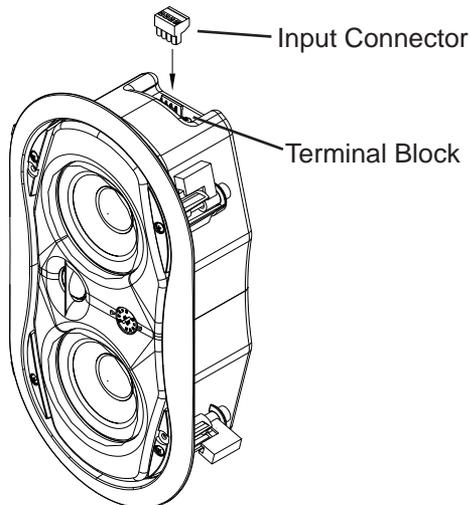


**Figure 8:**  
*Plug Connector Into Socket*


# Installation and Wiring

## Step 3: Mount the Speaker Into the Wall

Push the speaker into the hole until the front baffle rim is flush with the wall. Tighten the mounting tabs by turning the screw clockwise until the speaker is secure. Please note that the first clockwise quarterturn rotates the attachment tabs outward. The remaining turns tighten the tabs down onto the back of the wall (see Figure 10).

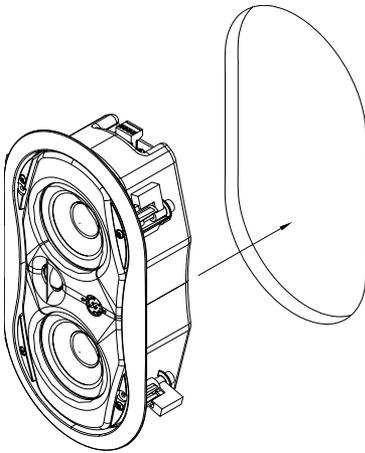

**Figure 9:**  
*Mount Speaker Into Wall*

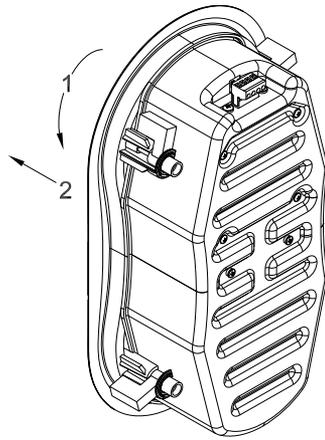


**Figure 10:**  
*Tighten Mounting Tabs*

### INSTALLATION NOTE: MOUNTING TABS

For each attachment screw, first turn one halfturn counterclockwise to release the mounting tab from its guide.

## Step 4: Adjust Tap Selector

The tap selector switch is located on the front baffle. Adjust the speaker to the appropriate tap setting before installing the grille. In some 70V/100V constant voltage installations it is advisable to leave the grilles off if final speaker audio level balance adjustments are to be made later. After the levels are adjusted the grilles can then be installed.

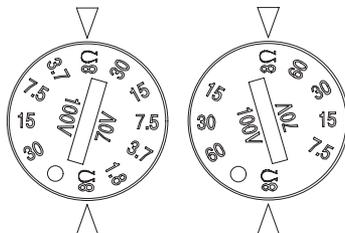

**Figure 11:**  
*Adjust Tap Selector (Left: FM4.2, Right: FM6.2)*

# Installation and Wiring

## EVID™ FM4.2

In addition to the 8-ohm setting, the power taps are 30 W, 15 W, 7.5 W, and 3.75 W at both 70.7V and 100V, with a 1.75 W tap for 70.7V only.


## EVID™ FM6.2

In addition to the 8-ohm setting, the power taps are 60 W, 30 W, and 15 W at both 70.7V and 100V, with a 7.5 W tap for 70.7V only.

## Step 5: Attach the Grille

### INSTALLATION NOTE: GRILLE SAFETY FEATURE

EVID grilles features a unique safety tether to prevent the grille from falling if the grille is removed or comes loose after installation. First, install the grille's safety tether by pushing the grille fastener into the hole in the front of the baffle (see Figure 12). Second, press the grille into place until the front of the grille is flush with the rim of the baffle. Make sure the grille is securely seated to prevent it from vibrating loose. If you need to re-remove the grille, the easiest way is to insert two bent paper clips or other pointed objects into holes in the grille, then apply slow even pressure to pull down on the grille until that section of the grille comes out slightly. Continue the same procedure around the perimeter of the grille, loosening a portion at a time until the grille is removed.

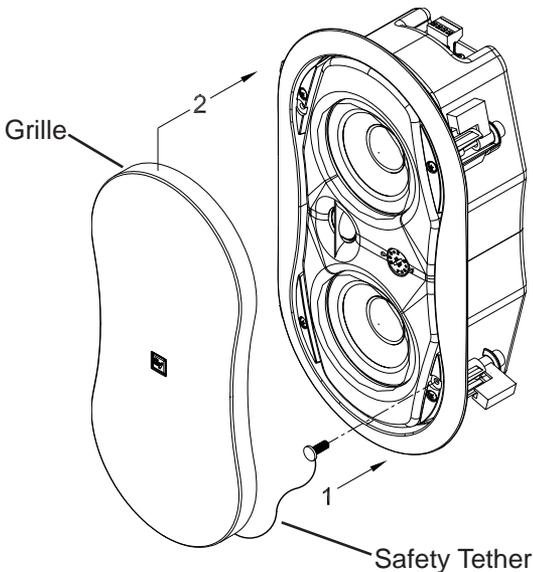


**Figure 12:**  
*Attach the Grille*

## Appendix A - Painting the Speaker

If the speaker is installed in an area where the interior design requires a color match, these speakers are simple to paint. The speakers can accommodate almost any type of latex or oil-based paint. The bezel/rim can be painted before installation or after mounting into the wall.

### Painting Process

Clean the rim and grille with mineral spirits or other light solvent. Do not use harsh solvents such as gasoline, kerosene, acetone, or other chemicals. If you use these cleaners you may permanently damage the enclosure. Also, don't use abrasives products such as sandpaper or steel wool. Either by rolling or spraying, apply two or more thin coats of paint. If you are spraying, hold the spray can at the angles shown in Figure 13. If you are painting the grille also, you must first remove the internal grille cloth. Spray painting is strongly recommended. If the grille is rolled or brush painted, the grille may become clogged with paint and the sound quality will suffer. After the paint has dried, replace the internal grille cloth. If you wish to paint the speaker along with the wall after installation, insert a plastic or cardboard paint shield into the front of the speaker to mask the drivers and internal baffle, paint the speaker, then remove the shield.

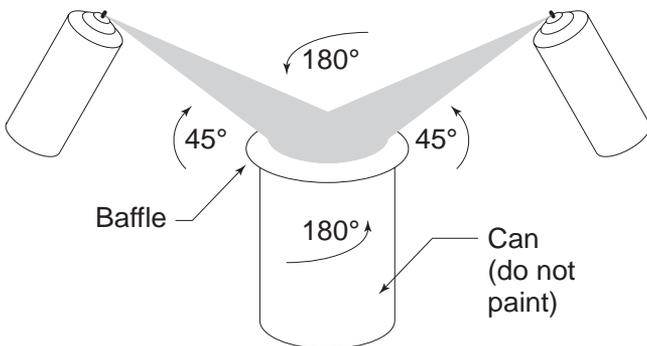

**Figure 13:**  
*Spray-Painting Angles*  
EVID™ FM Series Installation and Operation Manual

## Appendix B - Troubleshooting Table

| Problem  | Possible Causes                                  | Action  |
|--|--|---|
| <b>No Output</b>   | Amplifier  | Make sure the amplifier channel is being fed an input signal (preferably via a "signal input" indicator on the amp).  |
|  |  | Check that the amplifier channel's volume is turned up.   |
|  |  | Connect the speaker and cable, which had no output to another amplifier channel, making sure an input signal is fed to the new amp channel. If you then get output, the problem was the amplifier channel. If not, then the problem may be in the cable or speaker.   |
|  | Speaker Cable(s)                                 | Replace the cable(s) connecting the loud-speaker system and amplifier.  |
| <b>Questionable or Intermittent Output such as Crackling</b>   | Faulty Connection                                | Check all cabling for proper connector contact. A bad connection can result in intermittent contact or dramatically increased resistance, which in turn can cause reduced output or noises unrelated to the signal.   |
|  | Improper Power Tap Setting                       | Check the power tap setting under the speaker grille to ensure the setting is appropriate for the installation and amplifier chosen.  |
| <b>Constant Noise such as Buzzing, Hissing, or Humming</b>   | A Faulty Electronic Device in the Signal Chain   | Since loudspeakers cannot generate these sounds by themselves, you may have a faulty electronic device in the signal chain.   |
|  | Poor System Grounding                            | Check and correct the system grounding, as required.  |
| <b>Poor Low-Frequency Output</b>   | Out-of-Polarity Hookup Between Multiple Speakers | When two speakers are hooked up out of polarity (out of phase), the low frequencies cancel each other out. Try reversing the polarity of one of the speakers either by turning around a dual-banana plug at the amplifier or by reversing the tip/sleeve leads on the jack. Whichever condition results in greater low-frequency output is the in-polarity condition. |
| If none of the suggestions above solves your problem, contact your nearest EV© service center or EV distributor. |  |   |

## Appendix C - Uniform Limited Warranty

Electro-Voice® speakers and speaker systems are guaranteed against malfunction due to defects in materials or workmanship for a period of five (5) years from the date of original purchase. The Limited Warranty does not apply to burned voice coils or malfunctions such as cone and/or coil damage resulting from improperly mounted or installed enclosures. If a covered malfunction occurs during the warranty period, the product will be repaired or replaced (at our discretion) without charge. The product will be returned to the customer prepaid. Additional details are included in the Uniform Limited Warranty statement. Exclusions and Limitations

The Limited Warranty does not apply to: (a) exterior finish or appearance; (b) certain specific items described in the individual product line statements below, or in the individual product sheet or owner's manual; (c) malfunction resulting from use or operation of the product other than as specified in the product data sheet or owner's manual; (d) malfunction resulting from misuse or abuse of the product; or (e) malfunction occurring at any time after repairs have been made to the product by anyone other than Electro-Voice® Service or any of its authorized representatives.

### Obtaining Warranty Service

To obtain warranty service, a customer must deliver the product, prepaid, to Electro-Voice® Service or to any of its authorized service representatives, together with proof of purchase of the product in the form of a bill of sale or receipted invoice. A list of authorized service representatives is available from Electro-Voice® Service at 12000 Portland Avenue, Burnsville, MN 55337. Ph: (877) 863-4166. Incidental and Consequential Damages Excluded Product repair or replacement and return to the customer are the only remedies provided to the customer. Electro-Voice® shall not be liable for any incidental or consequential damages including, without limitation, injury to persons or property or loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### Other Rights

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Maintenance

No maintenance is required when installed in accordance with installation and wiring guidelines described in this manual.

# Appendix D - Specifications

## EVID FM4.2

## EVID FM6.2

|                                     |  |                                     |  |
|-------------------------------------|--|-------------------------------------|--|
| Freq. Response (-3 dB):             | 70 Hz - 20 kHz   | Freq. Response (-3 dB):             | 60 Hz - 20 kHz   |
| Freq. Range (-10 dB):               | 52 Hz - 20 kHz   | Freq. Range (-10 dB):               | 52 Hz - 20 kHz   |
| Axial Sensitivity:                  | 87 dB (SPL 1W/1m)  | Axial Sensitivity:                  | 90 dB (SPL 1W/1m)  |
| Impedance:                          | 8 ohms nominal<br>(transformer bypass)   | Impedance:                          | 8 ohms nominal<br>(transformer bypass)   |
| Crossover Frequency:                | 3.6 kHz  | Crossover Frequency:                | 3.3 kHz  |
| Rec. Highpass Frequency:            | 70 Hz  | Rec. Highpass Frequency:            | 60 Hz  |
| HF Transducer:                      | 1 in. (25.4 mm)  | HF Transducer:                      | 1 in. (25.4 mm)  |
| LF Transducer:<br>Passive Radiator: | 4 in. (101.6 mm)<br>4 in. (101.6 mm)   | LF Transducer:<br>Passive Radiator: | 6.5 in. (165.1 mm)<br>6.5 in. (165.1 mm)   |
| Transformer Taps:                   | 70V: 1.75, 3.75, 7.5,<br>15, or 30W<br>100V: 3.75, 7.5, 15,<br>or 30W<br>Bypass: 8 ohms<br>nominal | Transformer Taps:                   | 70V: 7.5, 15, 30, or<br>60W<br>100V: 15, 30, or 60W<br>Bypass: 8 ohms<br>nominal |
| Connectors:                         | 4 pin phoenix style<br>terminals   | Connectors:                         | 4 pin phoenix style<br>terminals   |
| Enclosure Material:                 | Baffle: UL 94V-O rated<br>ABS<br>Backcan: Zinc plated<br>steel                                     | Enclosure Material:                 | Baffle: UL 94V-O rated<br>ABS<br>Backcan: Zinc plated<br>steel                   |
| Grille:                             | Perforated powder-<br>coated steel with safety<br>tether   | Grille:                             | Perforated powder-<br>coated steel with safety<br>tether                         |
| Mounting System:                    | Integrated toggle<br>anchors   | Mounting System:                    | Integrated toggle<br>anchors   |
| Support Hardware:                   | Cutout template, Paint<br>Shield   | Support Hardware:                   | Cutout template, Paint<br>shield   |
| Dimensions:                         | 349.9mm x 188.3mm x<br>96.5mm<br>(13.77" x 7.42" x 3.80")  | Dimensions:                         | 465.4mm x 256.4mm x<br>100.3mm<br>(18.32" x 10.09" x<br>3.95")                   |
| Net Weight (Each):                  | 2.9 kg (6.5 lb)  | Net Weight (Each):                  | 5.8 kg (12.7 lb)   |
| Shipping Weight (Pair):             | 6.8 kg (15.0 lb)   | Shipping Weight (Pair):             | 12.9 kg (28.4 lb)  |

All Specifications based on Half-Space  
Environment as flush-mounted.

All Specifications based on Half-Space  
Environment as flush-mounted.

---

# Electro-Voice®

12000 Portland Avenue South, Burnsville, MN 55337  
Phone: 952/884-4051, Fax: 952/884-0043

[www.electrovoice.com](http://www.electrovoice.com)

© Bosch Communications Systems 10/2007  
**Part Number LIT000163 Rev 2**

U.S.A. and Canada only. For customer orders,  
contact Customer Service at:

**800/392-3497 Fax: 800/955-6831**

Europe, Africa, and Middle East only. For customer orders,  
contact Customer Service at:

**+ 49 9421-706 0 Fax: + 49 9421-706 265**

Other International locations. For customer orders,  
contact Customer Service at:

**+ 1 952 884-4051 Fax: + 1 952 887-9212**

For warranty repair or service information,  
contact the Service Repair department at:

**800/685-2606**

For technical assistance, contact Technical Support at:

**866/78AUDIO**

Specifications subject to change without notice.