



Sennheiser Documentation App



or online at
www.sennheiser.com/download
 evolution wired_



e 825 S

Quick Guide
 Kurzanleitung
 Guide rapide
 Guida rapida
 Guía de inicio rápido
 Guia rápido
 Beknopte handleiding
 Krótka instrukcja obsługi
 Snabbguide

Kvikstartguide
 Pikaohje
 Γρήγορος οδηγός
 Kısa Kılavuz
 Краткая инструкция
 快速指南
 快速使用指南
 クイックガイド
 퀵 가이드


Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Publ. 06/19, 581328/A02

SENNHEISER

Setup

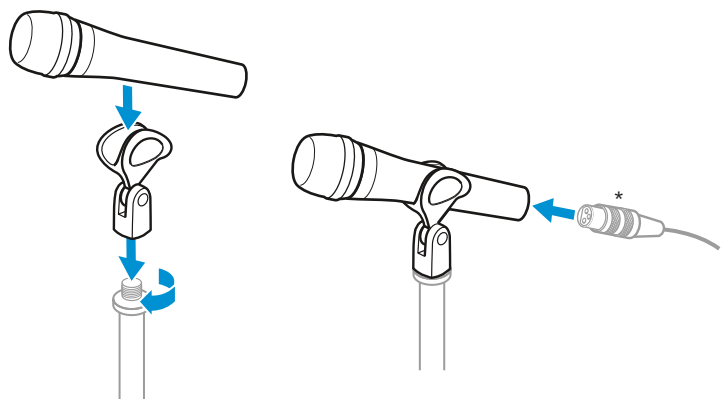




*XLR-3 cable not included

In the box




Overview


- 1 Sound inlet basket
- 2 XLR-3 connector
- 3 On/off switch
- 4 Screw

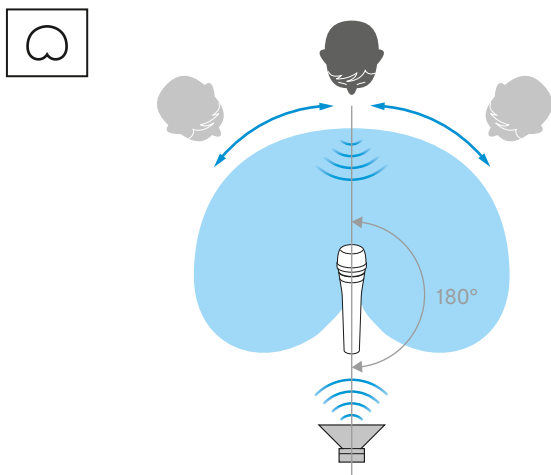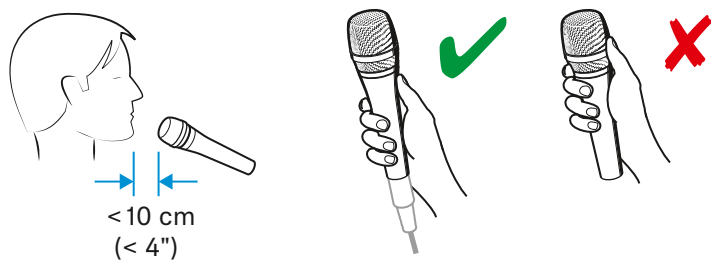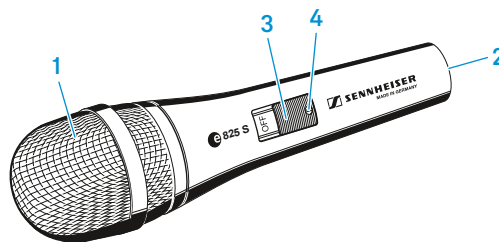

ON/OFF






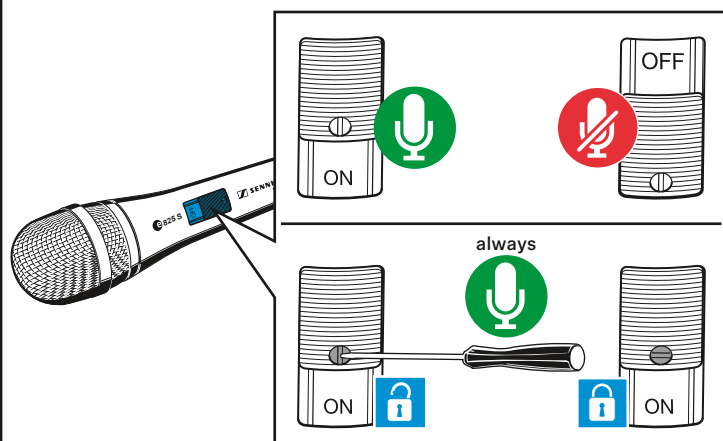


Accessory

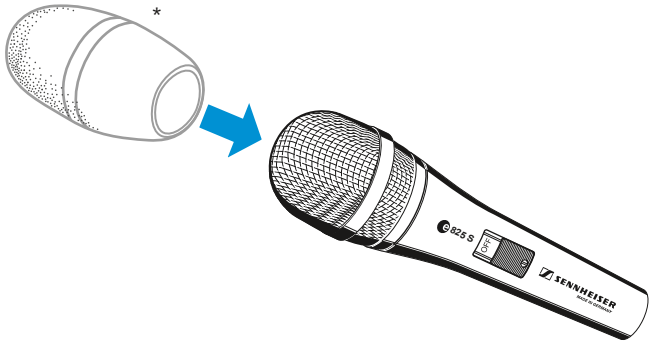

*MZW 4032 not included


Cleaning

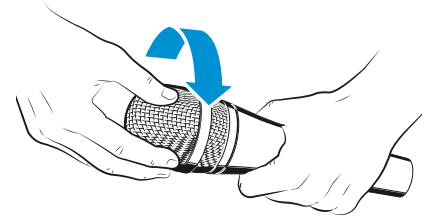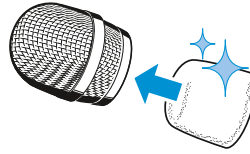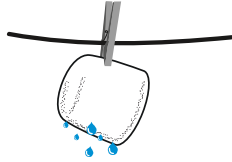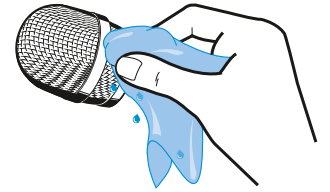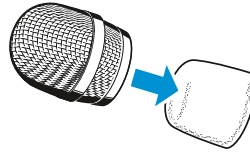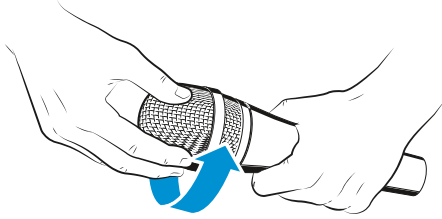

Specifications

Transducer principle	dynamic
Frequency response	80 - 15,000 Hz
Pick-up pattern	cardioid
Sensitivity (free field, at 1 kHz)	1.5 mV/Pa
Nominal impedance (at 1 kHz)	350 Ω
Min. terminating impedance	1 kΩ
Connector	XLR-3
Temperature range	0 °C to +40 °C
Dimensions	∅ 48 x 180 mm
Weight	330 g

Connector assignment

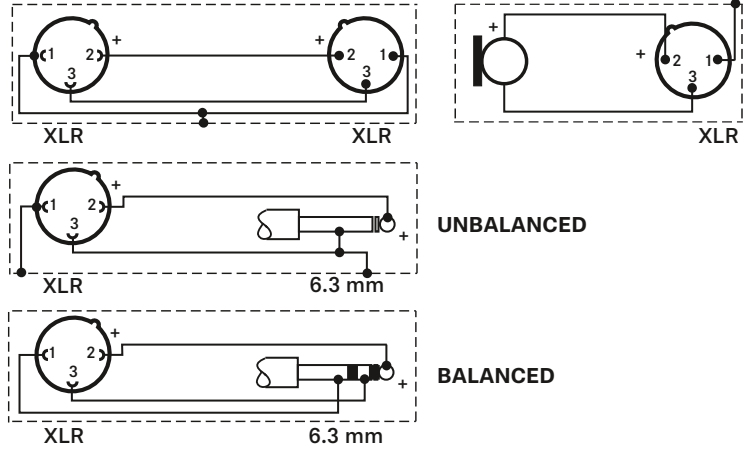

Polar pattern and frequency response

