

# FreeSpeak Edge Base Station

FreeSpeak Digital Wireless Solutions

Linking  
People  
Together



FreeSpeak Edge Base Station

## Key Features and Benefits

### Capacity

- Supports up to 6 IPT or FSE transceivers and up to 10 E1 transceivers (1.9 or 2.4GHz)
- Supports up to 100 channels

### Base Station

- Standard 1 rack unit (RU) device
- High quality 12kHz audio to FS Edge beltpacks
- 2 large full-color touch screen TFT displays
- 4 rotary encoders for gain and menu operation
- Headset connection
- Stage Announce and Prog. Audio cable included
- Functions as PTP Leader Clock

### Connectivity

- Wireless 5GHz Edge transceivers and beltpacks
- Wireless 1.9GHz and 2.4GHz FSII splitters, transceivers and beltpacks
- Dante enabled audio devices
- AES67 devices via Dante controller
- 4-wire ports (8 ports RJ45)
- 2-Wire ports (4 XLR-3F)
- GPIO (D-type 9 pin)
- LAN - 2 x RJ45, 2 x SFP

### Configuration

- CCM browser-based configuration tool
- Direct management with encoders and display

The FreeSpeak Edge<sup>®</sup> Base Station brings IP connectivity to the FreeSpeak<sup>™</sup> family products with support for both FreeSpeak II<sup>®</sup> and FreeSpeak Edge systems, as well as interconnectivity with third-party Dante devices. The system provides support for the 5 GHz, 2.4 GHz and 1.9 GHz bands to deliver a range of wireless connectivity.

## Description

The FreeSpeak Edge Base Station is a standalone 1RU device that provides extensive connectivity to a wide range of Clear-Com endpoints along with third-party Dante devices. Built primarily to deploy 5 GHz transceivers and beltpacks, the base station also provides support to FreeSpeak II splitters, 1.9 GHz E1 and IP transceivers/beltpacks\*, and 2.4 GHz E1 transceivers/beltpacks. The base supports up to 6 IPT or FreeSpeak Edge (FSE) transceivers, up to 10 E1 transceivers (1.9 or 2.4GHz), and up to 100 channels. The base station also provides multiple software-defined interoperable IP ports that support both Dante and third-party devices. This third-party connection capability gives the base station a wide powerful breadth of device coverage for professional intercom users.

## Operation

The FreeSpeak Edge Base Station can be managed directly by using four rotary encoders which can be used to quickly scroll through menus and shift pages. Beltpacks can be registered by USB ports and transceivers can be added from the front panel. With two large high resolution TFT color touch screens, configuration is simple and straight forward. The front panel of the base station is fitted with a connection point for headset which allows the base to serve users as a desktop communication device.

## Configuration

The system is configured through Core Configuration Manager (CCM<sup>™</sup>) software. The CCM for the base station is an integrated, browser-based software utility supported on the latest versions of all major web browsers for enabling rapid setup, configuration and monitoring. The intuitive user interface has a consistent design for a quick and simple means of configuring the base station with role-based beltpacks, including save and restore, text messaging, individual beltpack and group call signal and remote mic kill.

\*Note: A 1.9 GHz beltpack cannot roam between an E1 1.9 GHz transceiver and an IP 1.9 GHz transceiver. However, beltpacks on each system can communicate through the base station.

# FreeSpeak Edge Base Station

FreeSpeak Digital Wireless Solutions

## Technical Specifications

### Capacity

**Beltpacks per Base Station:** 16 BPs (FSII or FSE)  
**Transceivers/Antennas Supported by Base:** 6 x IPT or FSE TCVR and 10 x E1 TCVRs (1.9 or 2.4GHz)

### Headset Microphone Input

**Input Type:** Dynamic /Electret - Selectable  
**Frequency Response: Headset Mic - Partyline:** 200Hz – 12kHz + 3dBu  
**Frequency Response: Headset Mic - Line Out:** 200Hz – 20kHz + 3dBu  
**Mic Limiter Threshold:** -50dBu ±3dB  
**Mic Limiter Range:** ≥ 20dB  
**Max Input Level:** -25dBu  
**Input Level:** -60dBu nominal; -25dBu MAX  
**Headset Mic Voltage:** 5V (Electret selectable)

### Headset Output

**Load Impedance:** > 32Ω  
**Output Impedance:** 33Ω  
**Max Output Level before Distortion:** > 13dBu  
**Total Harmonic Distortion (THD):** < 0.1% THD at 1kHz  
**Headset Mic - Partyline:** -78dBu (Clear-Com mode)  
**Headset Mic - Line Out:** -60dBu  
**Frequency Response: Partyline - Headset Out:** 200Hz – 10kHz + 3dBu

### Audio/Radio

**4-wire I/O:** Output Impedance >10kΩ, Input Impedance 200Ω + 10%, transformer isolated balanced input and output.  
**4-wire Operating Levels:** 0dBu Nominal, 18dBu headroom  
**2-wire I/O:** Selectable RTS or Clear-Com mode, Software controlled auto-null, null depth >60dB at 1kHz  
**2-wire Operating Levels:** -18dBu nominal (Clear-Com Mode), -12dBu nominal (RTS Mode), Headroom 18dB

**Frequency Response Base-to-Beltpack:**  
**Freespeak Edge Beltpack:** 200Hz – 12kHz,  
**Freespeak II Beltpack:** 200Hz – 7.1kHz

### Partyline I/O

**2W Power On/Off:** A/B, C/D paired- software controlled  
**2W Output Voltage:** 25 – 28V DC, 560 mA per pair (A/B or C/D)  
**2W Impedance:** >10kΩ  
**2W Frequency Response:** 200 to 12kHz. ±3dB  
**2W Total Harmonic Distortion (THD):** < 0.1% THD at 1 kHz

### Relay Contacts or GPIO

**Connector Type:** 2 x DB9  
**Relay Contact Type:** SPDT  
**Relay Quantity:** 4  
**Relay Contact Voltage Rating:** 30V DC  
**Relay Contact Current Rating:** 1A  
**Input Type:** Opto-Isolated  
**Input Quantity:** 2  
**Input Voltage Range:** 4 - 30 volts DC or AC  
**Input Current:** ≥1.2mA required

### Connectors

**4-wire I/O:** (8) RJ45  
**2-wire I/O:** (4) XLR-3F  
**Program Input:**  
XLR-3M, provided using cable assembly CAB-RJ45-PGM-SA  
**Stage Announce Output:**  
XLR-3F, provided using cable assembly CAB-RJ45-PGM-SA

**Headset:** 4-pin XLR-M, auto headset detect  
**USB:** USB type A Receptacle  
**Number of E1 antenna ports:** 2 x RJ45, 2 x Fiber (2 active at any time)  
**DECT Radio frequency sync:**  
Rear RJ45 input and output RF sync connectors

### Indicators and Function

**Displays:** (2) 480 x 128 color TFT LED Touch Screen displays  
**Front Panel Indicators & Function:**  
(2) Power Supply Status LEDs  
(1) Status LED (Edge)  
(1) Three Color Level Control LED Array

### Power:

**AC Mains input:** 100-240V AC, 50-60Hz, 160W Max, IEC60320 C14 inlet.  
**DC Low Voltage Input:** 12V DC +/- 5%, 12A

### External AC/DC Power Supply (453G020-1 Supplied):

**Input:** 100-240V AC, 50-60Hz, 2.2A Max, IEC60320 C14 inlet.  
**Output:** 12V DC +/- 5%, 12.5A

### Environmental

**Operating:** 32° to 113°F (0° to 45°C)  
**Storage:** 86° to 158°F (30° to 70°C)  
**Humidity:** 20-90% Non-Condensing

### Dimensions

1RU  
19 x 1.72 x 13.929in (WxHxL)  
(43.6 x 482.6 x 353.8mm)

**Depth:** 260mm

### Weight

7.25lbs (3.29kg)

## Network Specifications

### AoIP Interfaces

**Protocols:**

RTSP/SAP

AES67

Dante

**Audio Sampling:** 24 bit Linear 48KHz

**IP Addressing:** Static, DHCP

**Network Compatibility:** Layer 2 & 3 LAN only

**Quality of Service:** DiffServ RFC2474

**IGMP:** On (AoIP)

**Multicast:** On (AoIP)

**Network Timing:** PTPv2 (AoIP) / PTP v1 (Dante)

**Minimum Network Bandwidth Required**

**Perduplex Connection:**

1 x FS II IPT bandwidth usage: ~7 Mbps.

1 x FS Edge IPT: ~ 9.6 Mbps

### Network Protocols

Ethernet IPv4 Unicast Audio and Control

mDNS–Multicast Device Discovery

### Network Ports

**Unicast:**

Port 80 TCP–Web Interface, System Management, Expansion

Port 443 for HTTPS

Port 6001 UDP–AES67 Data

Port 15000 – 15256 UDP – AES67 Audio

**Multicast:**

Port 5353 UDP–mDNS, Names, Discovery, Linking, Expansion, Dante  
(through various ports)

**Network Jitter Tolerance:**

< 1us required for RF Syncing of Transceivers


### Recommended Ethernet Switches

- Managed Ethernet Switch – Layer 3
- 100/1000 Base-T ports for endpoints
- 1000 Base IP Trunks between switches
- QoS Configuration
- Energy Efficient Ethernet bypass option
- IGMP Snooping bypass option

Please refer to the [Clear-Com AoIP Network Recommendations](#) guide for additional switch settings and network characteristics.

# FreeSpeak Edge Base Station

FreeSpeak Digital Wireless Solutions

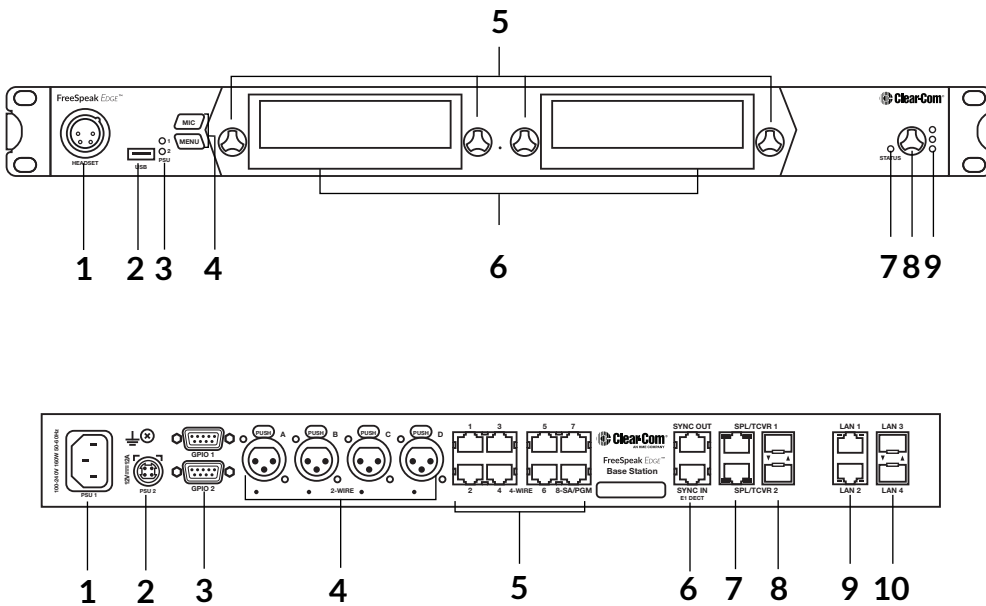

## Legend

### Front

1. XLR headset jack
  - 4-pin XLR-M
2. USB A
3. PSU LED indicators
4. Menu and mic keys
5. Rotary encoders
6. Touchscreen displays
7. Status LED
8. Main volume encoder
9. Main volume level LEDs

### Rear

1. Internal PSU
2. External PSU
3. GPIO
4. 2-wire ports
5. 4-wire ports
6. DECT sync in & out
7. E1 RJ45
8. E1 Fiber SFP
9. LAN ports
10. LAN SFP ports

## Order Codes

### FSE-BASE

#### Includes:

- (1) Four-Wire PGM/SA Breakout Cable (CAB-RJ45-PGM-SA)
- (1) External PSU (PSU-EXT-001)



[www.clearcom.com/  
freespeak-edge-knowledge-center/](http://www.clearcom.com/freespeak-edge-knowledge-center/)



[www.clearcom.com](http://www.clearcom.com)

© Clear-Com and the Clear-Com logo are registered trademarks of HM Electronics, Inc. Copyright © 2021. Clear-Com, LLC. All rights reserved.

**Notice About Specifications** | While Clear-Com makes every attempt to maintain the accuracy of the information contained in its documentation, that information is subject to change without notice. Performance specifications included in this document are design-center specifications and are included for customer guidance and to facilitate system installation. Actual operating performance may vary.

**WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.CA.Gov](http://www.P65Warnings.CA.Gov)